



Enershare Battery Core Series Battery Compatible Inverter List V1.5

Inverter		Stack Quantity		Minimum Firmware Version	
		Power-Core	Energy-Core	Inverter	Battery Core
					BMS
SunGrow	SH 3.0/3.6/4.0/5.0/6.0 RS	2-3	3-6	≥ ARM: SUNSTONE-H_01011.02.30 ≥ MDSP: SUNSTONE-H_03011.02.26	≥ V1.6-1.5
	SH 5.0/ 6.0/8.0/10 RT	2-5	3-8	≥ ARM: SAPPHIRE-H_01011.71.21 ≥ MDSP: SAPPHIRE-H_03011.71.19	
GoodWe	ET (5-10kW)	2-5	4-8	≥ ARM 13	≥ V1.6-1.5
	BT	2-5	4-8	≥ ARM 13	
	EH/BH	2-3	3-6	≥ ARM 07	
	EHB	2-4	3-6	≥ ARM 03	
	Notice: For the inverter which was manufactured before March 6th 2023, if meet the communication issue while installing, please contact the service of Goodwe for help.				
Solis	S6-EH3P(3-20)K-H	2-5	3-8	≥ V02	≥ V1.6-1.5
Deye /Sunsynk	SUN-(5-50)K-SG01HP3-EU	2-5	3-8	≥ 2001-C01B	≥ V1.6-1.5
Solinteg	MHS-3-8K	2-5	3-8		≥ V1.6-1.5
	MHT-4-20K	2-5	3-8		
hoymiles	HYT-(5.0-12.0)HV-EUG1	2-5	3-8	≥ V01.00.06	≥ V1.8-1.5
	HAT-(5.0-10.0)HV-EUG1	2-5	3-8	≥ V01.00.06	
Afore	AF3-20K-TH	2-5	3-8		≥ V1.8-1.5
	AF3-20K-MTH				
Sinexcel	Isuna 5000-20000T	2-5	3-8		≥ V1.8-1.5

Note:

1. Maximum 6 Systems In Parallel Connection. For Parallel Connection, The Below Requirements Must Be Fulfilled:

a) Enershare Power-Core CANNOT Be Parallel Connected With Enershare Energy-Core ; b) Each Of The Parallel Connected System Must Have The Same Stack Quantity.