 
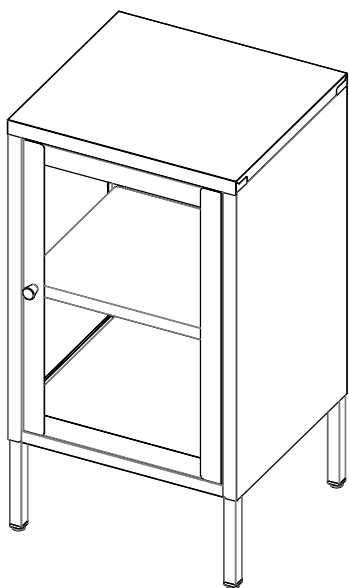 
 
 
 
 




3001047
Dalby Cabinet, white
with glass door



 ① x26 spare:2	 Ø6*30mm ② x1	 Ø12*0.8mm ③ x1 spare:1	 Ø4*6mm ④ x1 spare:1	 Ø9*0.8mm ⑤ x1 spare:1
 ⑥ x1	 ⑦ x4 spare:2	 ⑧ x4	 ⑨ x2	 Ø4*60mm ⑩ x2






(1) - Attach (A) & (H) to (E) as below shown.

  Make sure the holes are nearest to outside otherwise will affect door assembling.

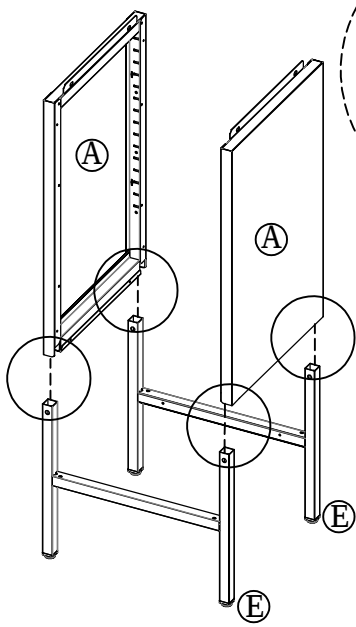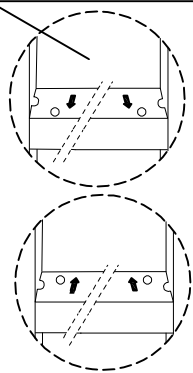


The plastic foot cover face down

     
(2) - Attach (8) to (E) as below shown.

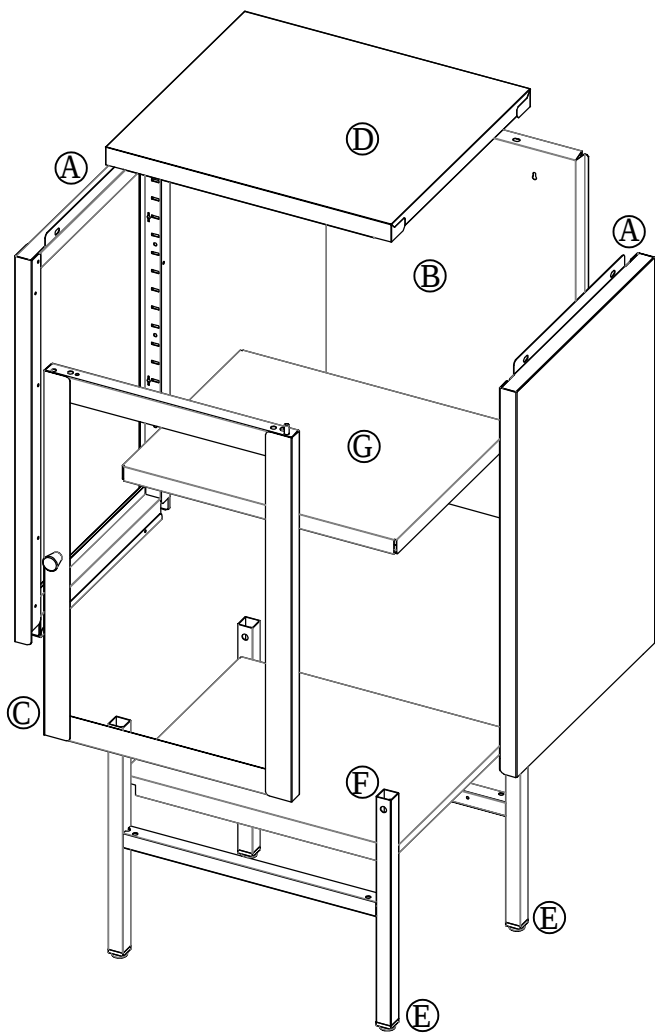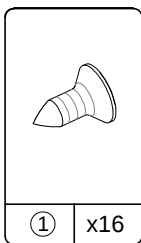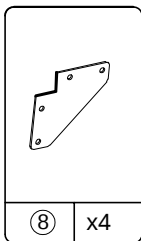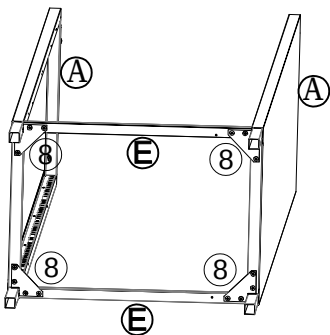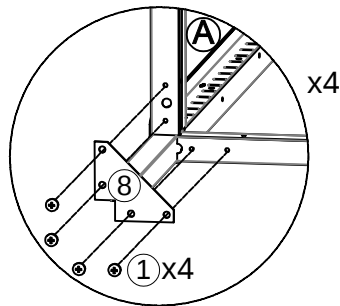


 
(3) - Attach (B) to (A) & (E) as below shown.

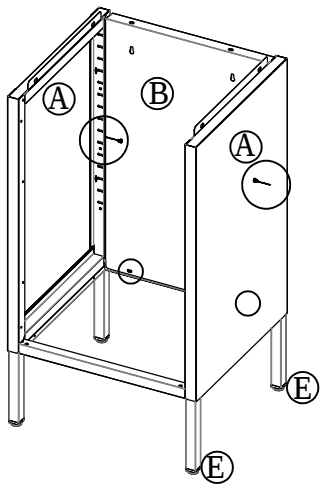


 
(4) - Attach (F) to (A) & (B) & (E) as below shown.

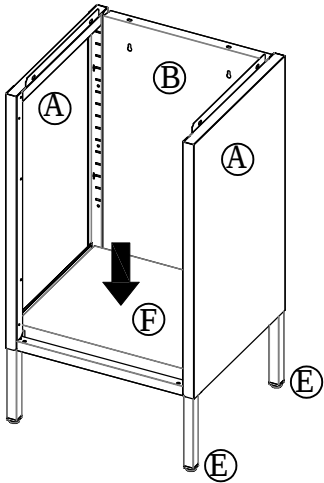



 
 
(5) - Attach (D) to (A) as below shown.

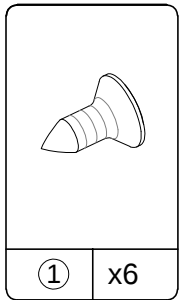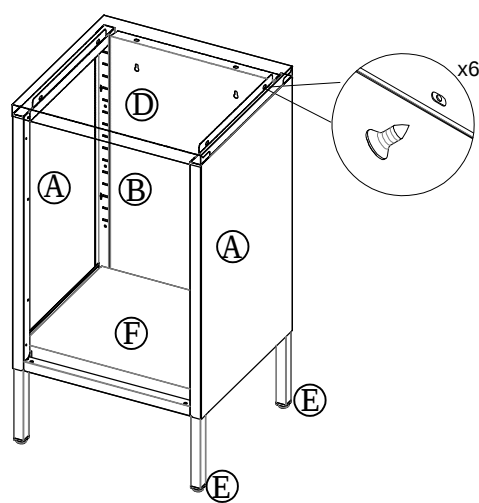


 
 
(6) - Attach (G) &(I)to pre-assembled unit as below shown.

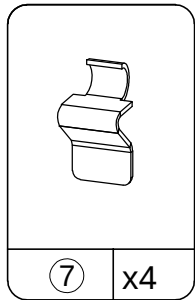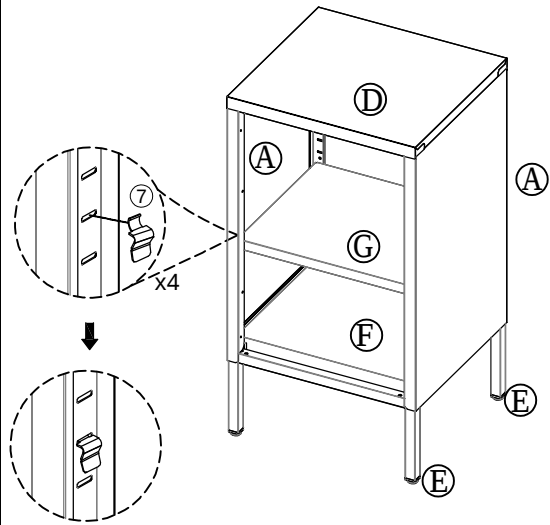

    
(7) - Attach (6) to (C) as below shown.

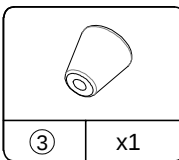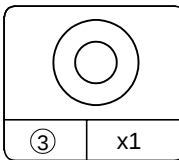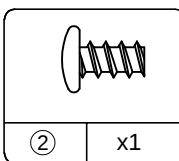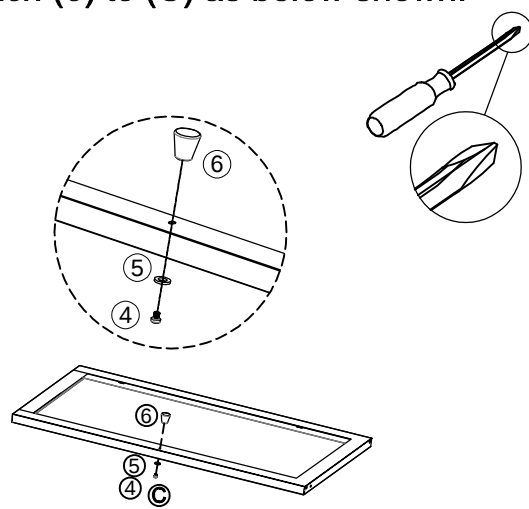

   
(8) -Attach (2) & (3) to pre-assembled unit as below shown.

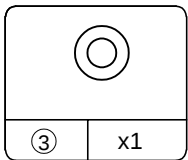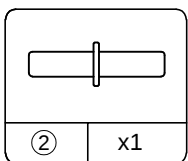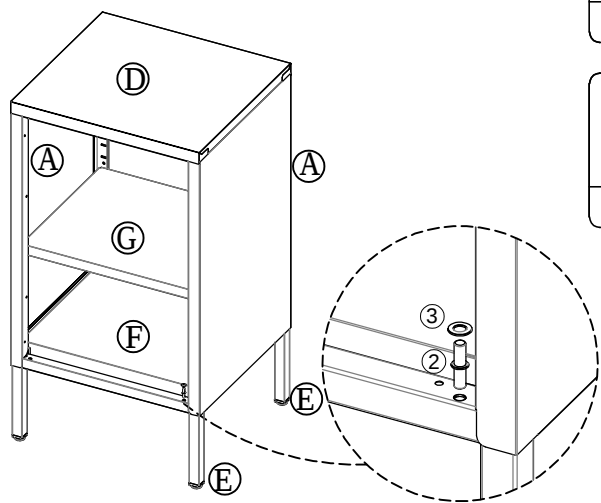

 (9) - Attach (C) to pre-assembled unit as below shown.

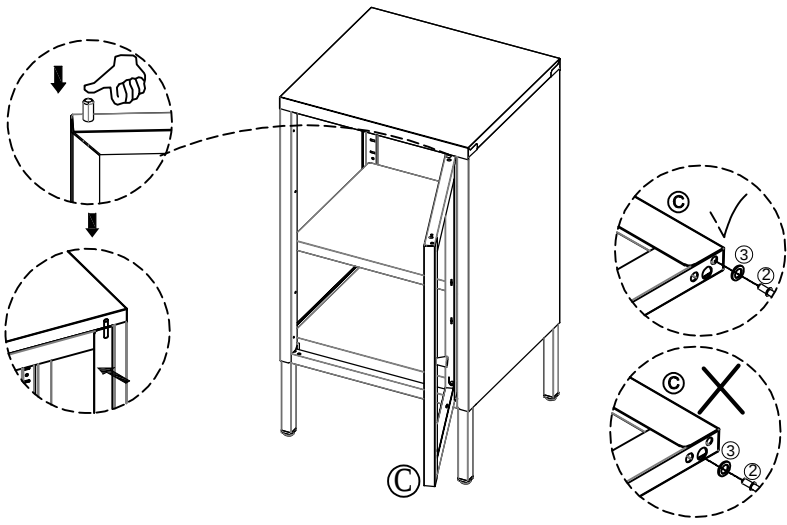

 (10)

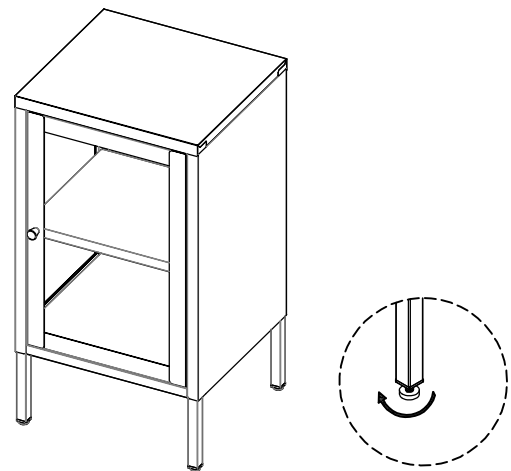

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

(11)

