

# DAILY REFERENCE GUIDE



## THANK YOU FOR PURCHASING A INDESIT PRODUCT

To receive more comprehensive help and support, please register your product at [www.indesit.com/register](http://www.indesit.com/register)



 
You can download the Safety Instructions and the Use and Care Guide by visiting our website [docs.indesit.eu](http://docs.indesit.eu) and following the instructions on the back of this booklet.



**Before using the appliance carefully read the Health and Safety guide.**

## PRODUCT DESCRIPTION

### APPLIANCE

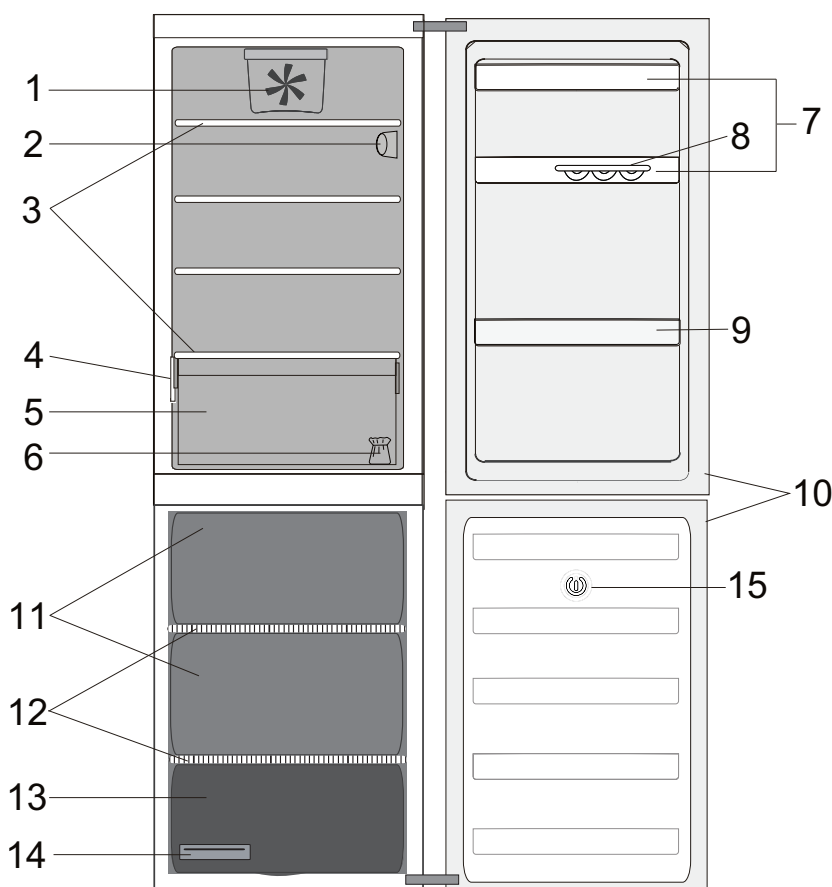


#### Refrigerator compartment

1. Fan
2. Electronic control panel / light unit
3. Shelves
4. Rating plate with commercial name
5. Fresh crisper
6. Door reversibility kit
7. Door trays
8. Egg tray
9. Bottle balcony
10. Door seal

#### Freezer compartment

10. Door seals
11. Freezer drawers
12. Shelves
13. Bottom drawer: coolest zone best for freezing fresh food
14. Ice tray
15. Black Out Sensor

 
### CONTROL PANEL

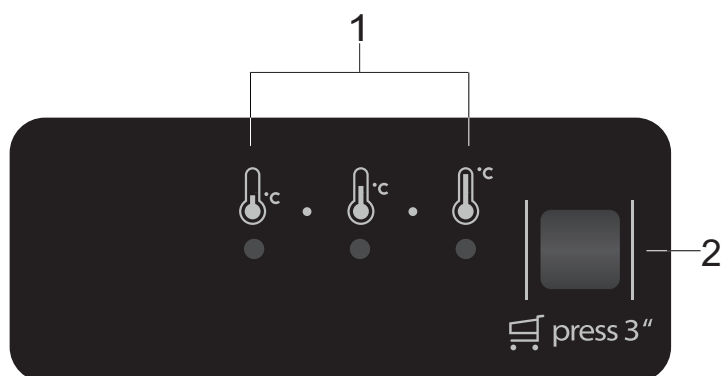


1. Indicator Leds (to display the current temperature setpoint or the Super Cool function)
2. Super Cool button / Temperature button

# ACCESSORIES

 
## EGG TRAY

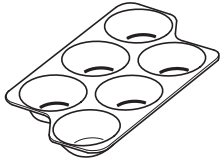

## BOTTLE SEPARATOR (IF PRESENT)

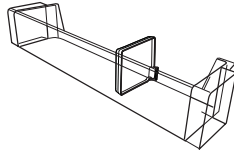 

## ICE TRAY

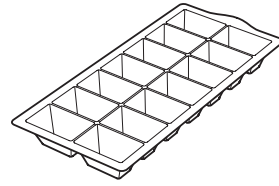 

# FIRST TIME USE

## HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

# DAILY USE

See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

 
## FUNCTIONS

### TEMPERATURE SETTING

**Press the Temperature button** on the control panel to adjust the temperature from the warmest through the lower to the coldest level.

Pressing the Temperature button, the temperature setting will change cyclically. At first plug-in of appliance temperature setpoint is present at medium position (factory setting).

Following table shows temperature setpoints:

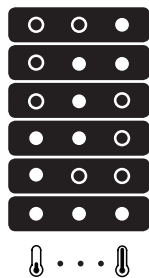

**HIGH TEMP.**  
**MED-HIGH TEMP.**  
**MEDIUM TEMP.**  
**MED-LOW TEMP.**  
**LOW TEMP.**  
**SUPER COOL**



● Led on ○ Led off

Note: Displayed set points correspond to the average temperature throughout the whole refrigerator.

### SUPER COOL

The use of the Super Cool function is recommended to increase the cooling capacity of the refrigerator compartment when placing a very high quantity of food within it. To activate the Super Cool function, **press and hold for 3 seconds the Temperature button** on the control panel till all the 3 LEDs will turn on.

The function is automatically deactivated after 24 hours and return to previous selected set point.



The function can be manually deactivated by pressing and holding for 3 seconds the Temperature button on the control panel.

### REFRIGERATOR LIGHT

The light system inside the refrigerator compartment uses LEDs light, allowing a better lighting as well as a very low energy consumption. If the LED light system does not work, please contact the Service to replace it.

**Important:** The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.

### FAN

The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food. By default, the fan is switched on.

 
To turn off the fan press the button of fan. Please note that when the fan is switched on it will not continuously work. The fan will start/stop working depending on the temperature and/or humidity level inside the fridge. It is therefore absolutely normal if the fan does not move even if the fan is switched on.

## ALARM TABLE





ALARM TYPE	SIGNAL	CAUSE	CURE
Door open alarm	Refrigerator Light blinks	The door has remained open for more than 5 minutes.	Close the door
Door open alarm	Refrigerator Light OFF	The door has remained open for more than 8 minutes.	Close the door
Malfunction	Any temperature indicators blinks	Product malfunction.	Contact the After-sales Service

# BLACK OUT SENSOR

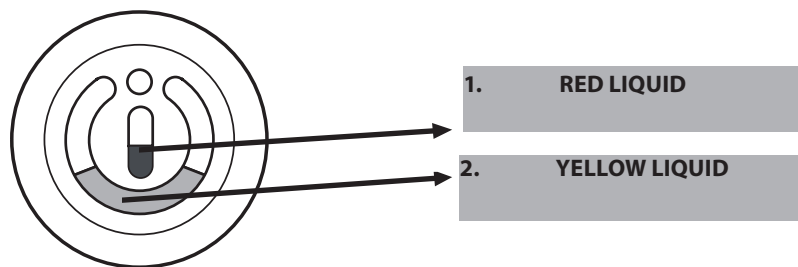Through the two liquids contained, the black out sensor will give you indication in case blackout occurs.



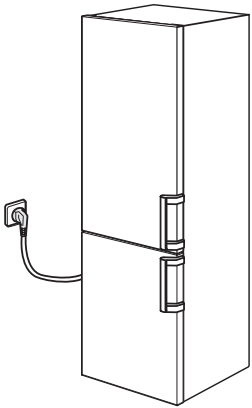





## HOW TO USE (set up required at first use)

 
<p><b>1</b></p> <p><b>Plug the fridge</b></p> 	<p><b>2</b></p> <p><b>The sensor must be in this position:</b></p> 	<p><b>3</b></p> <p><b>Wait 24 hours to make the liquid frozen</b></p> <p><b>+24h</b></p> 	<p><b>4</b></p> <p><b>24 hours later, you must rotate the blackout sensor of 180° clockwise.</b> Now the sensor is ready to work. Check the sensor to inform if blackout is occurred.</p> 
--	--	--	--

## CHECK THE SENSOR TO INFORM IF BLACK OUT IS OCCURRED

If one or both of the liquids are dissolved, this is an indication of increased temperature in the freezer that could be caused by a blackout. Even the partial melting of one of the 2 liquids can show an abnormal increase of the internal temperature.

 <p><b>Default configuration: No problem</b></p> 	 <p><b>YELLOW liquid fault down: food must be eaten in a week</b></p> 	 <p><b>RED + YELLOW liquid fault down: food should be thrown away</b></p> 
---	--	--

# HOW TO STORE FOOD AND BEVERAGE

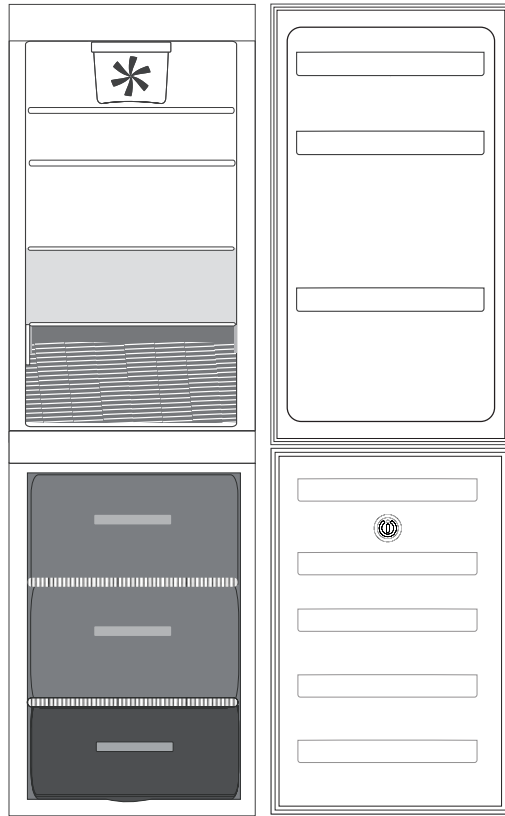

## Legend



### TEMPERATE ZONE

Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



### COOL ZONE

Suggested for storage of cheese, milk, dairy food, delicatessen, yogurt, cold cuts, desserts



### FRUIT & VEGETABLE DRAWER



### NORMAL FREEZER DRAWERS



### FREEZING ZONE DRAWER

(MAX COOL ZONE) Suggested to freeze fresh/cooked food.

Note: The Grey tone of the legend doesn't match with the color of drawers

## FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

## FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (...kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the bottom area.

## PRODUCT FICHE

[www](http://www.docs.indesit.eu) The product fiche with energy data of this appliance can be downloaded from Indesit website [docs.indesit.eu](http://docs.indesit.eu)

## HOW TO OBTAIN THE USE AND CARE GUIDE

 
> [www](http://www.docs.indesit.eu) Download the Use and Care Guide from our website [docs.indesit.eu](http://docs.indesit.eu) (you can use this QR Code), specifying the product's commercial code.

> Alternatively, contact our Client After-sales Service.



## CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

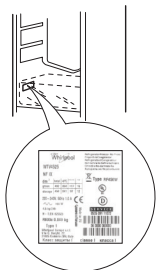

400010897609

Printed in Italy