
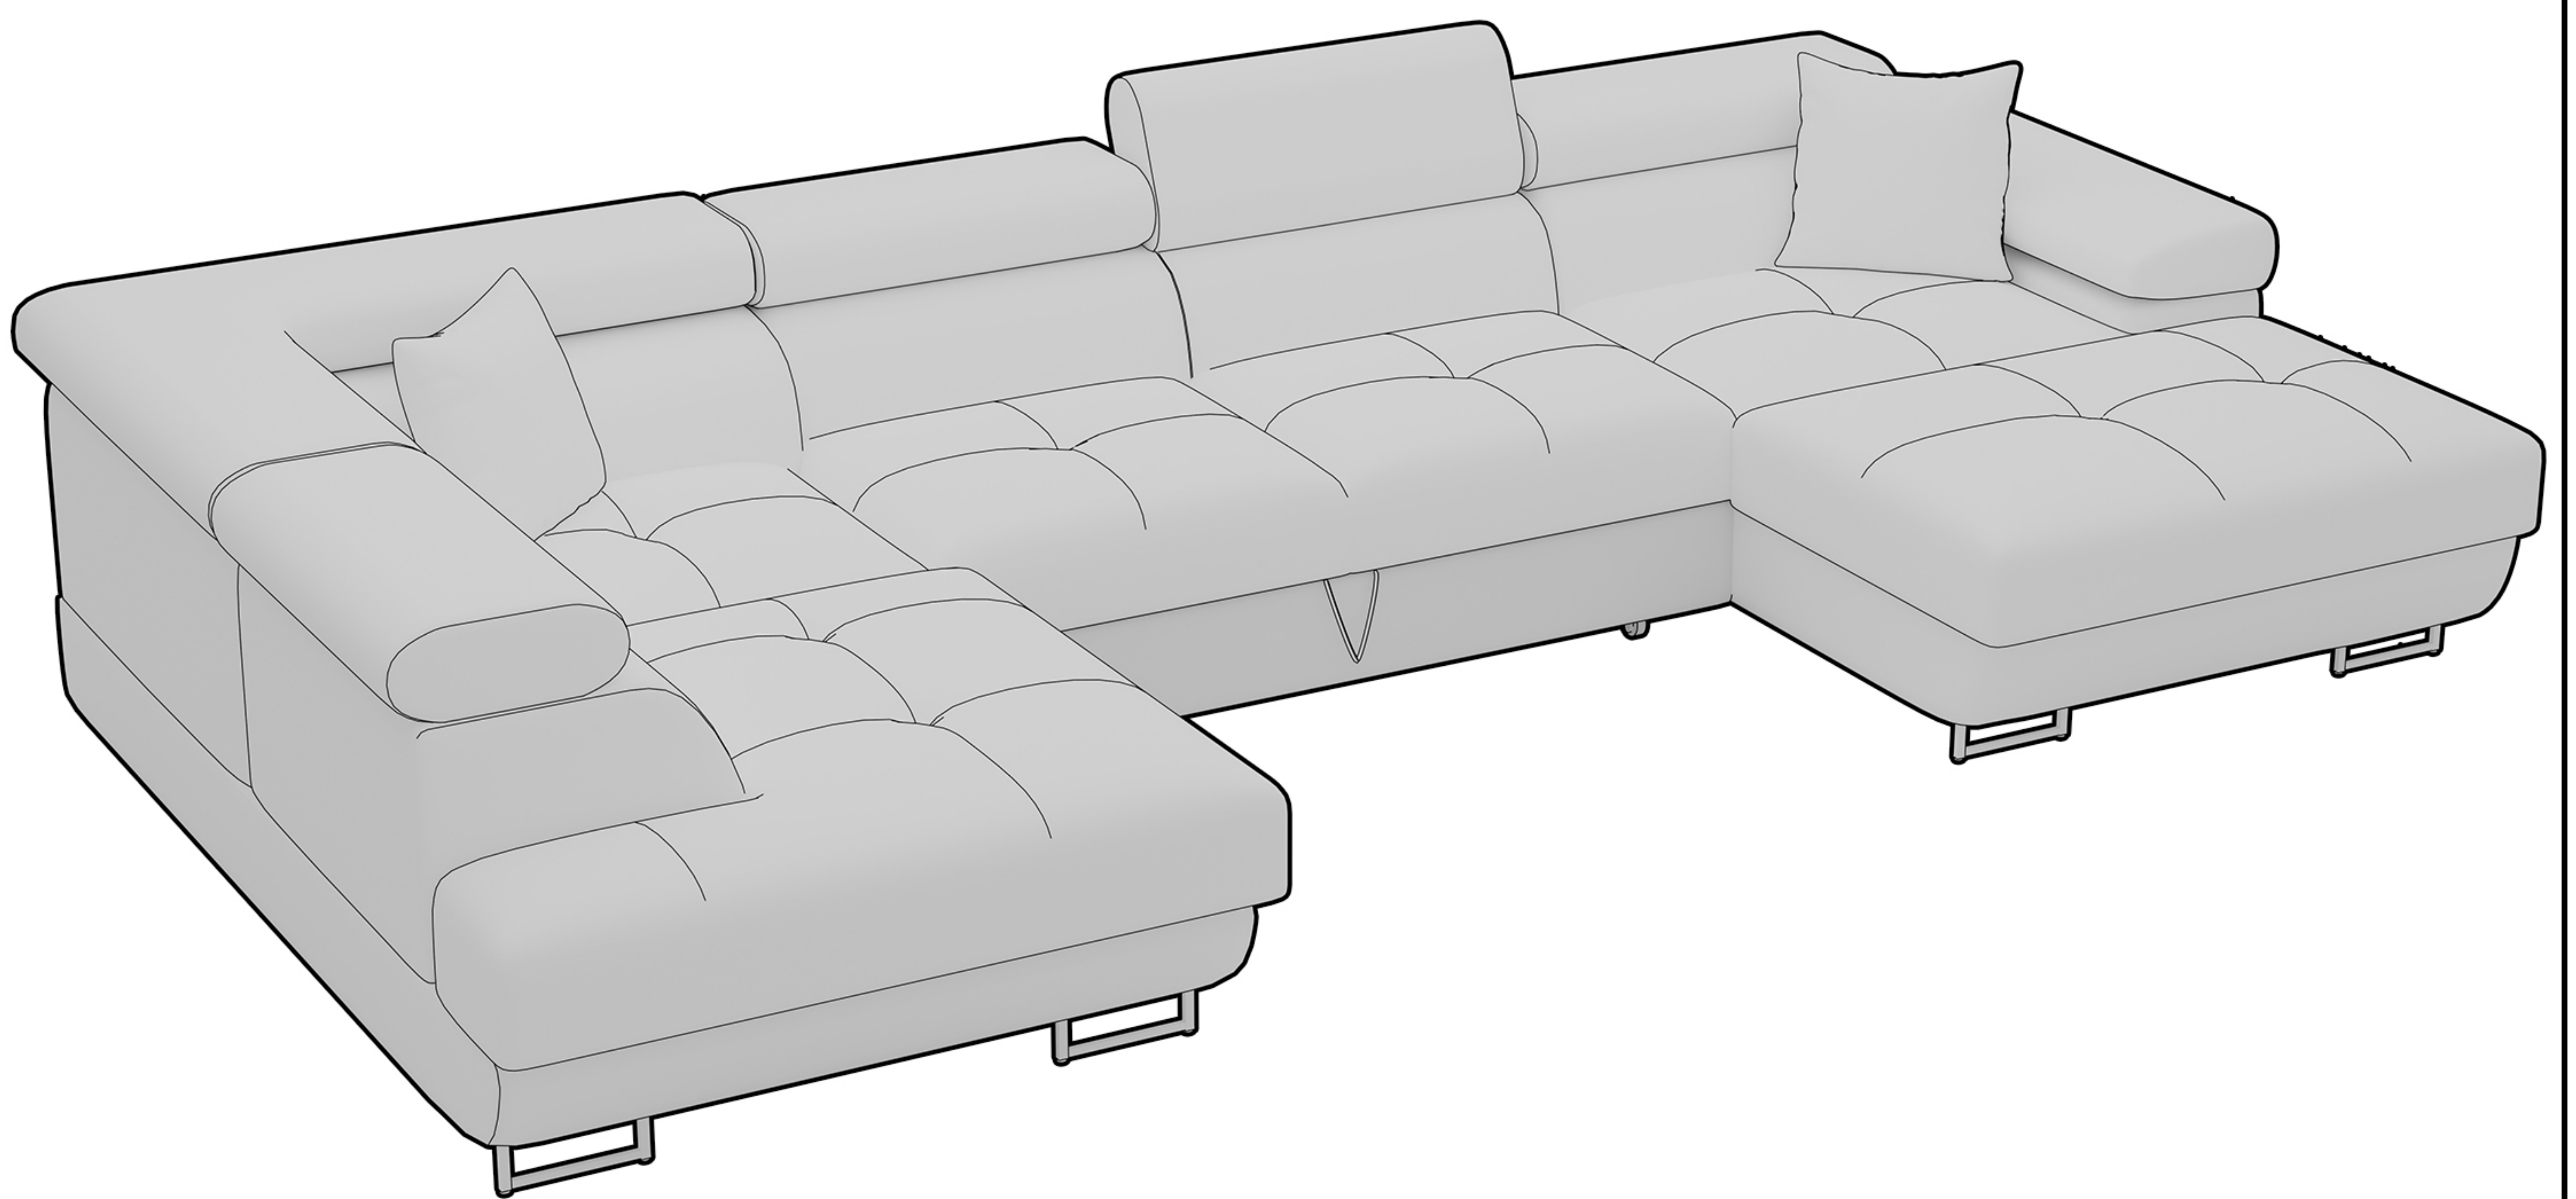
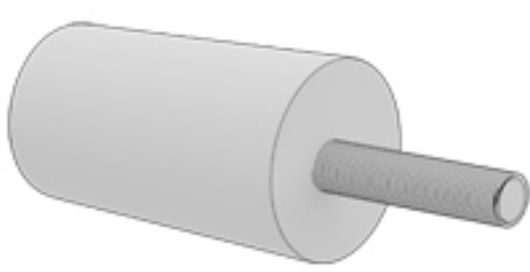


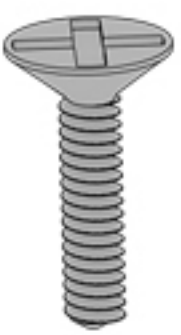


TOREZIO BIS


ASSEMBLING INSTRUCTIONS




MONTAGEANLEITUNG
INSTRUKCJA MONTAŻU


A		x4
B		x7
C		x12
D		x12

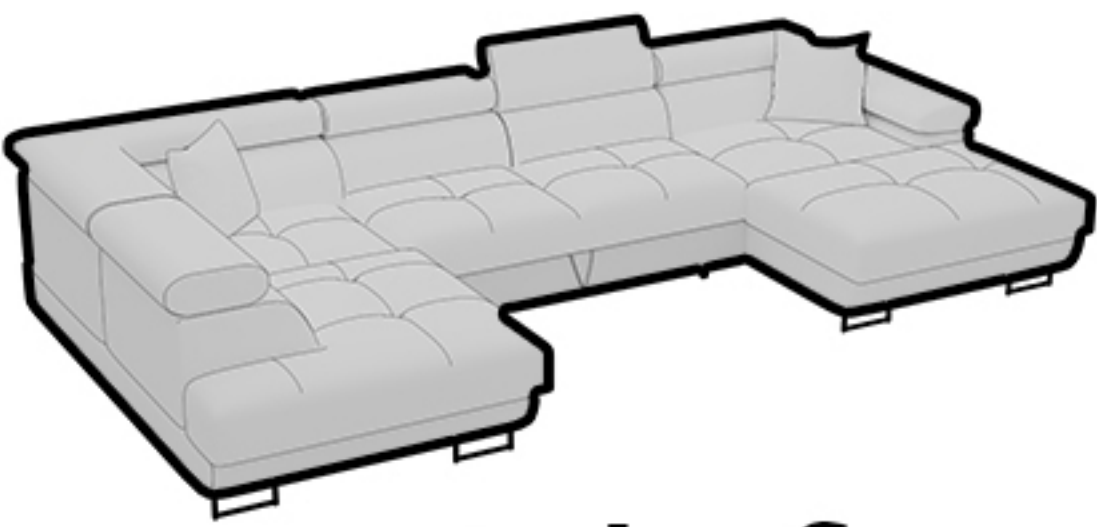







Lhf




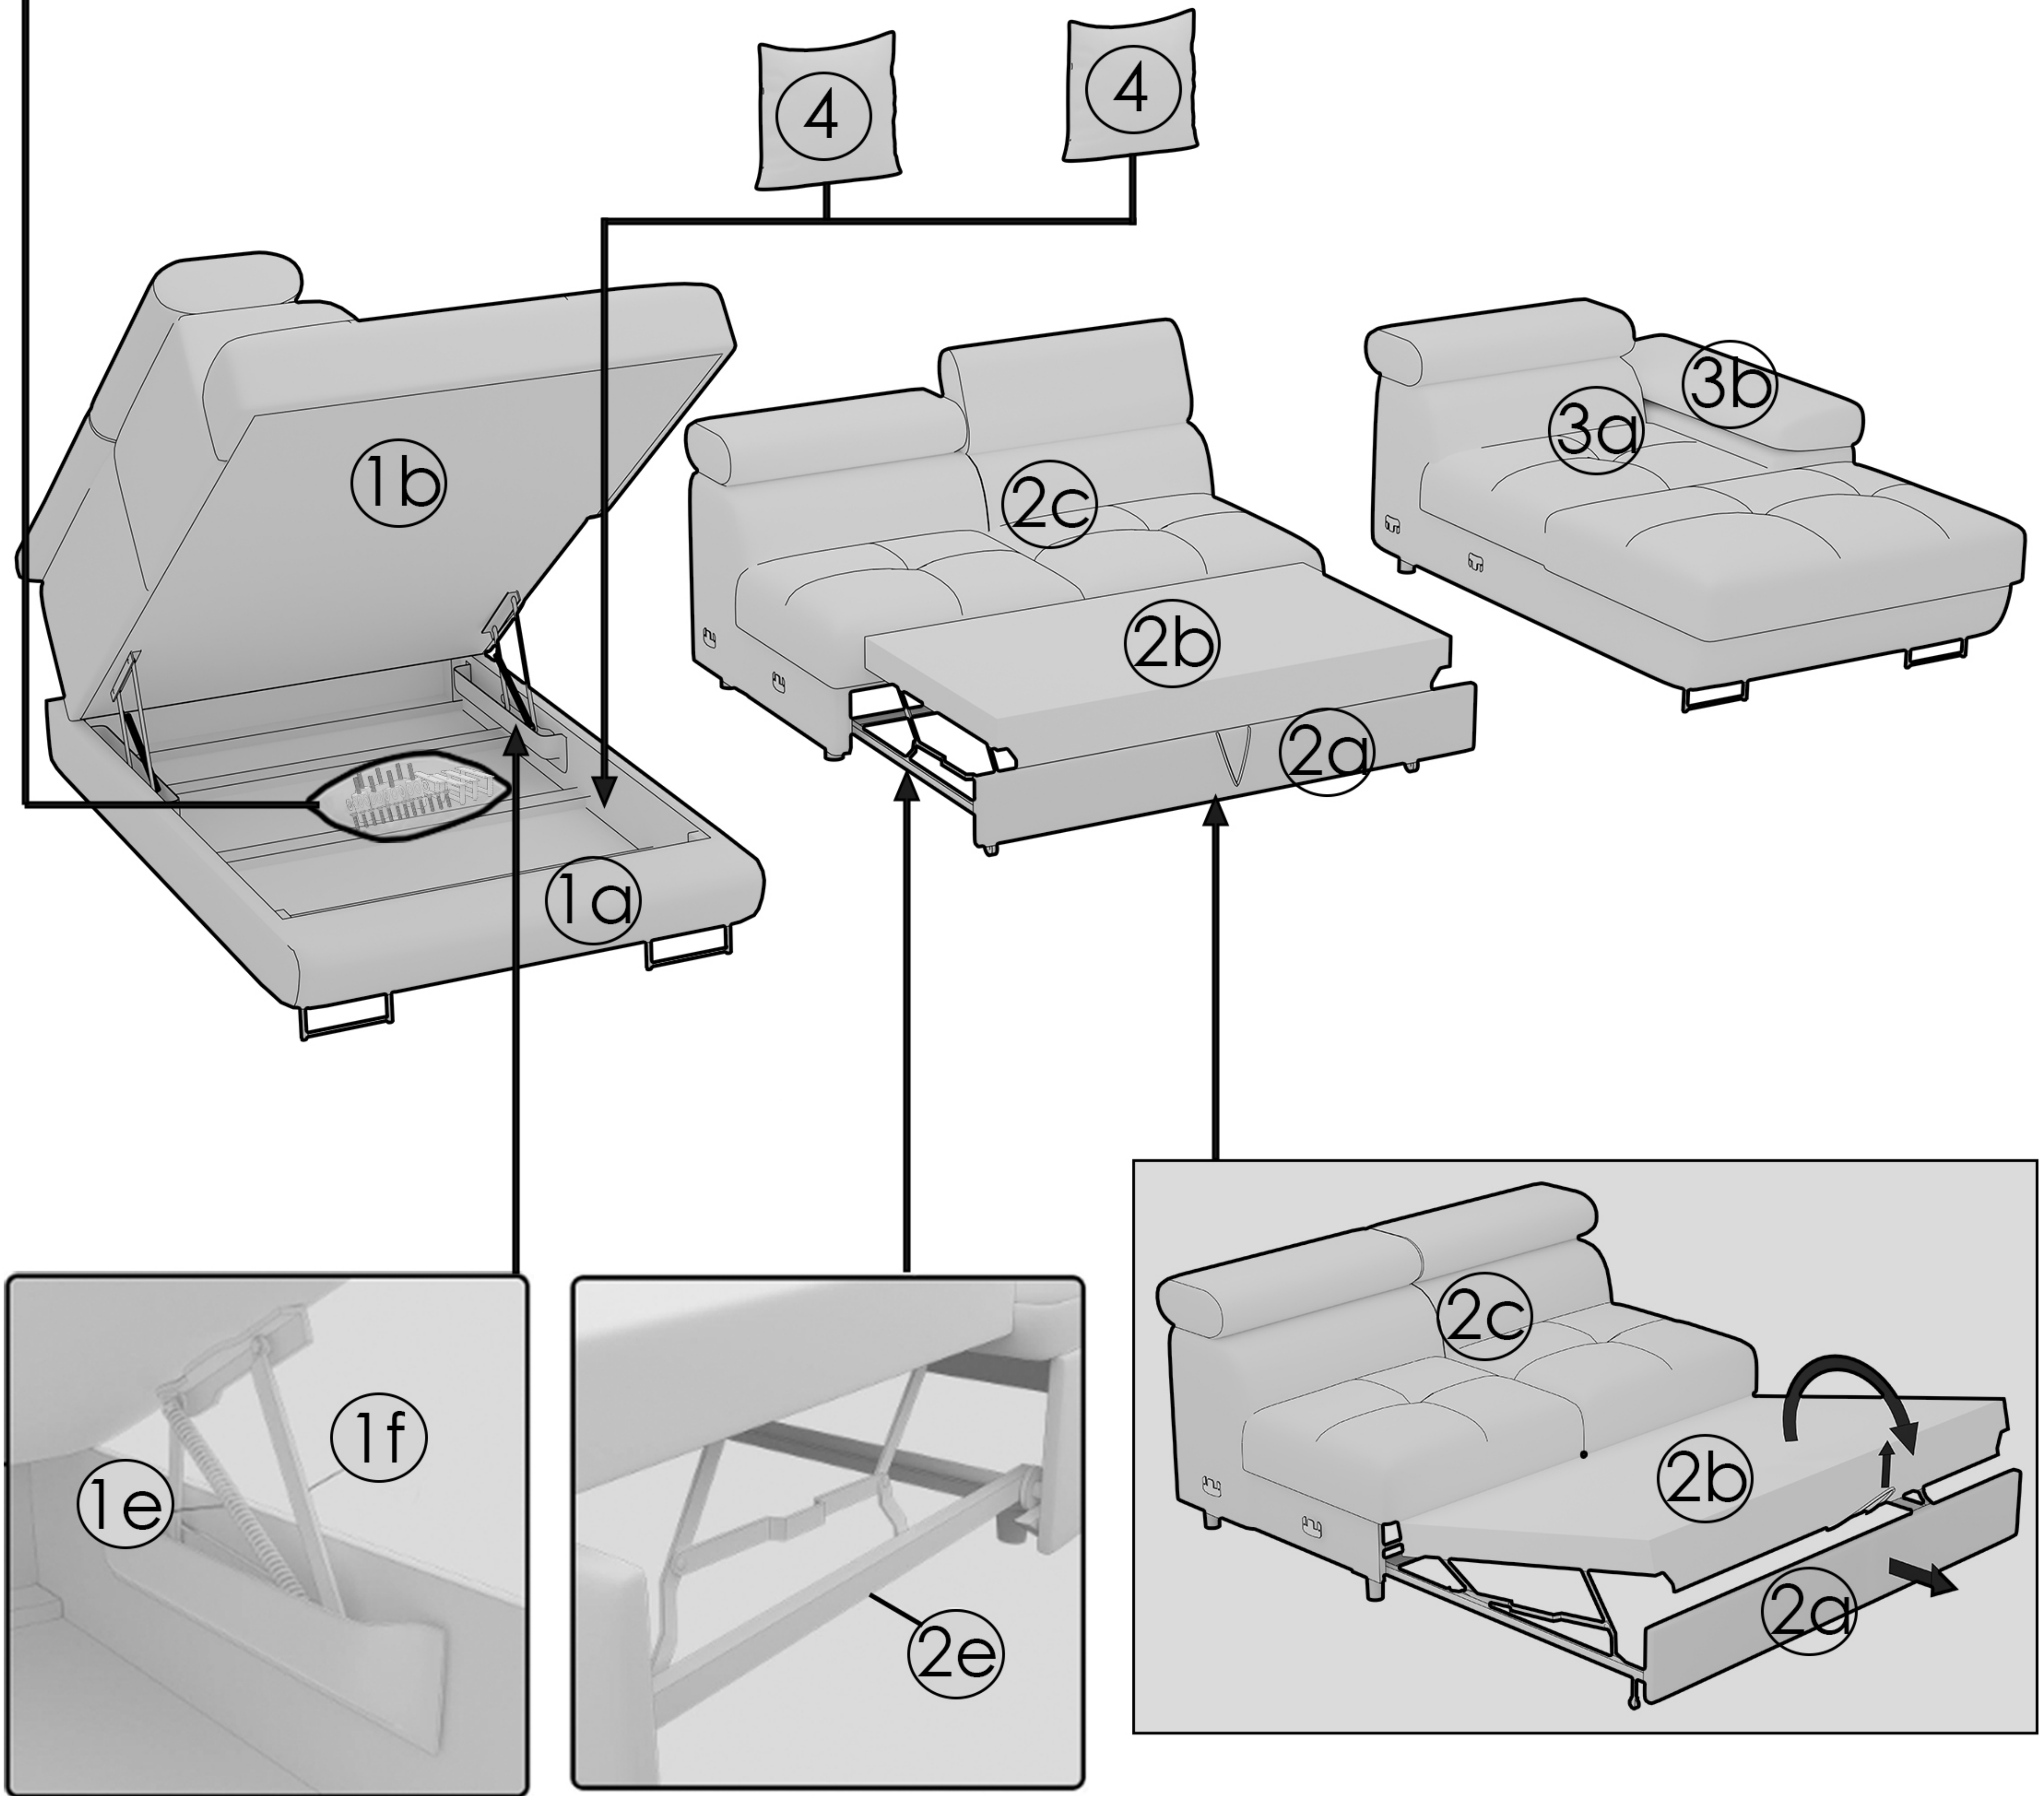


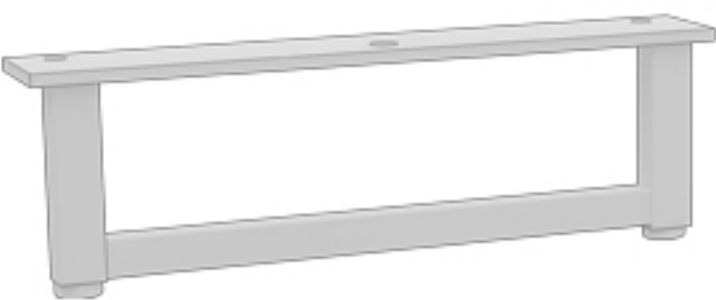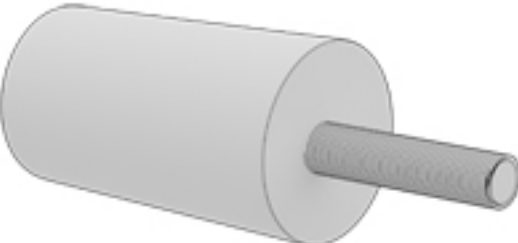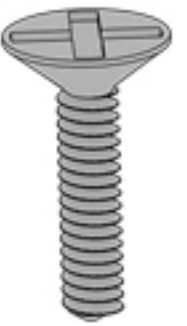A		x4
B		x7
C		x12
D		x12

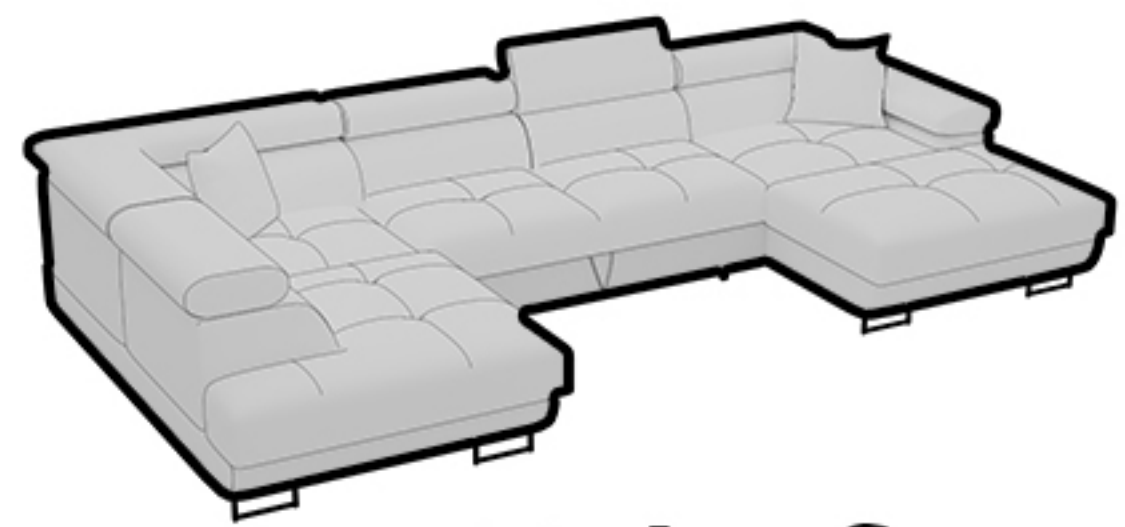




Rh

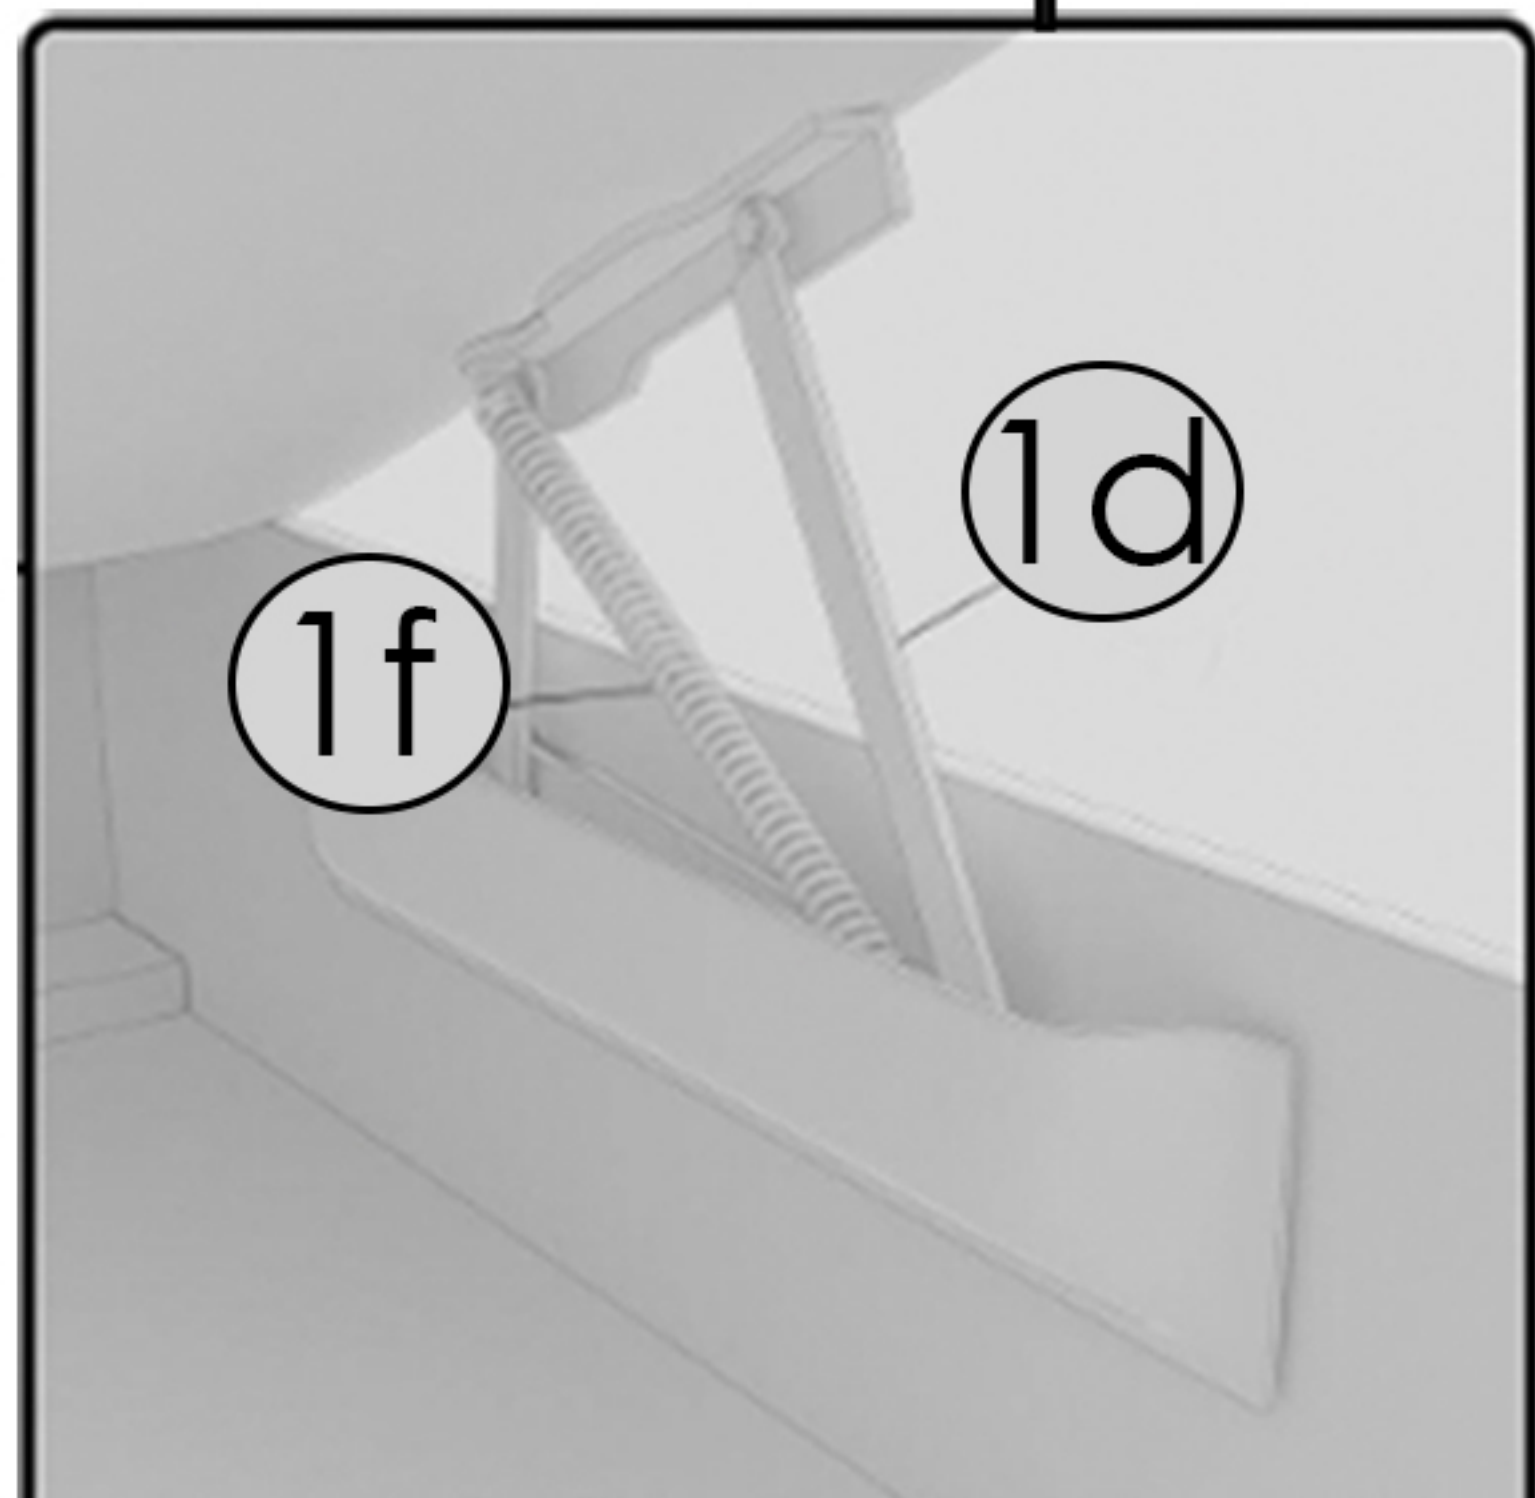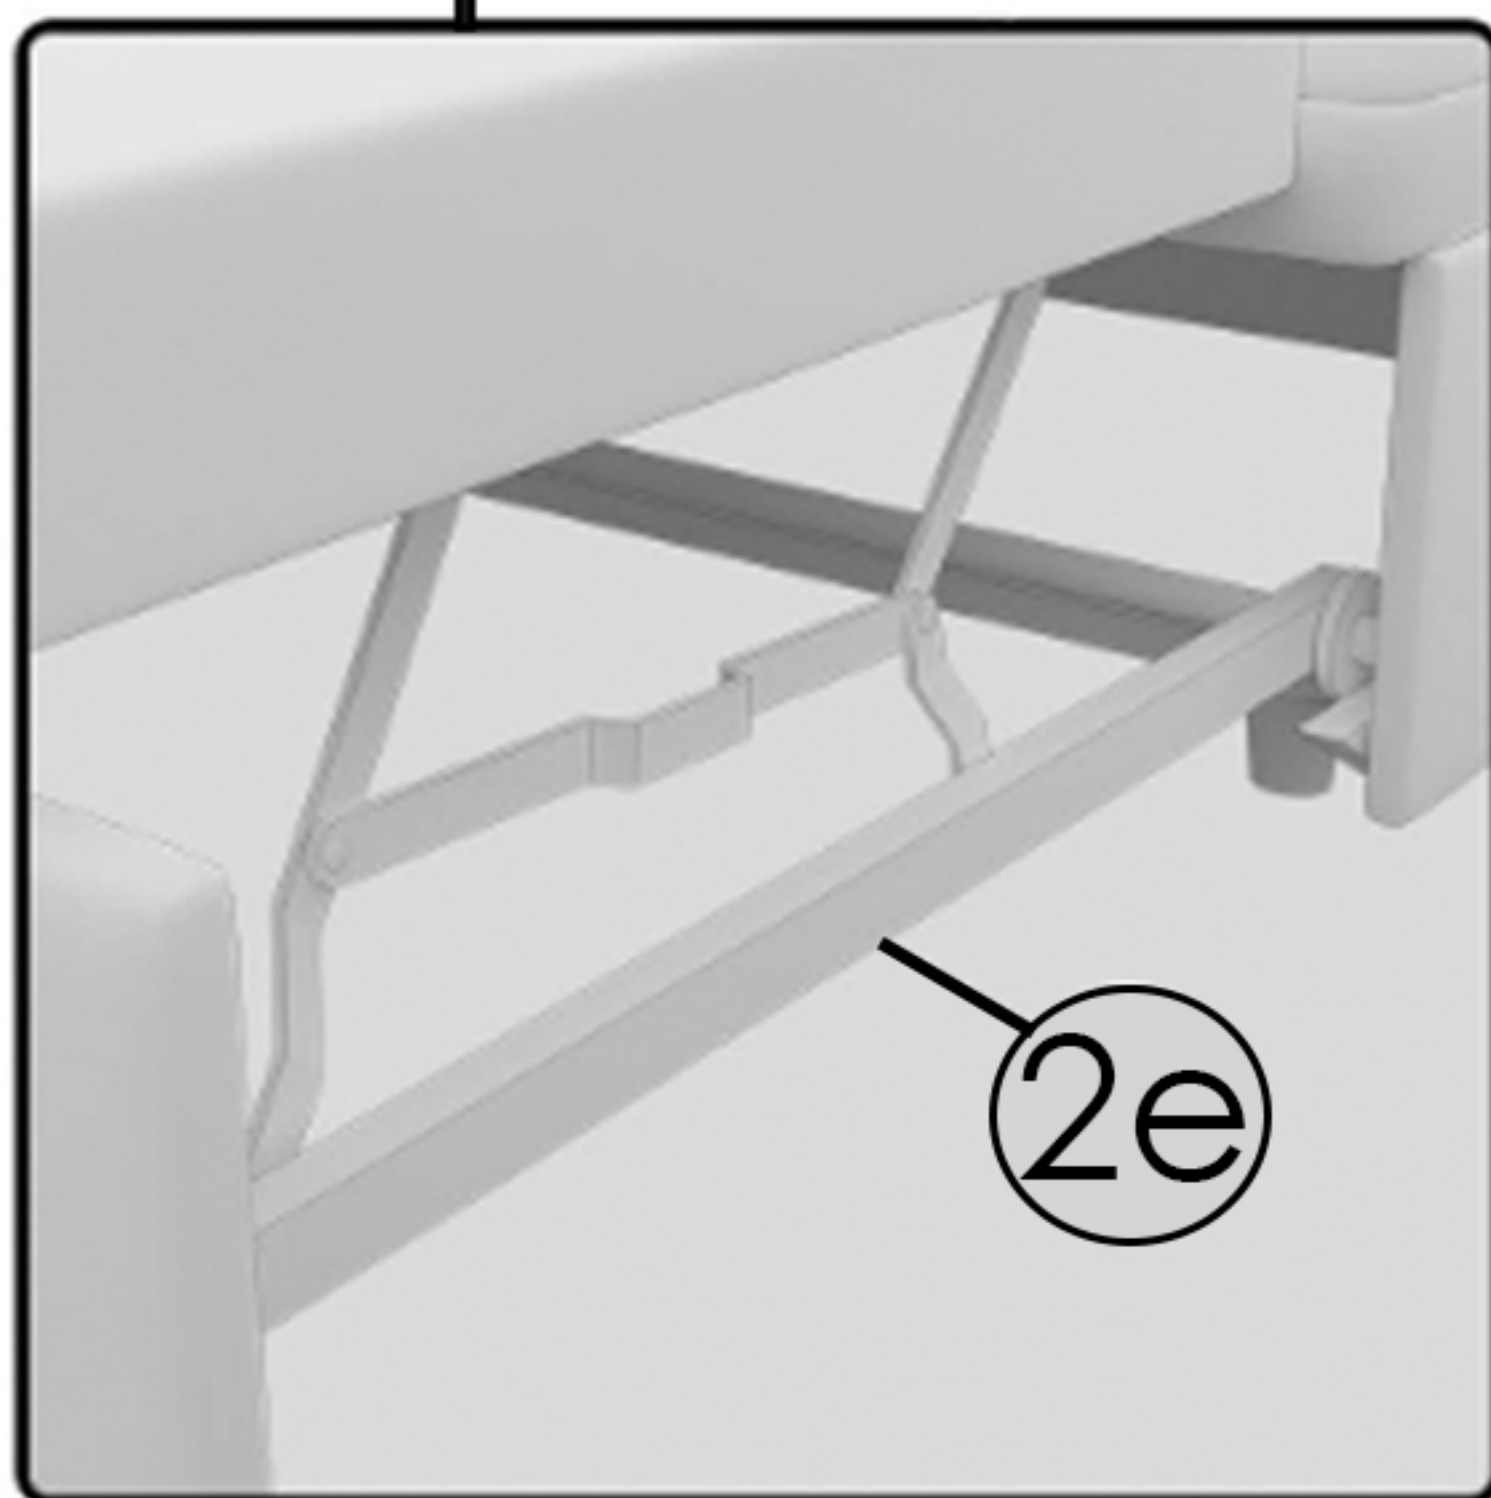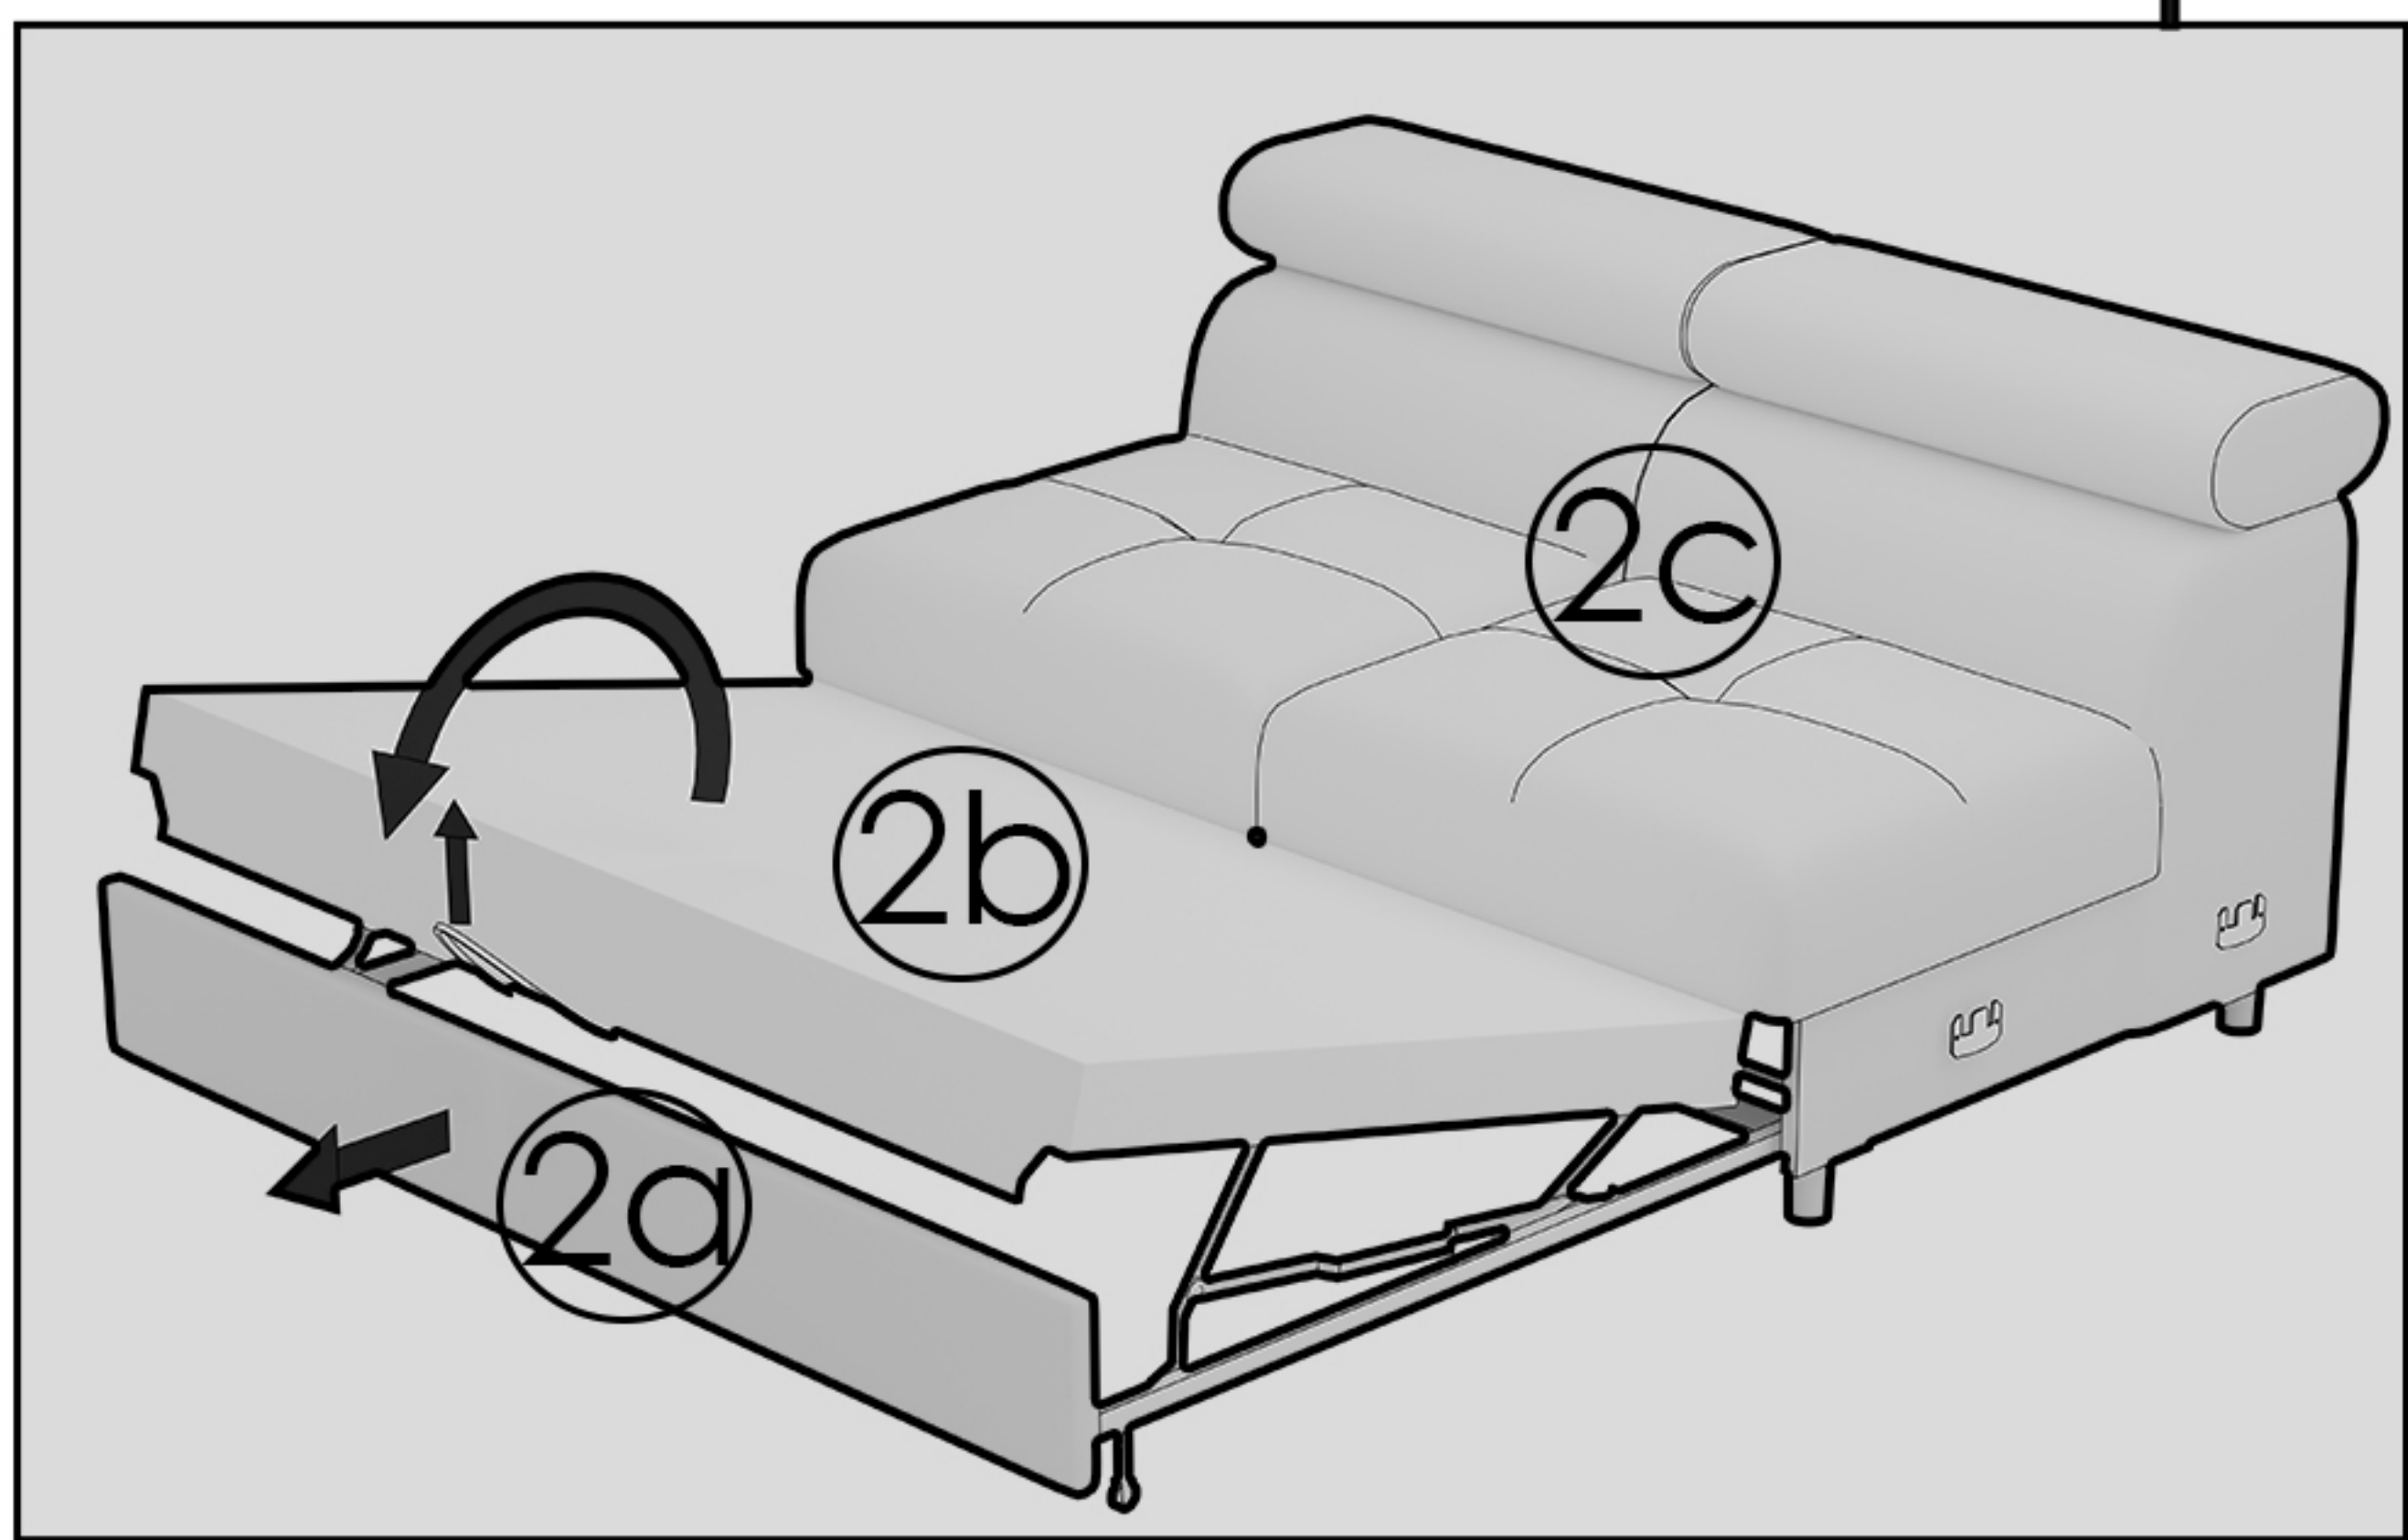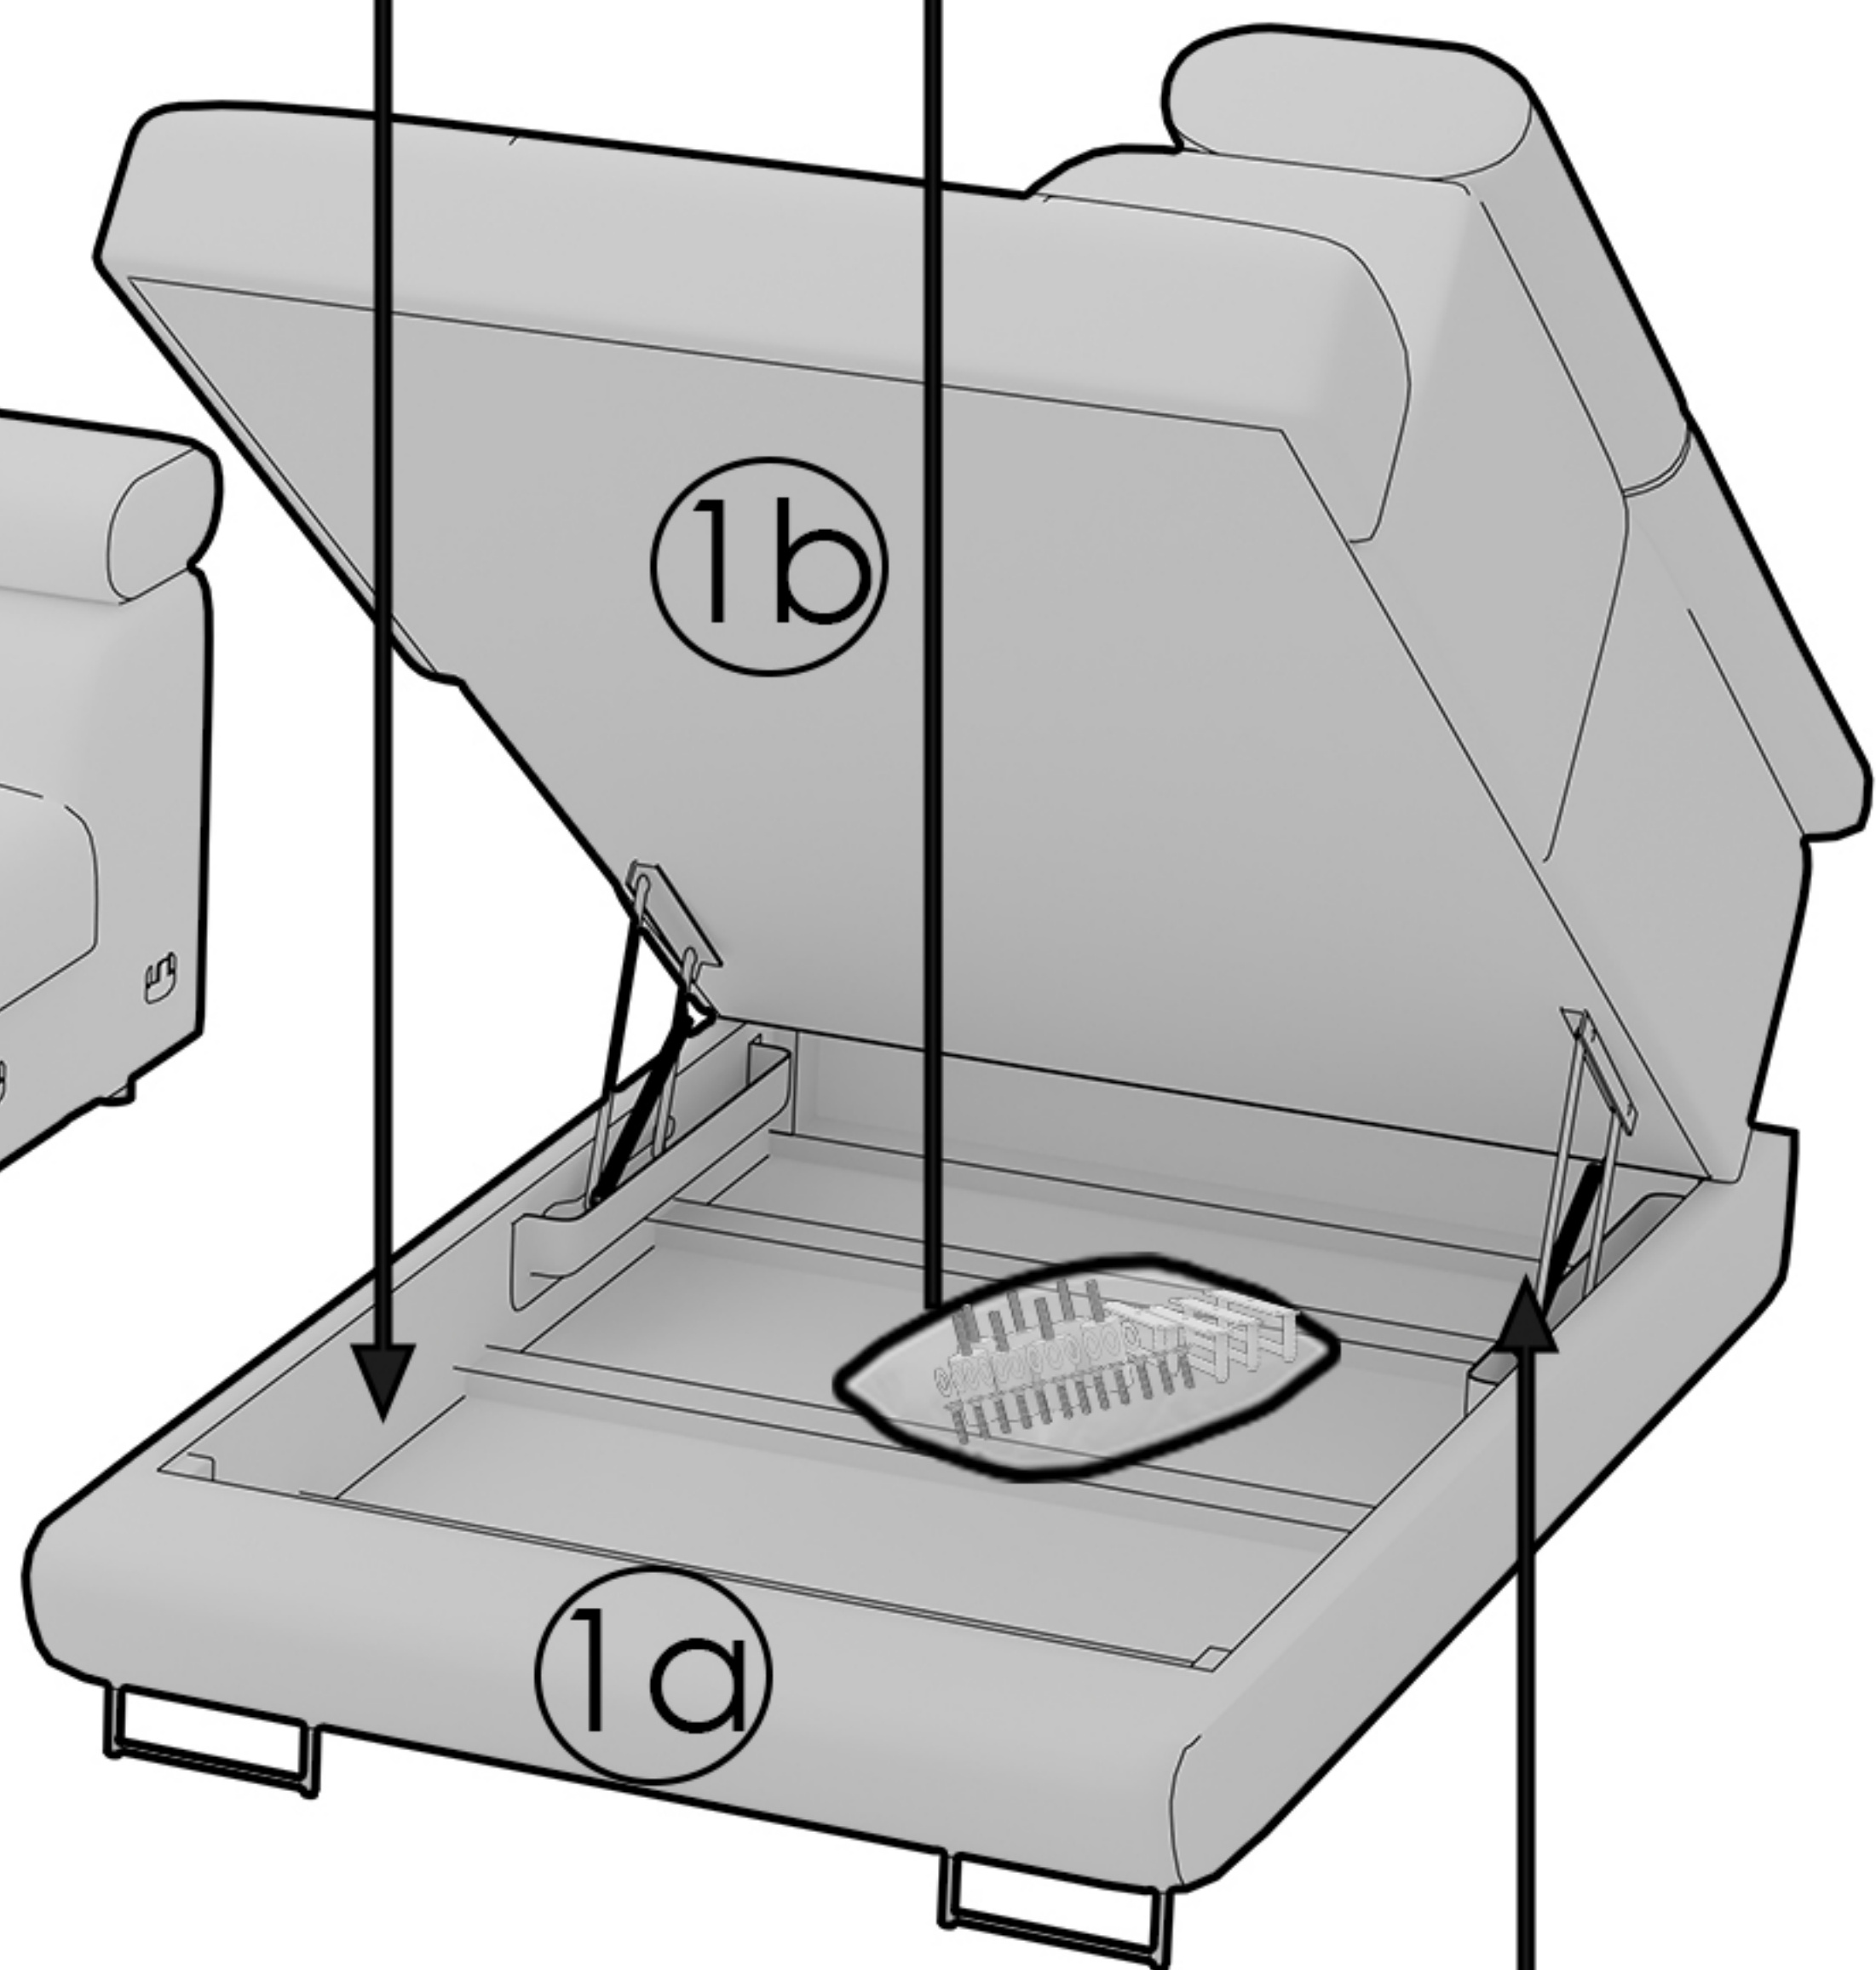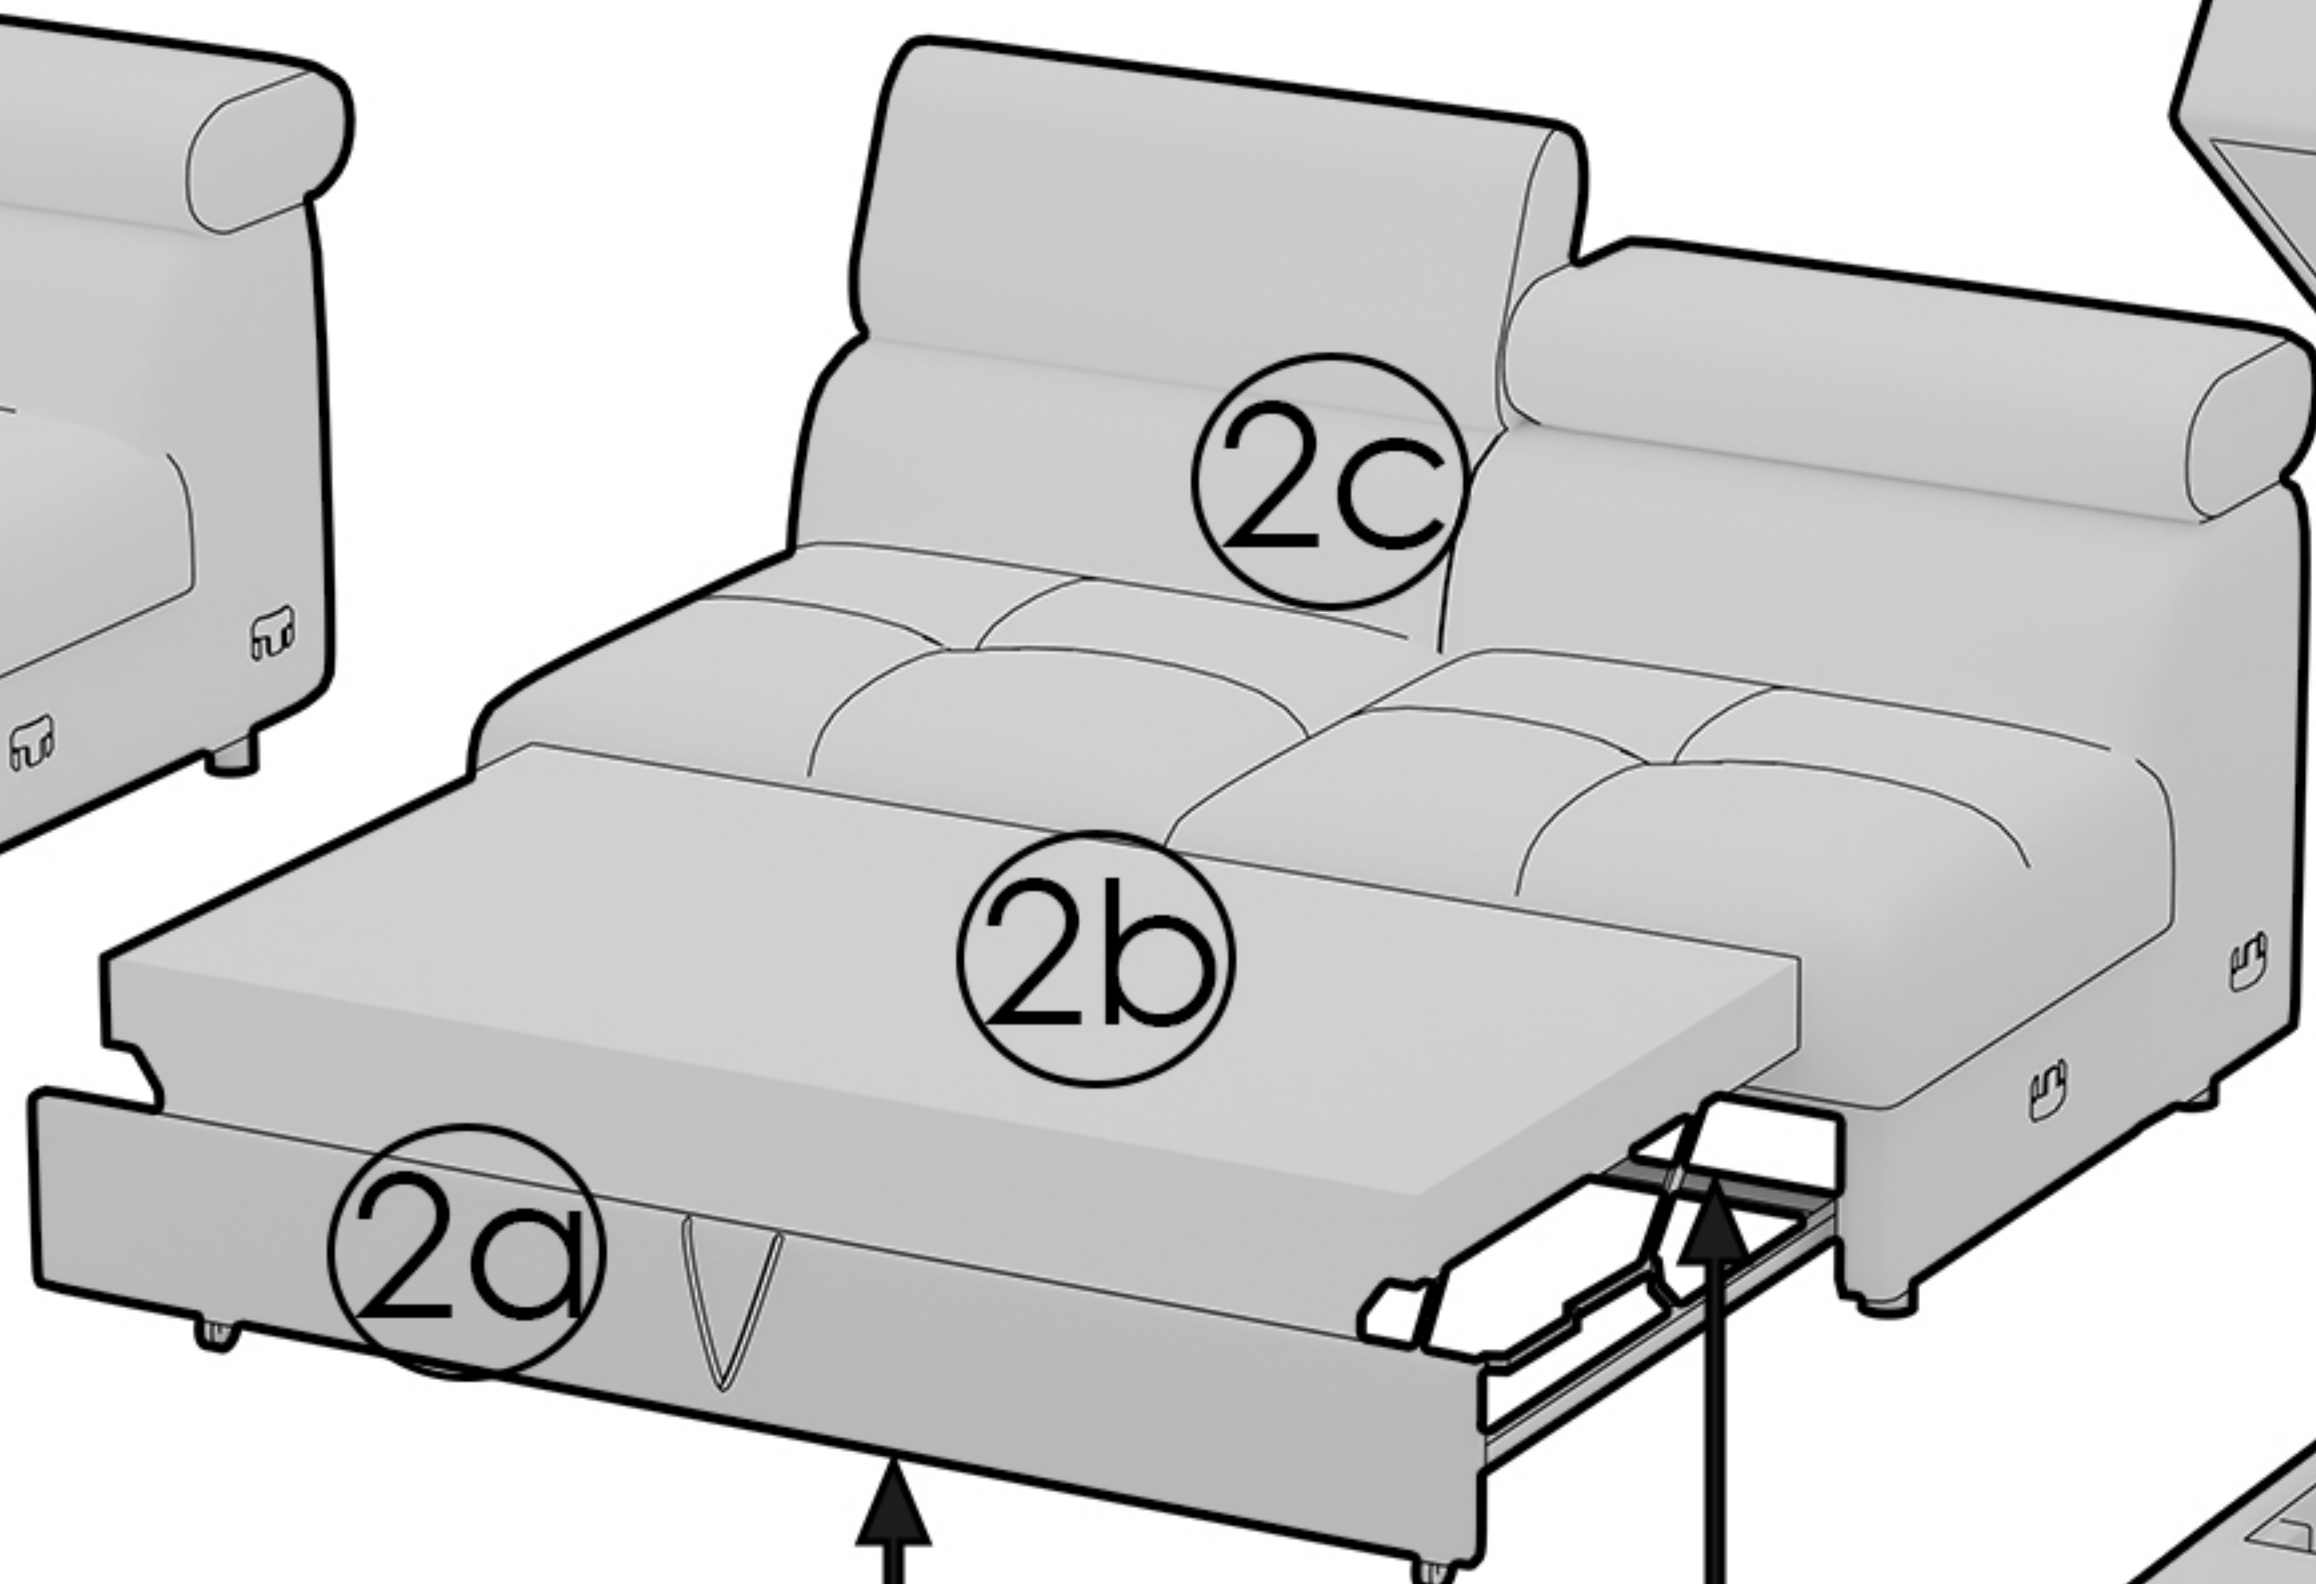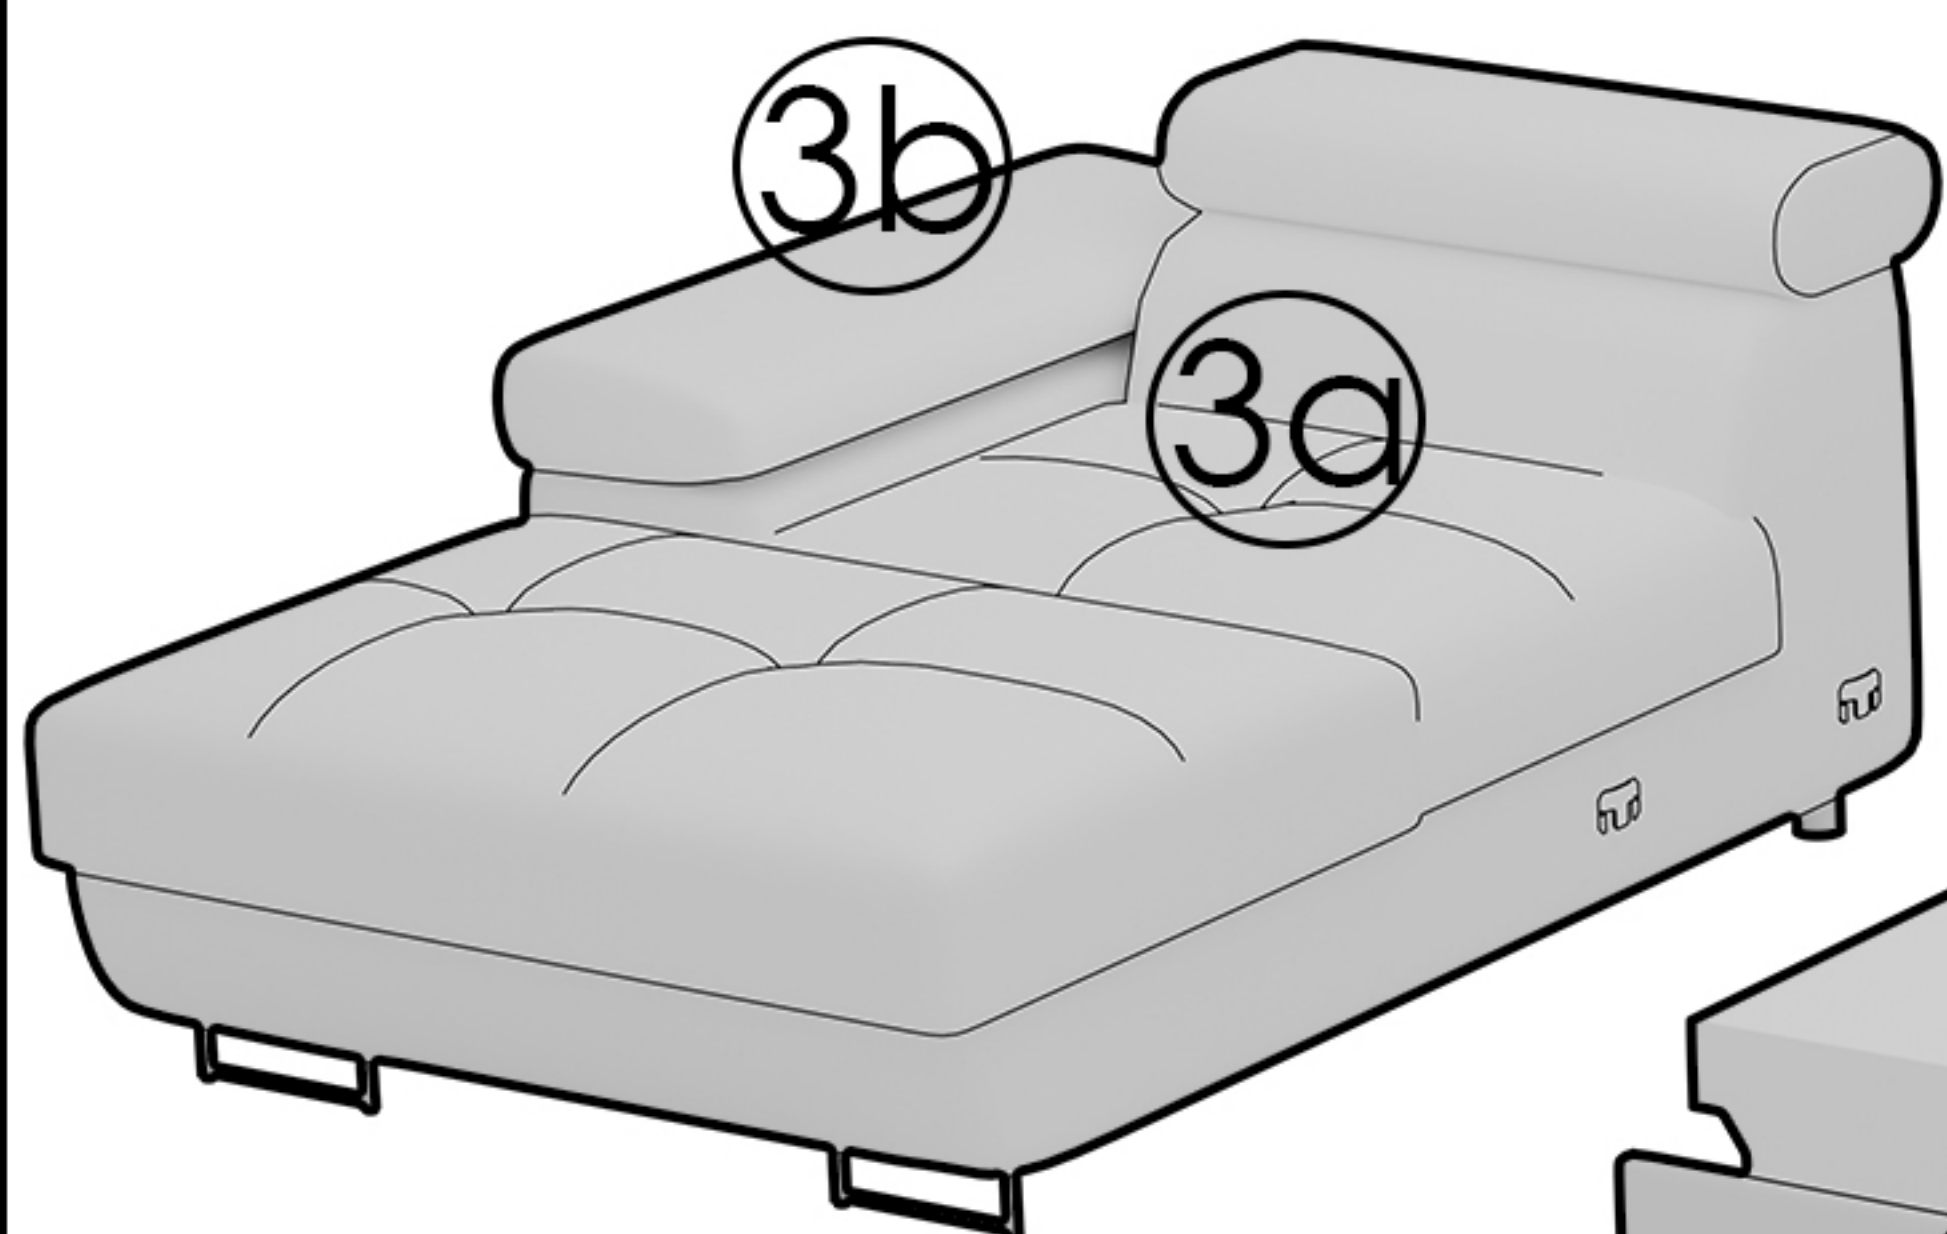

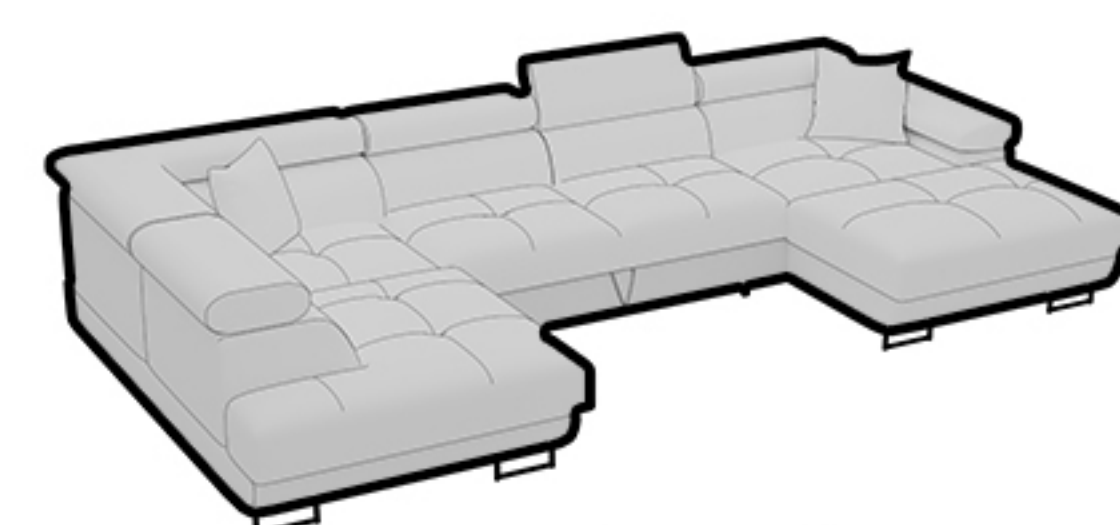
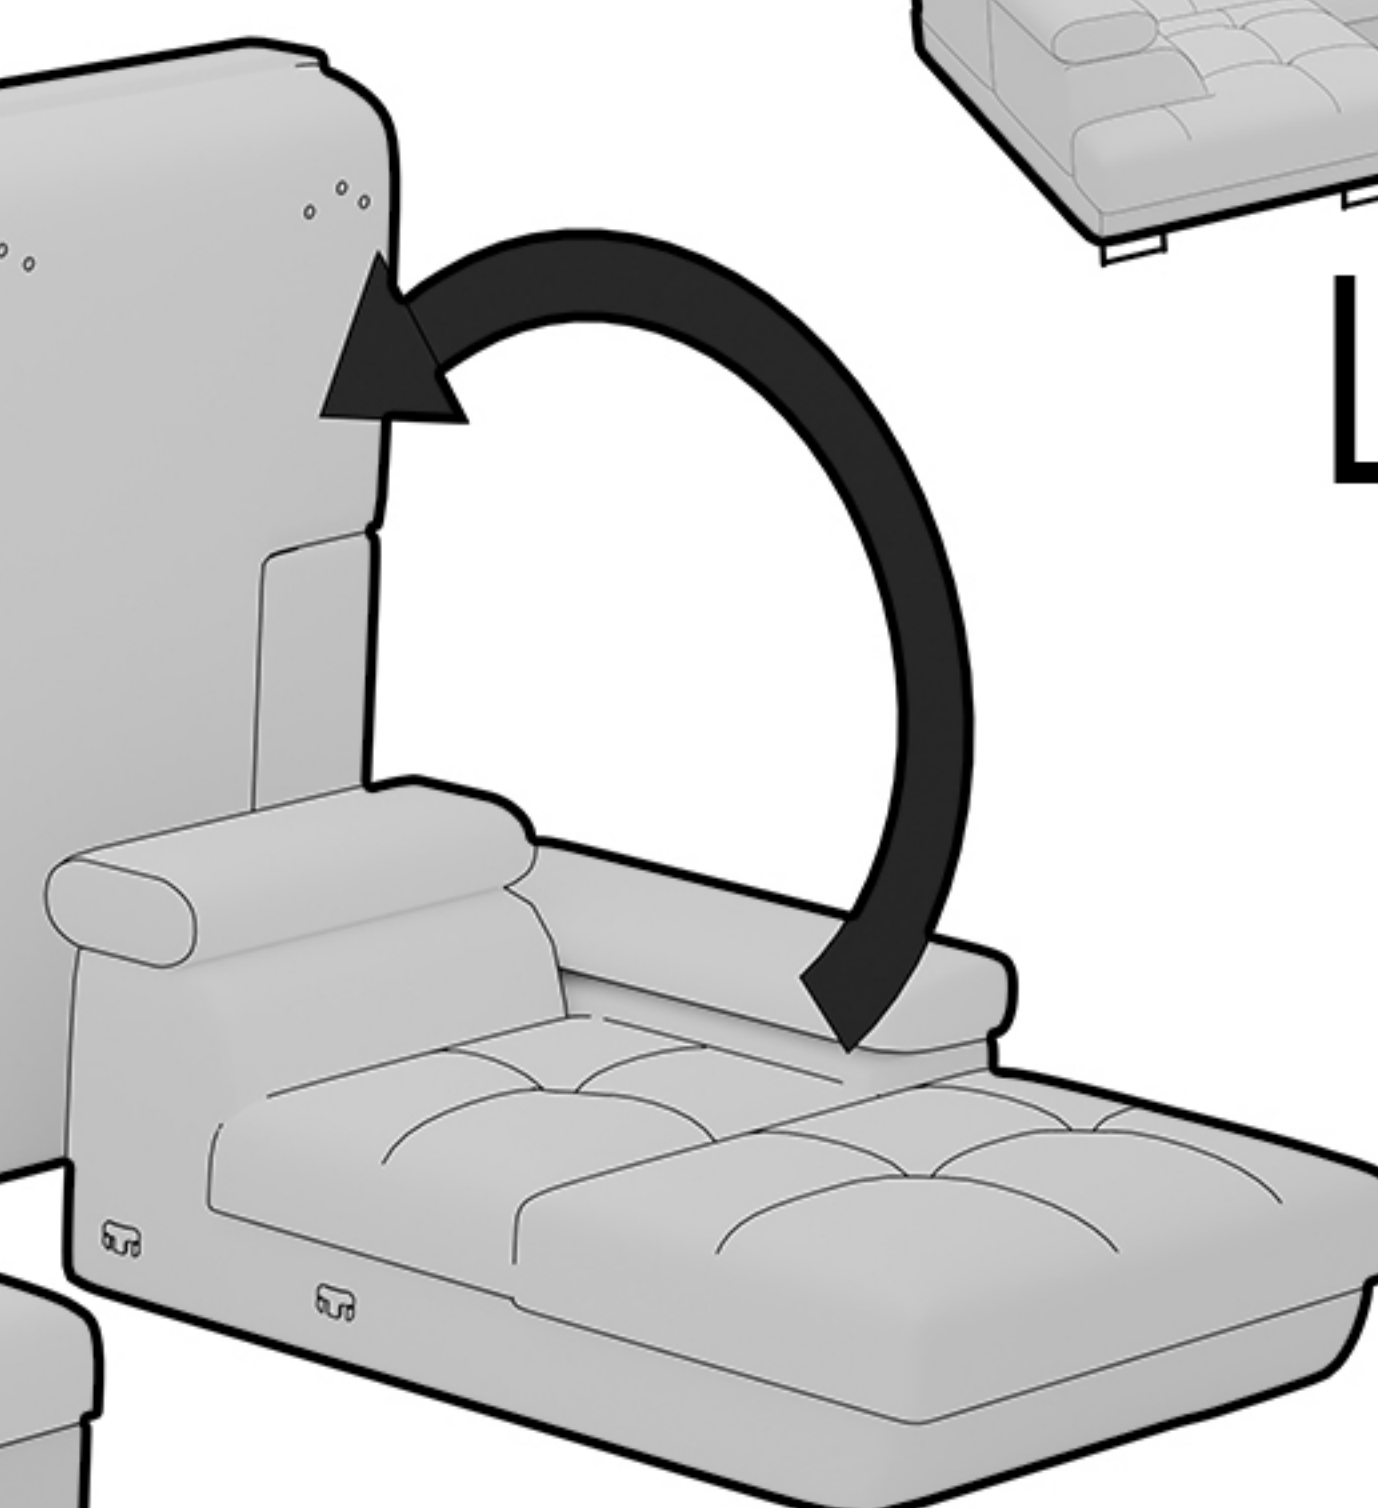
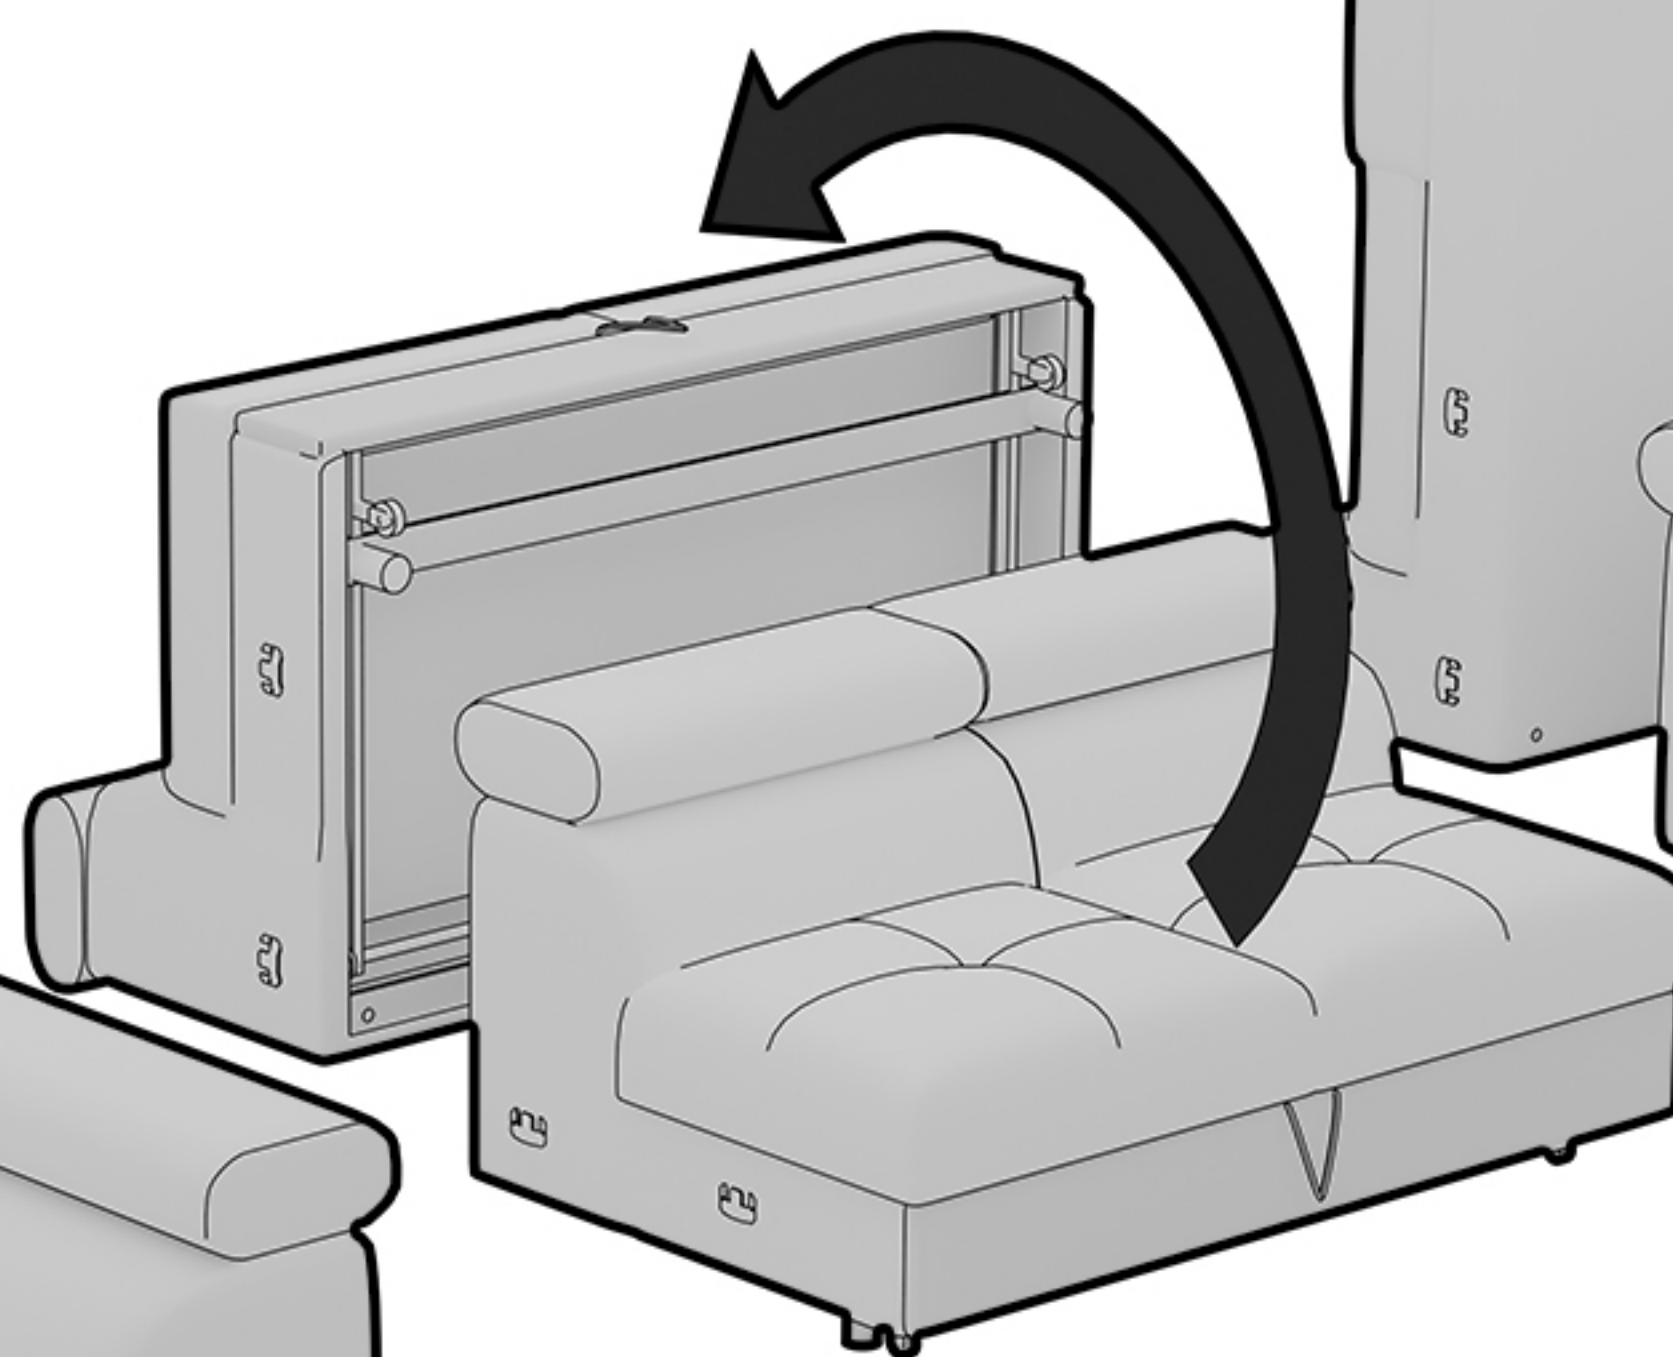
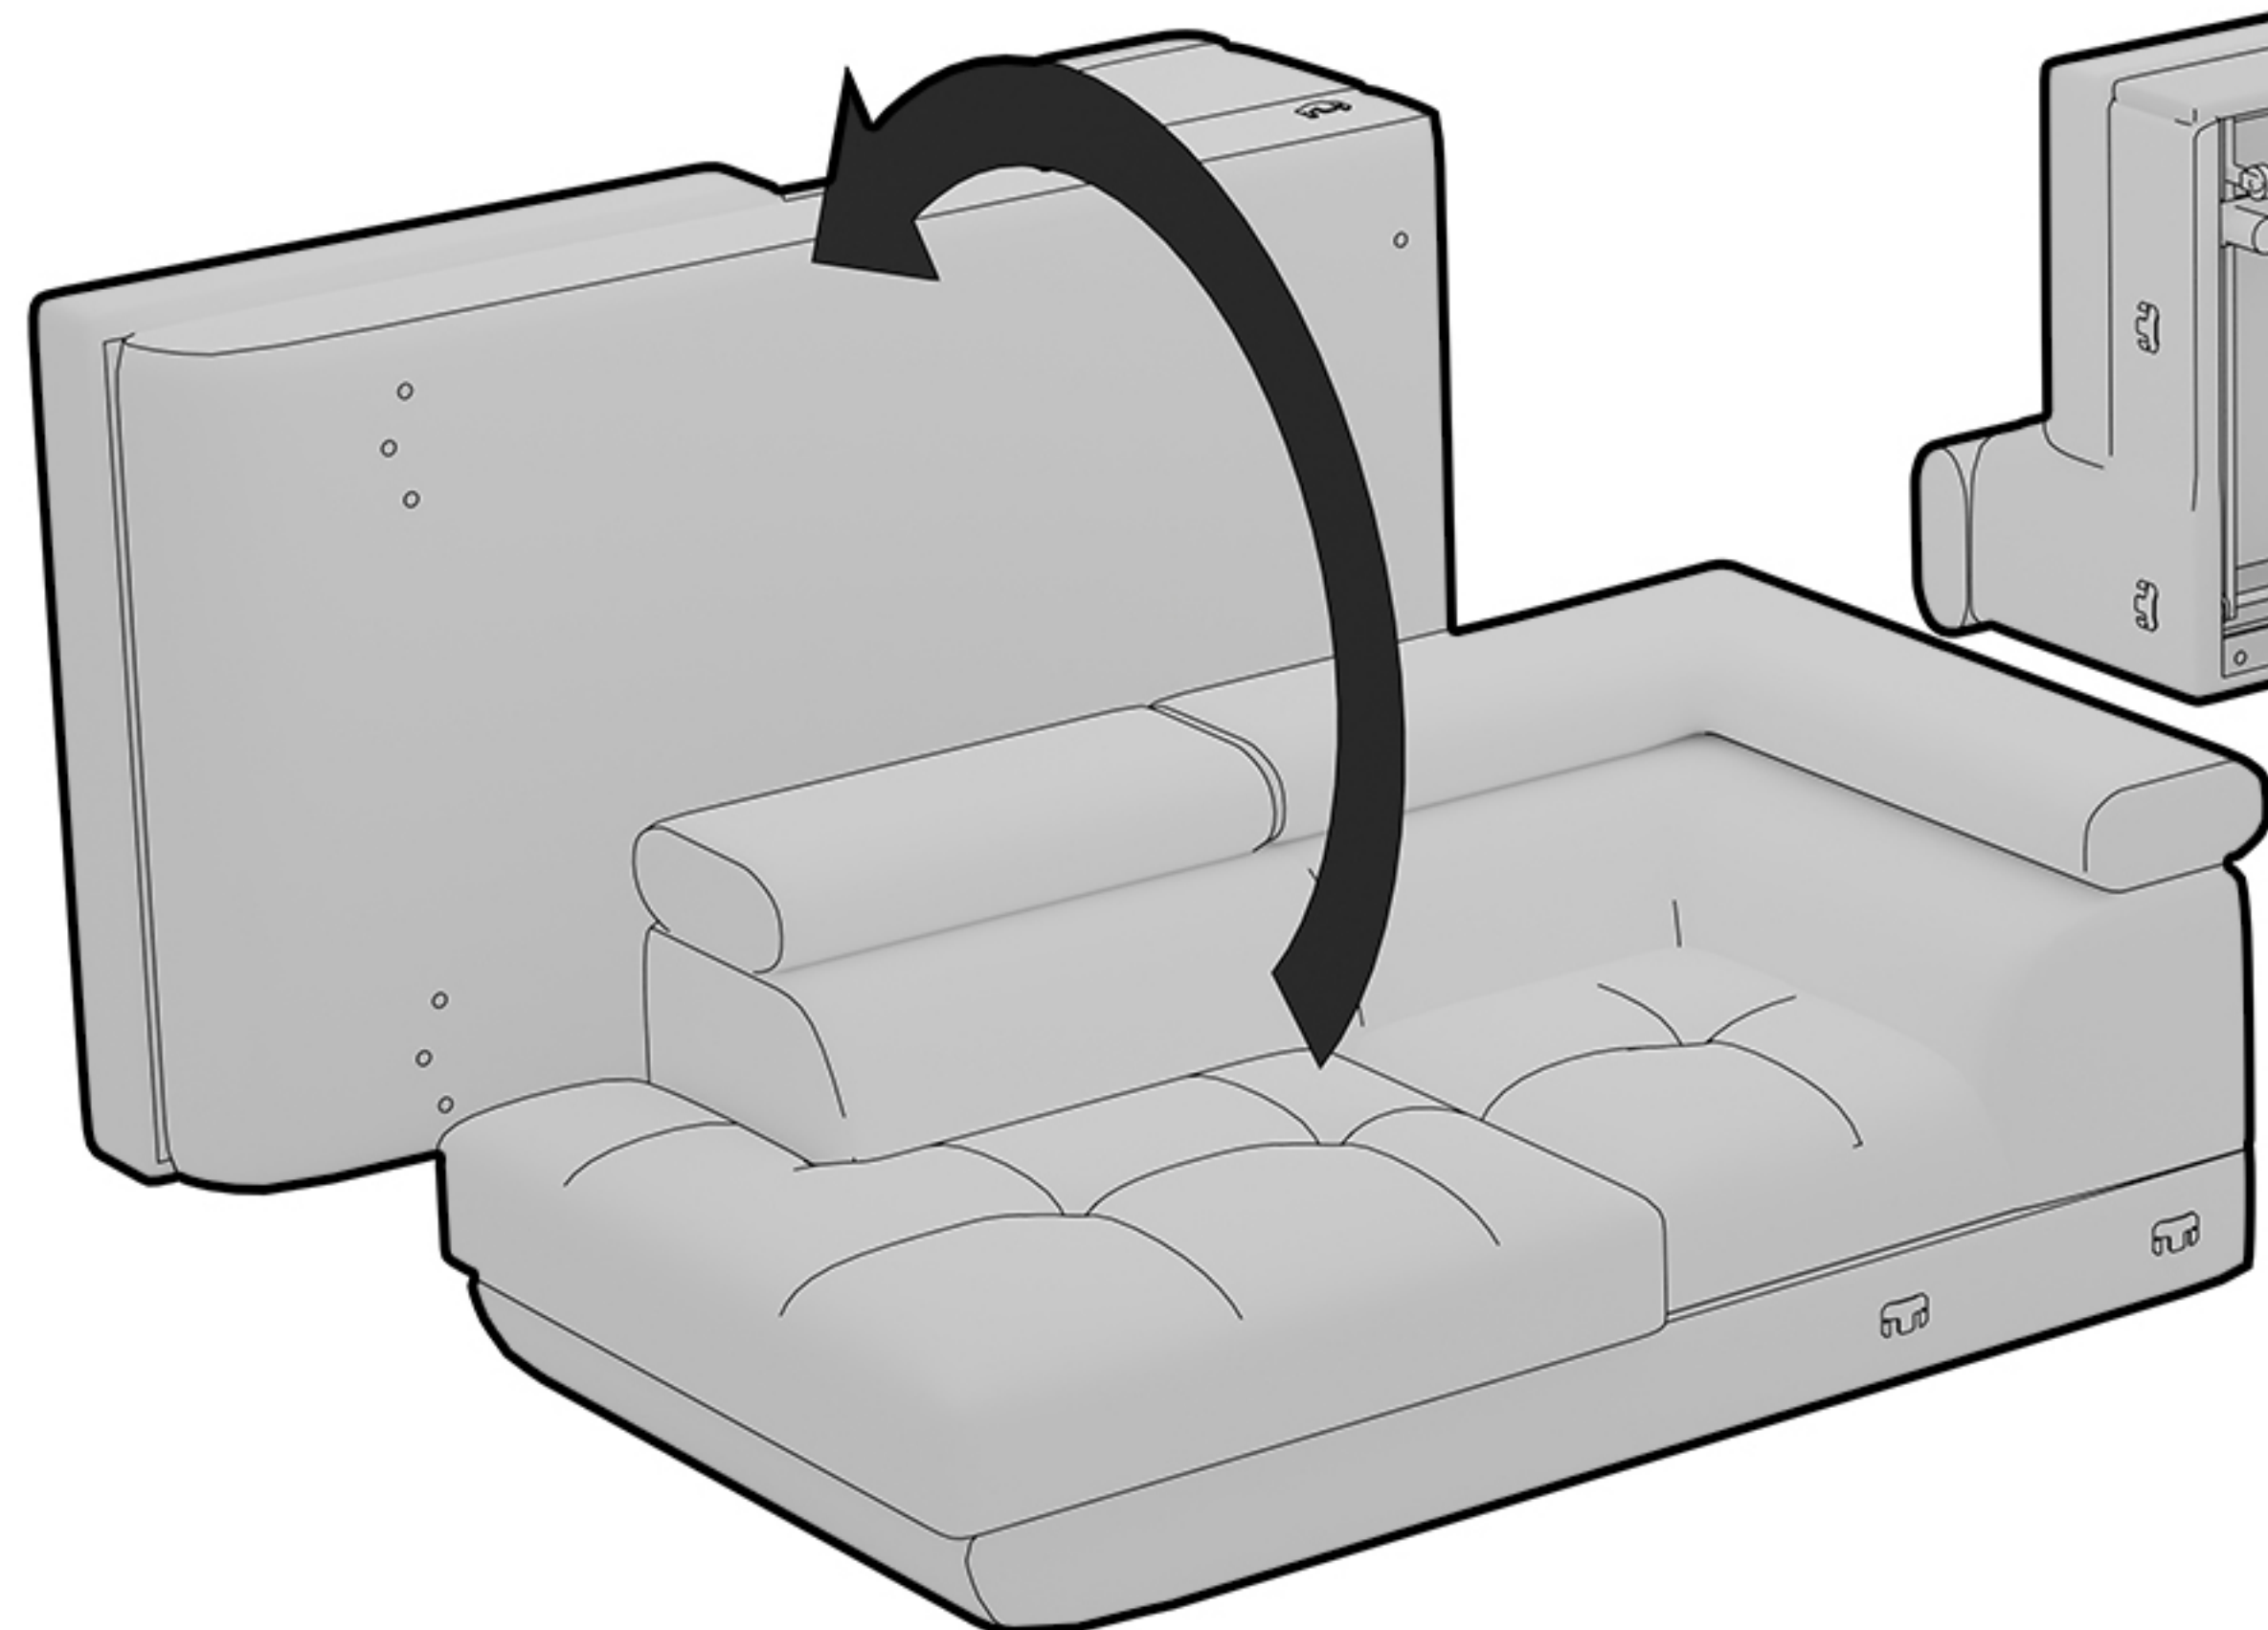



Lhf

A		x4
B		x7
C		x12
D		x12

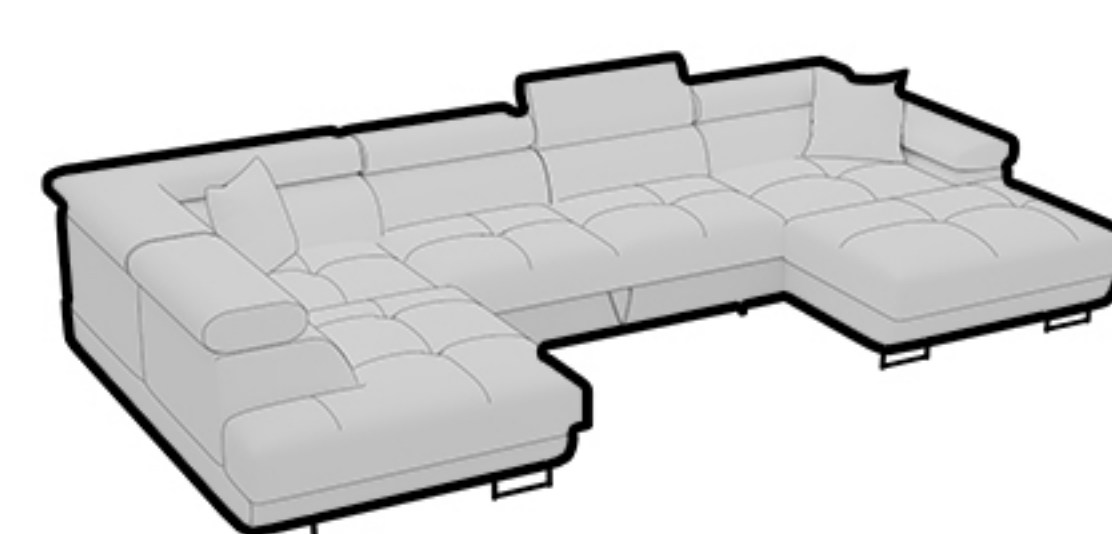
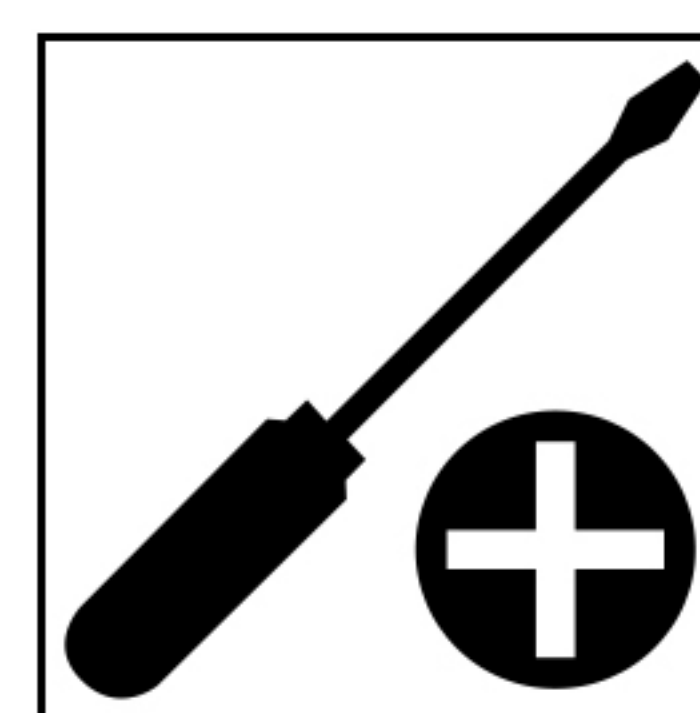
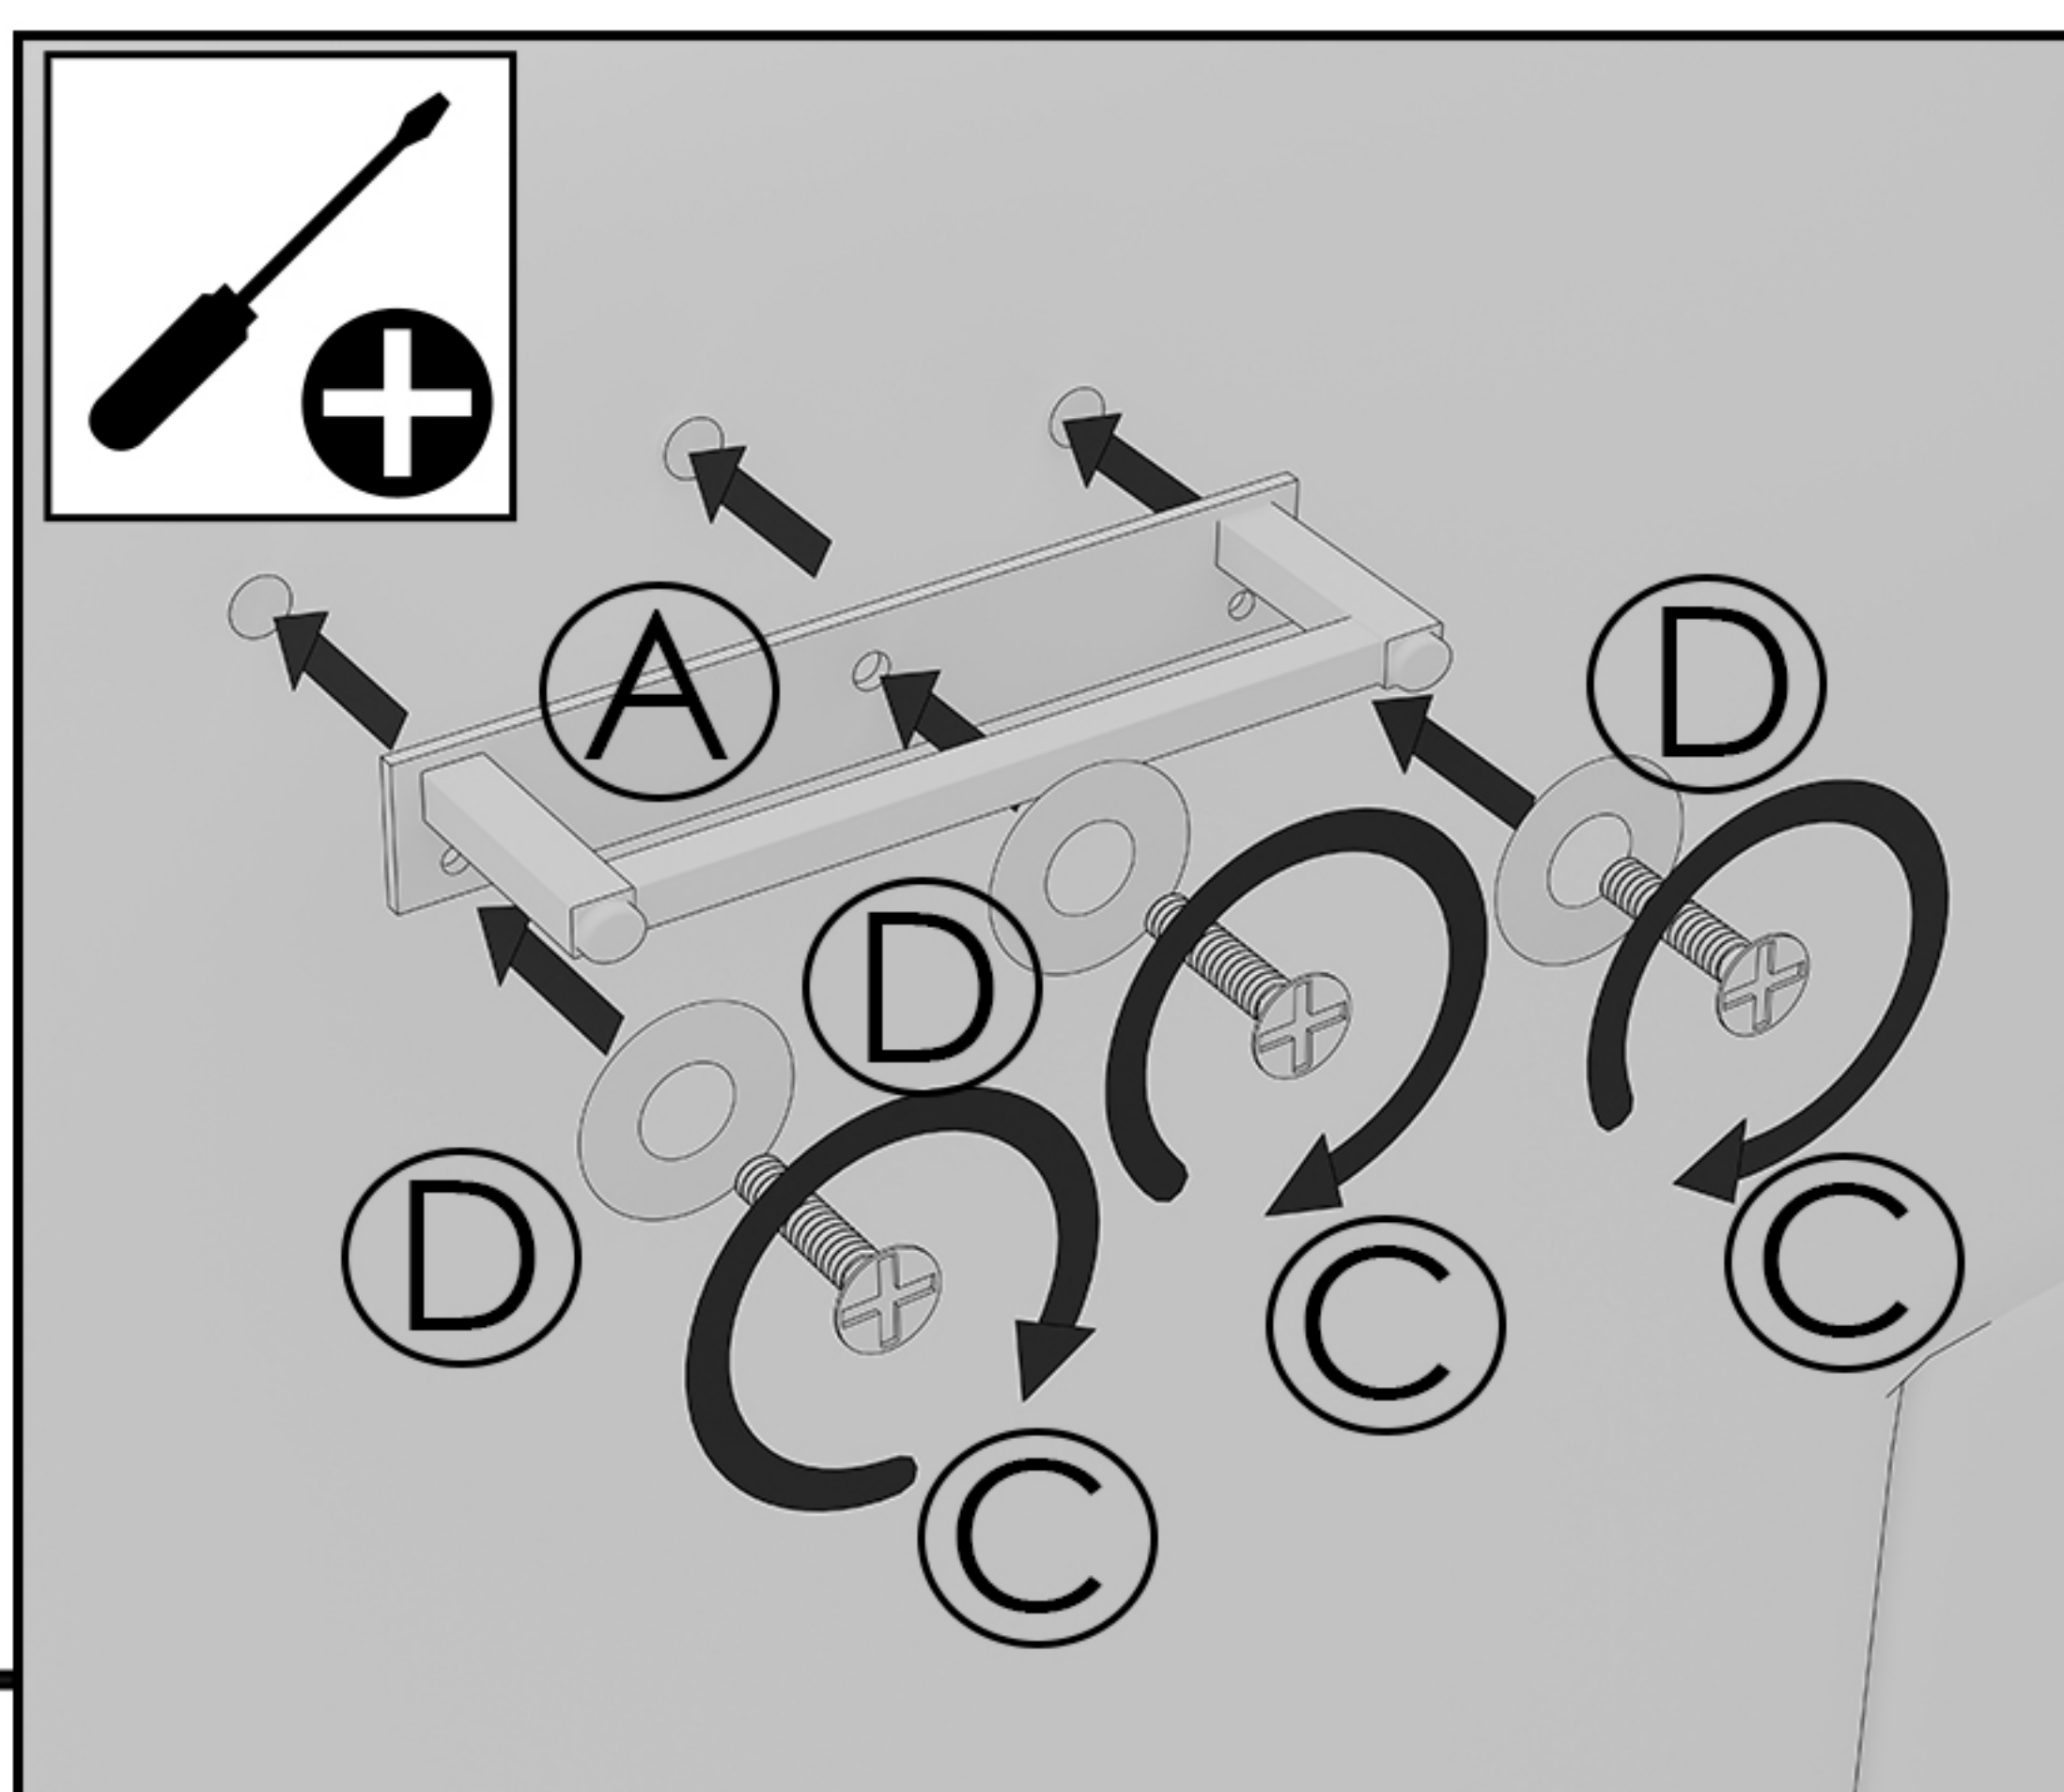


Lhf

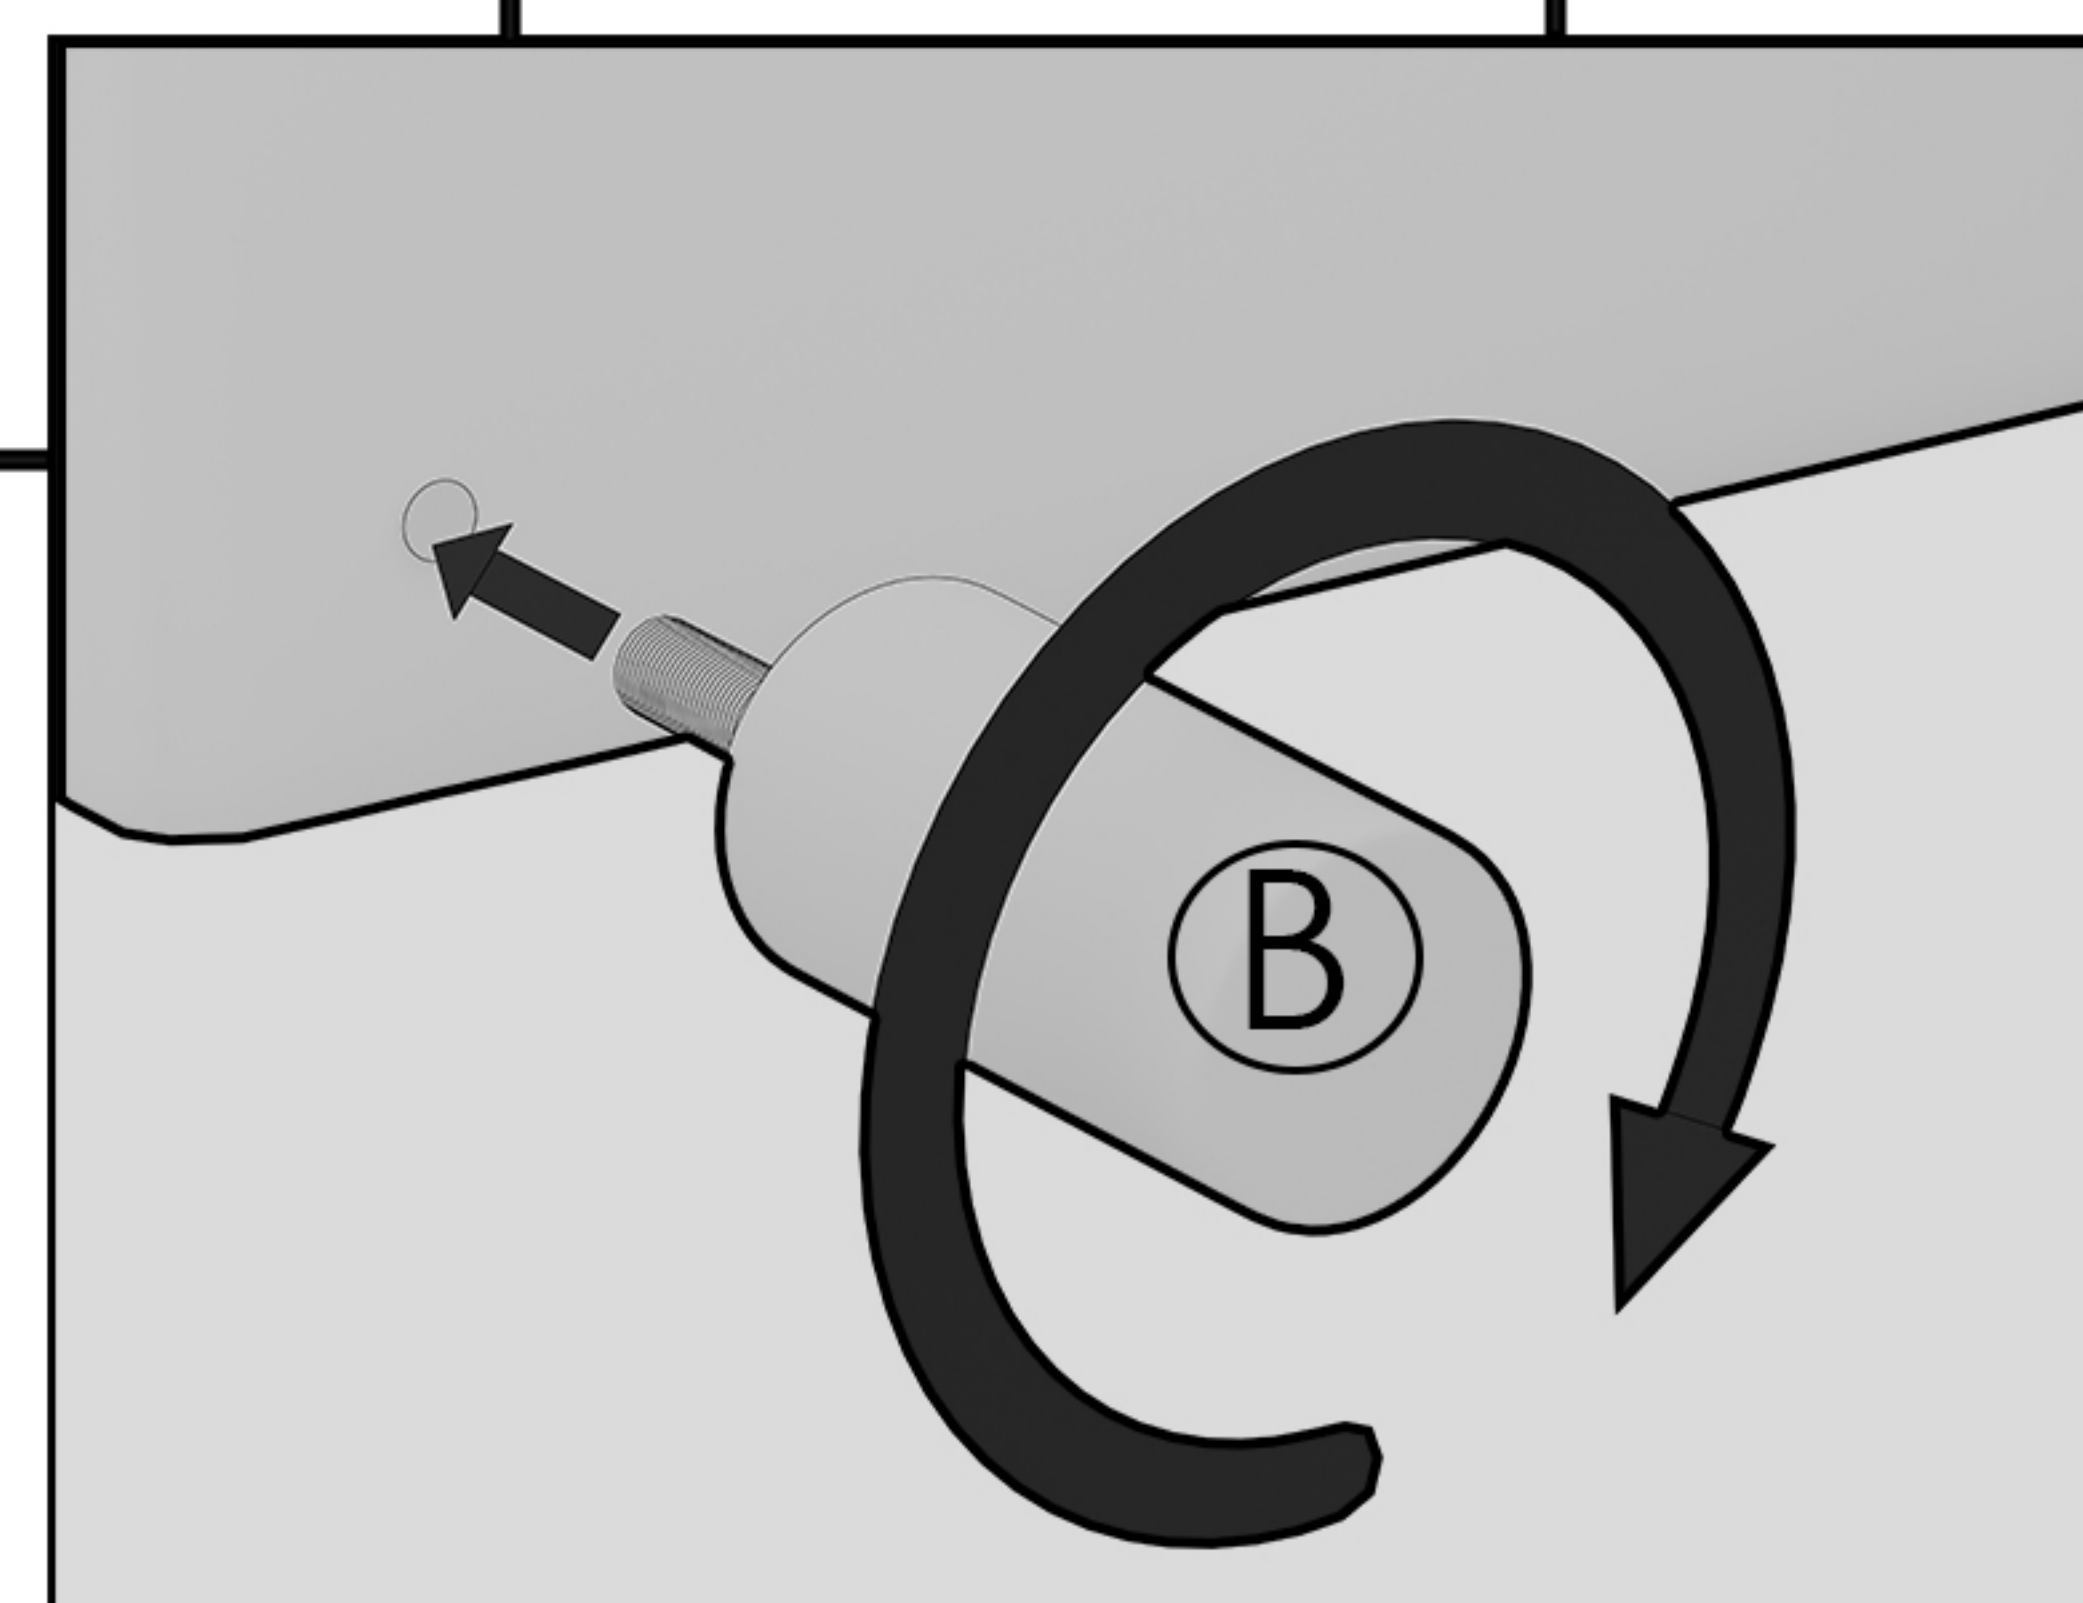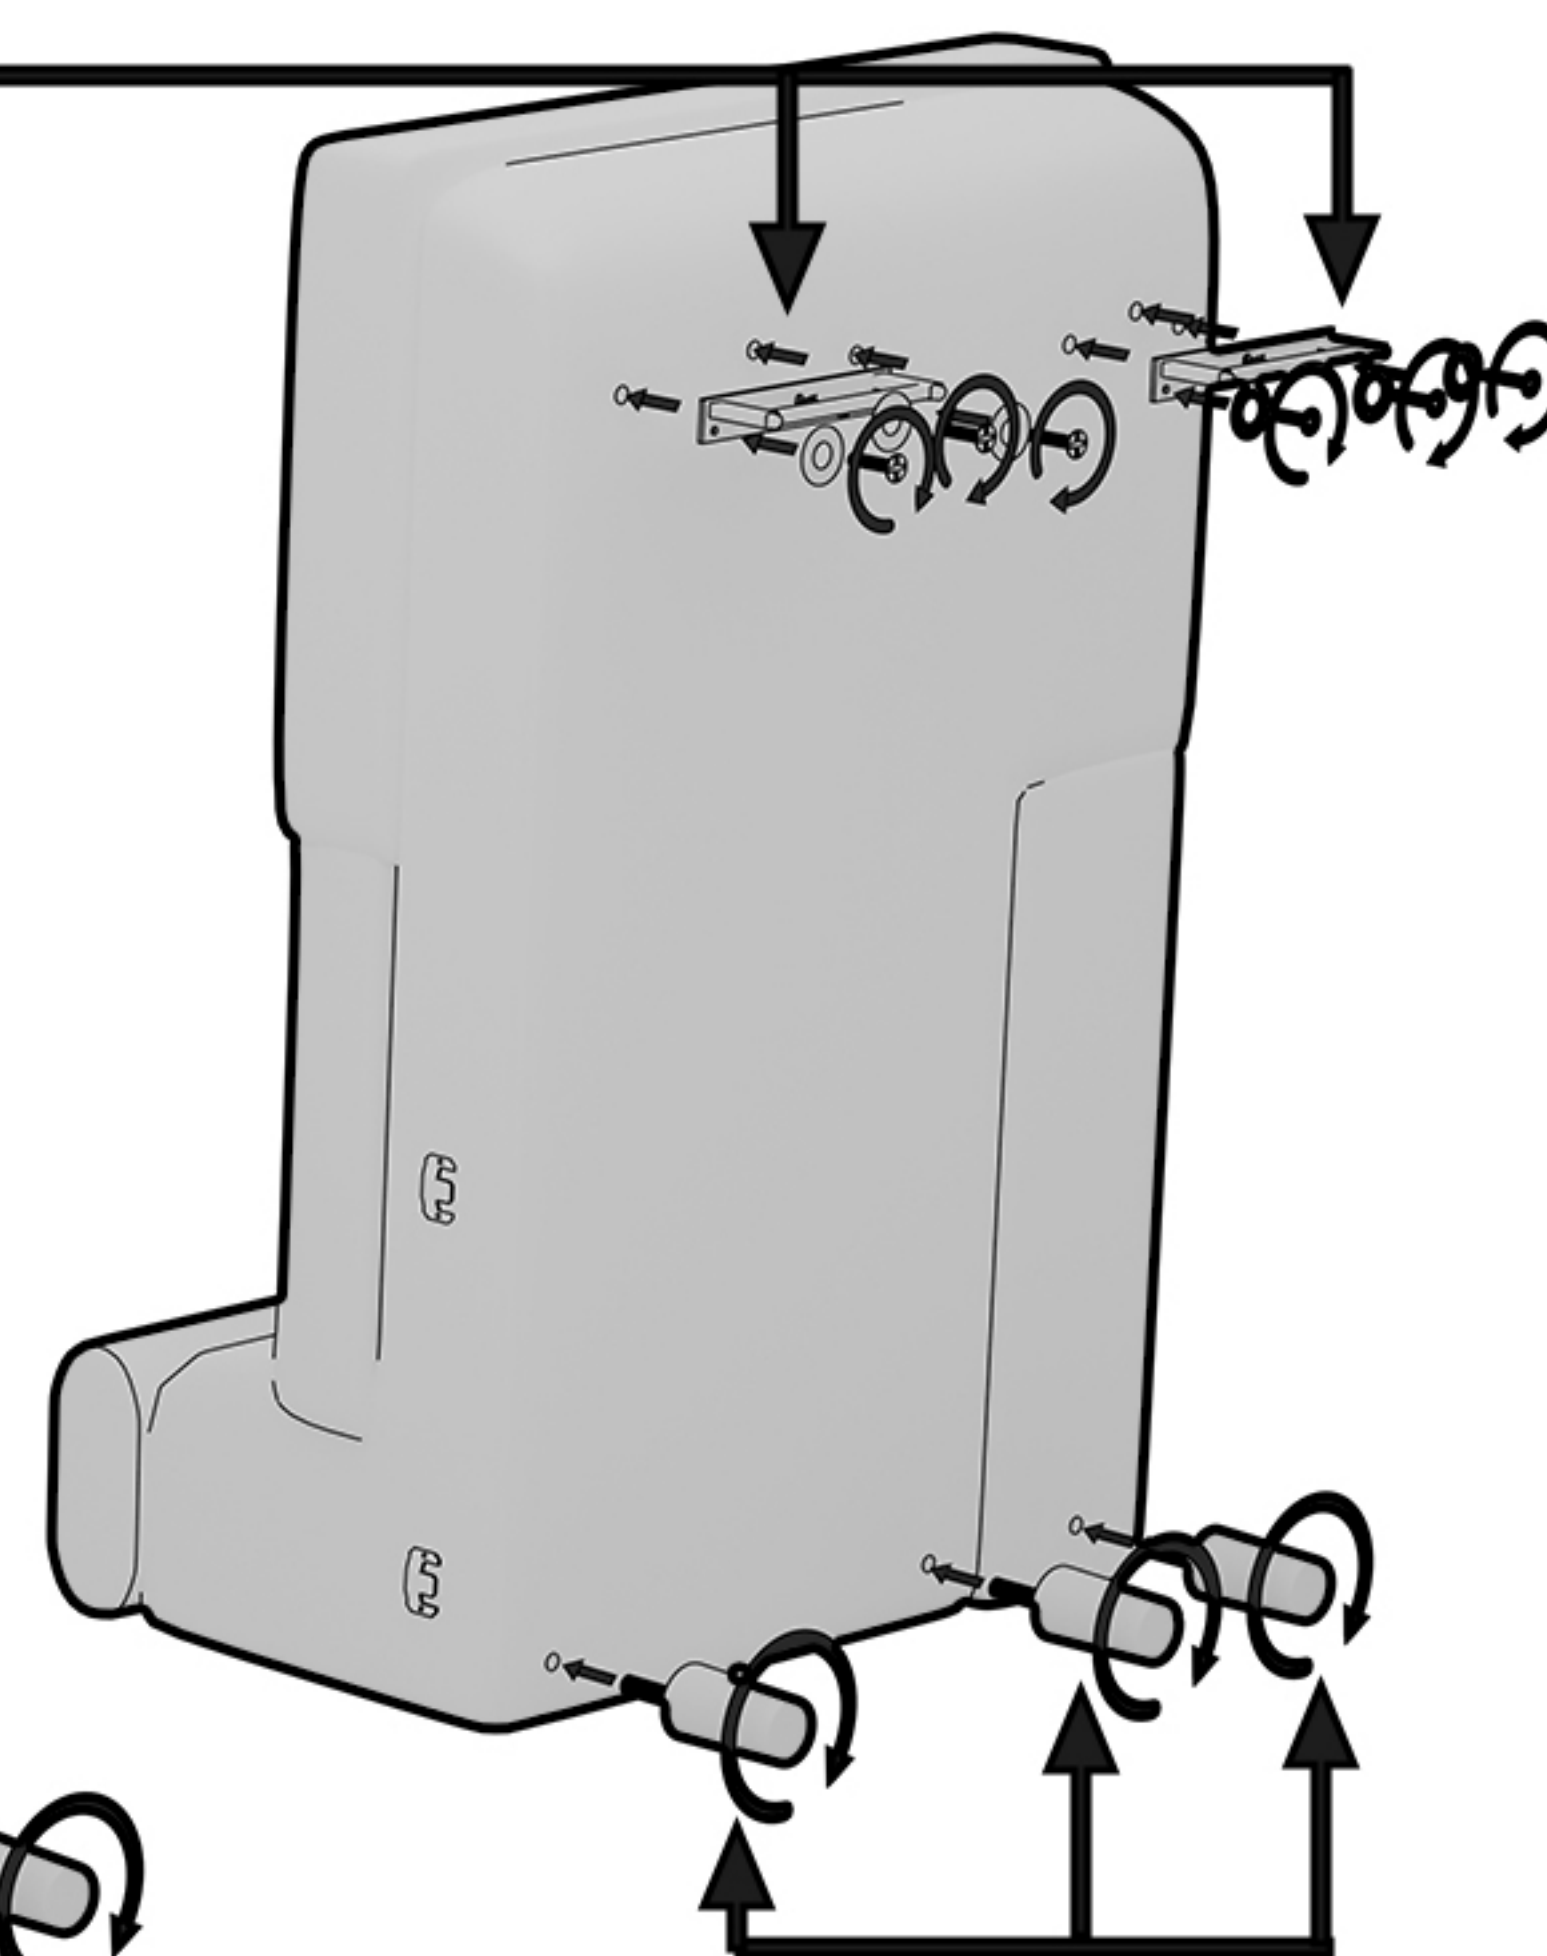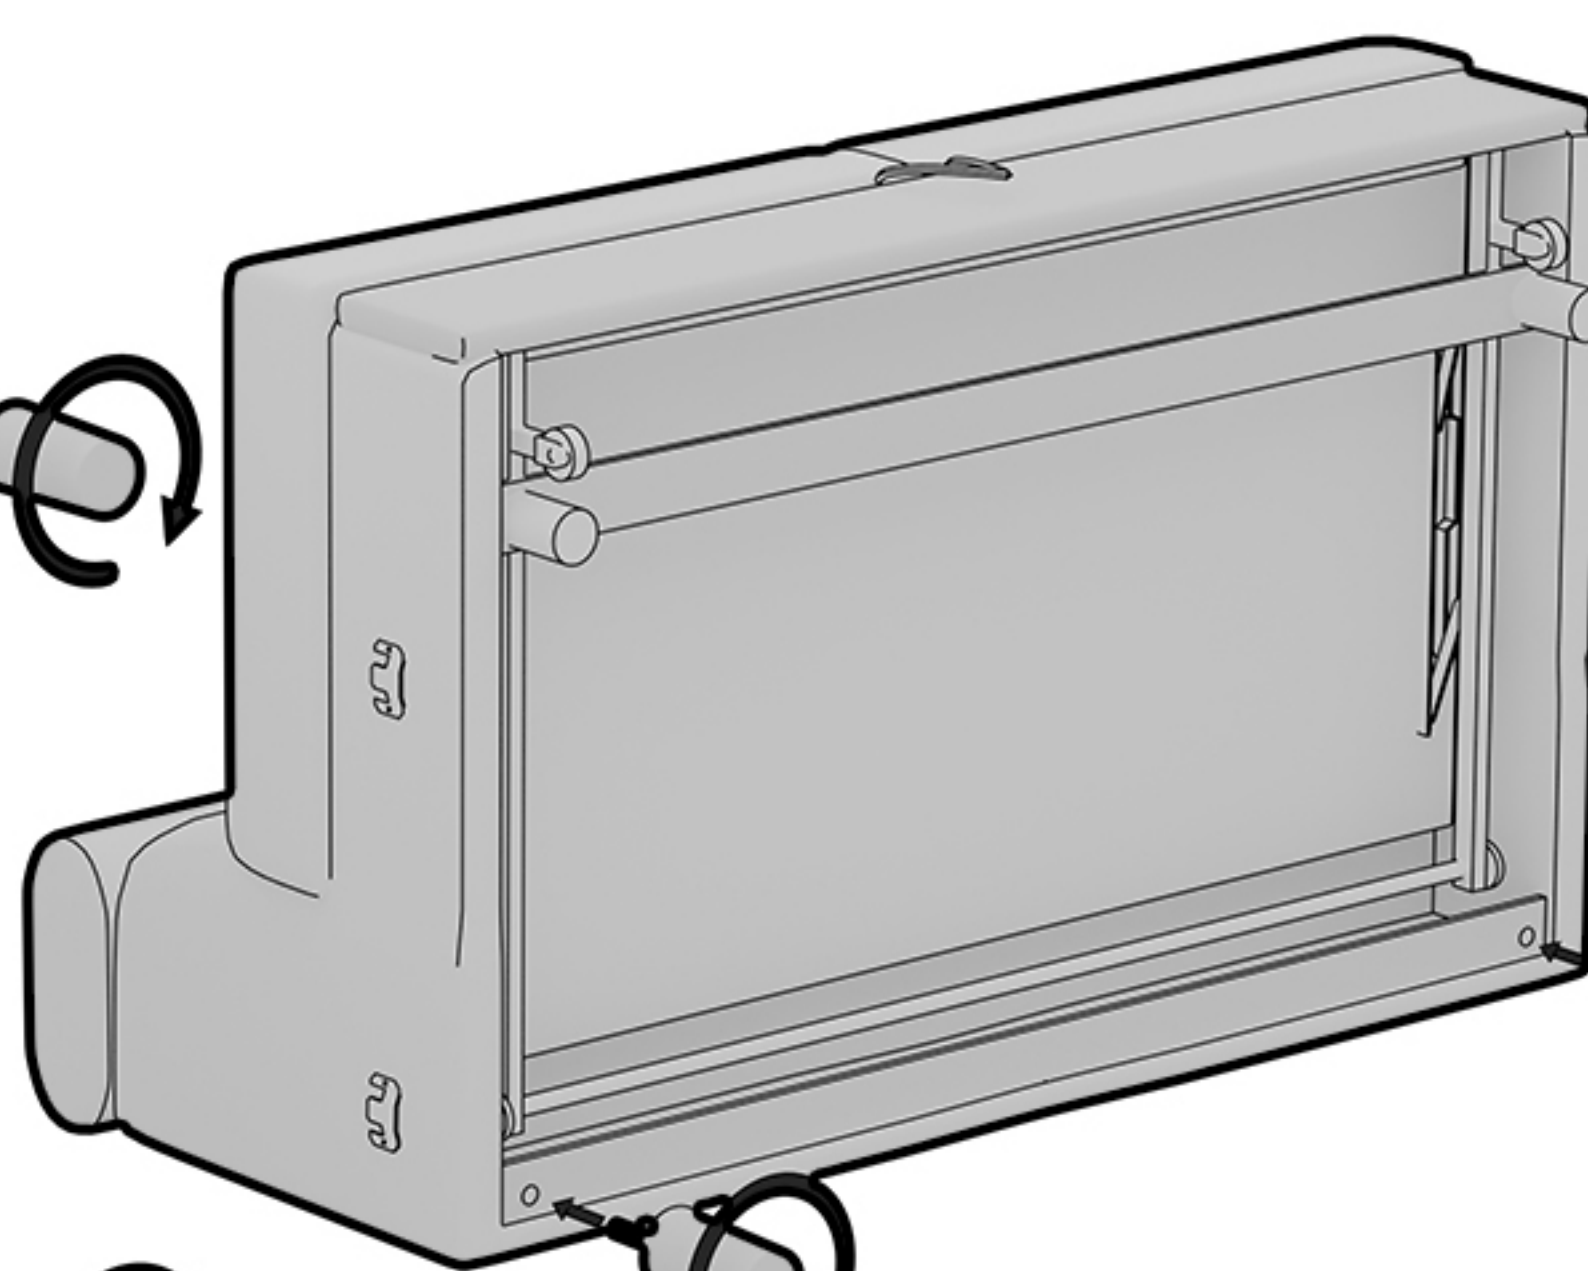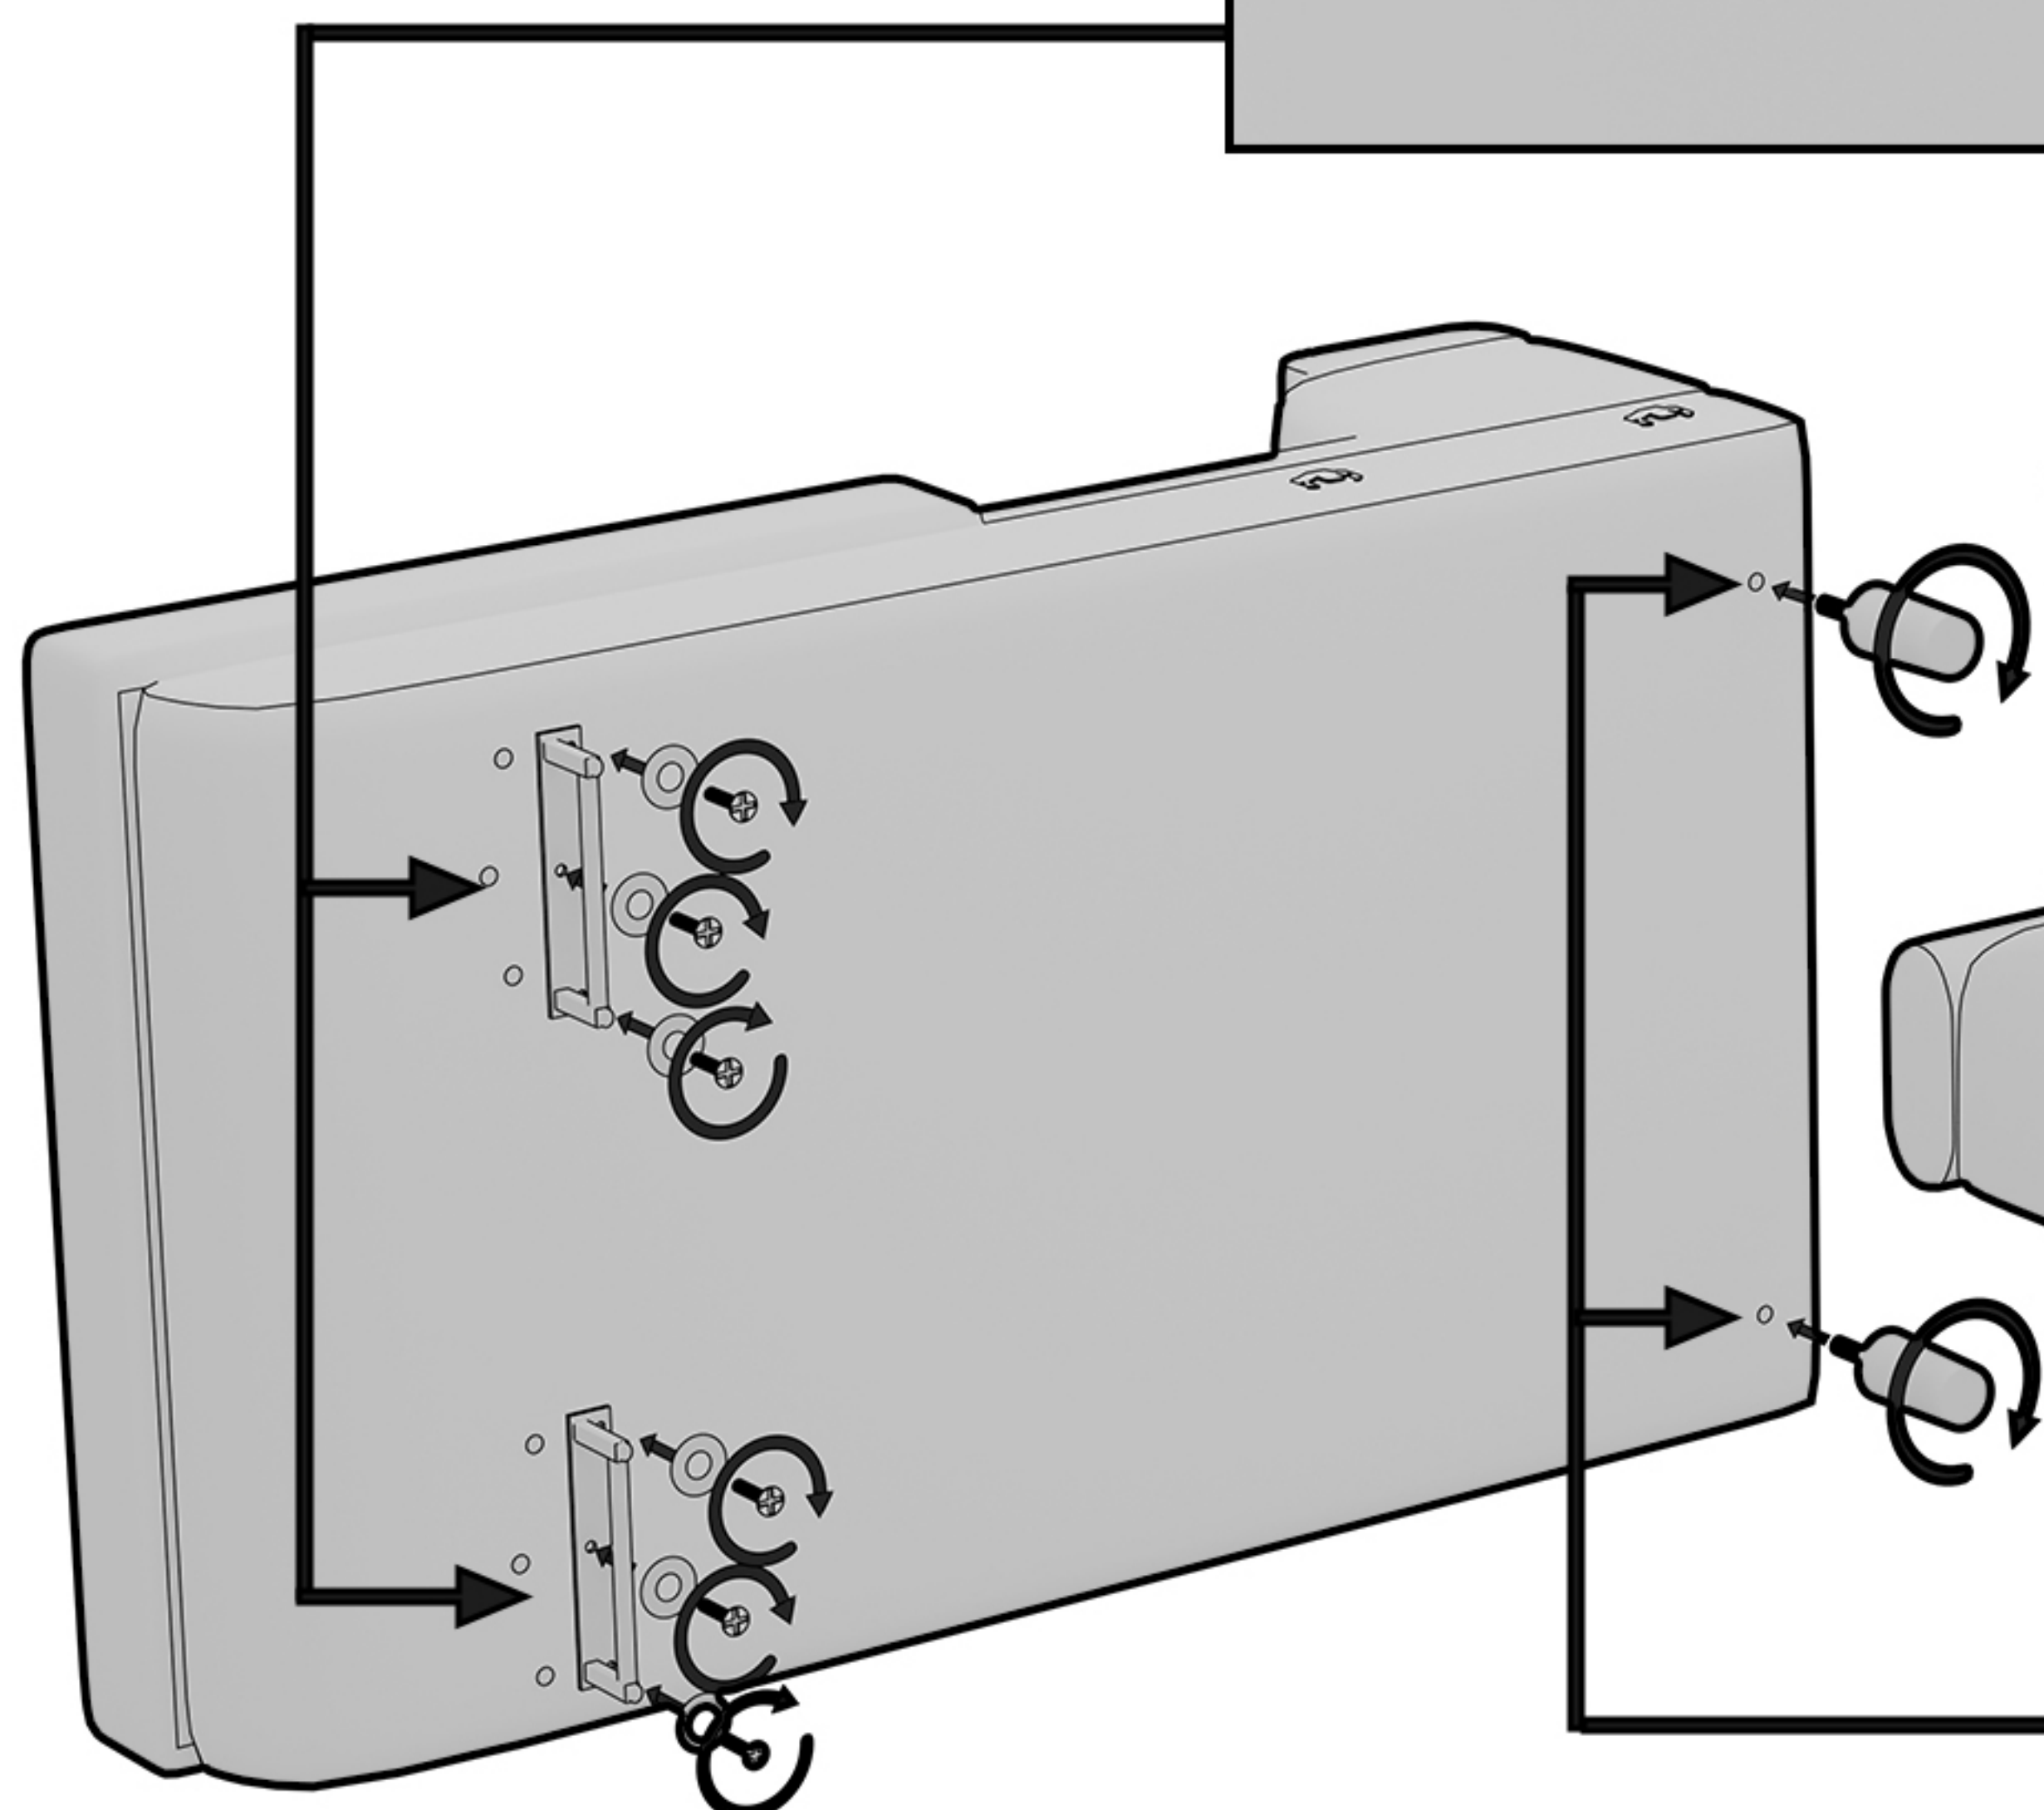

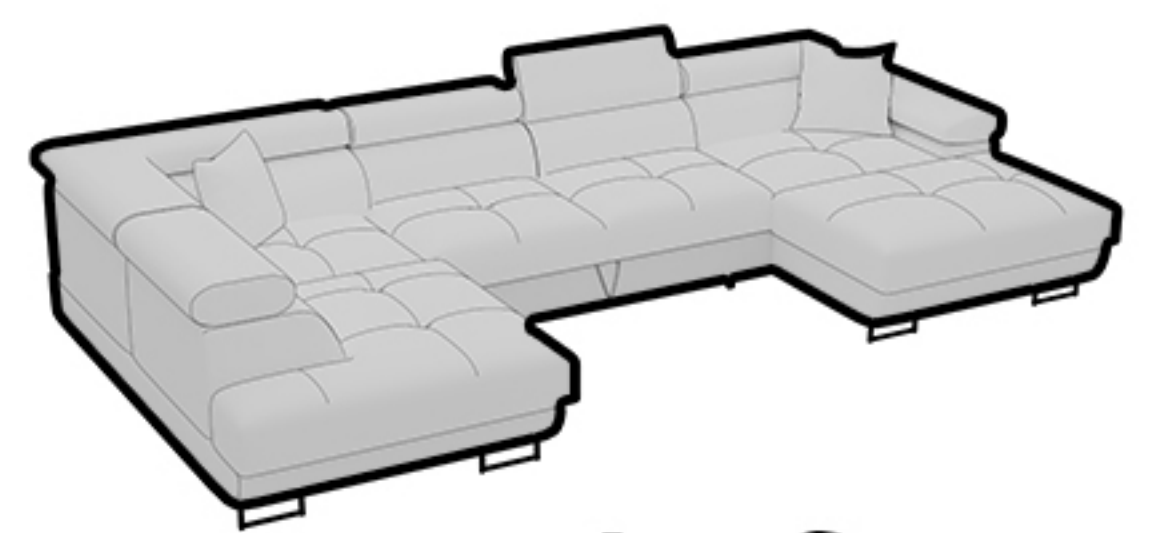

Lhf

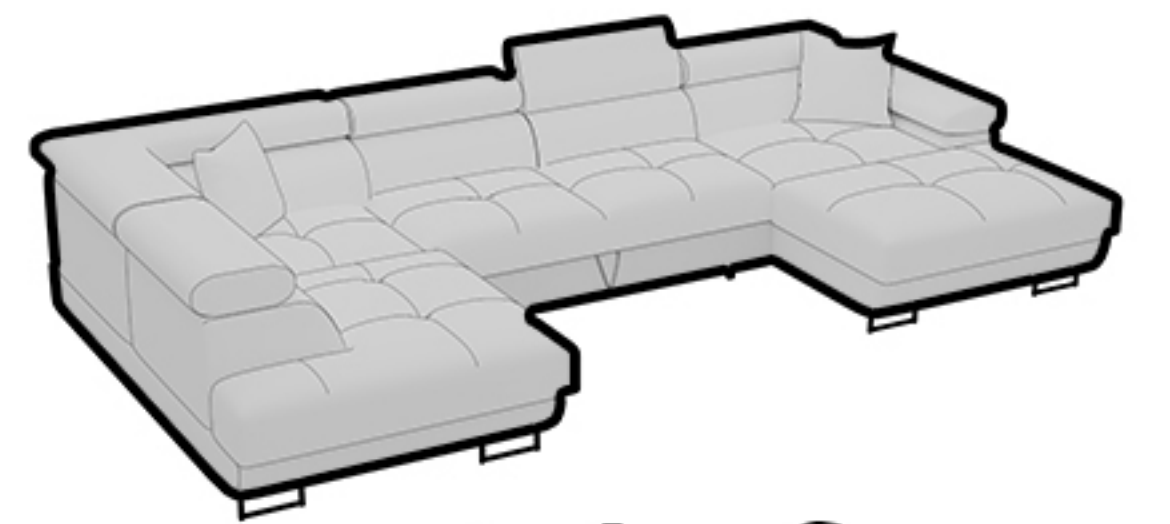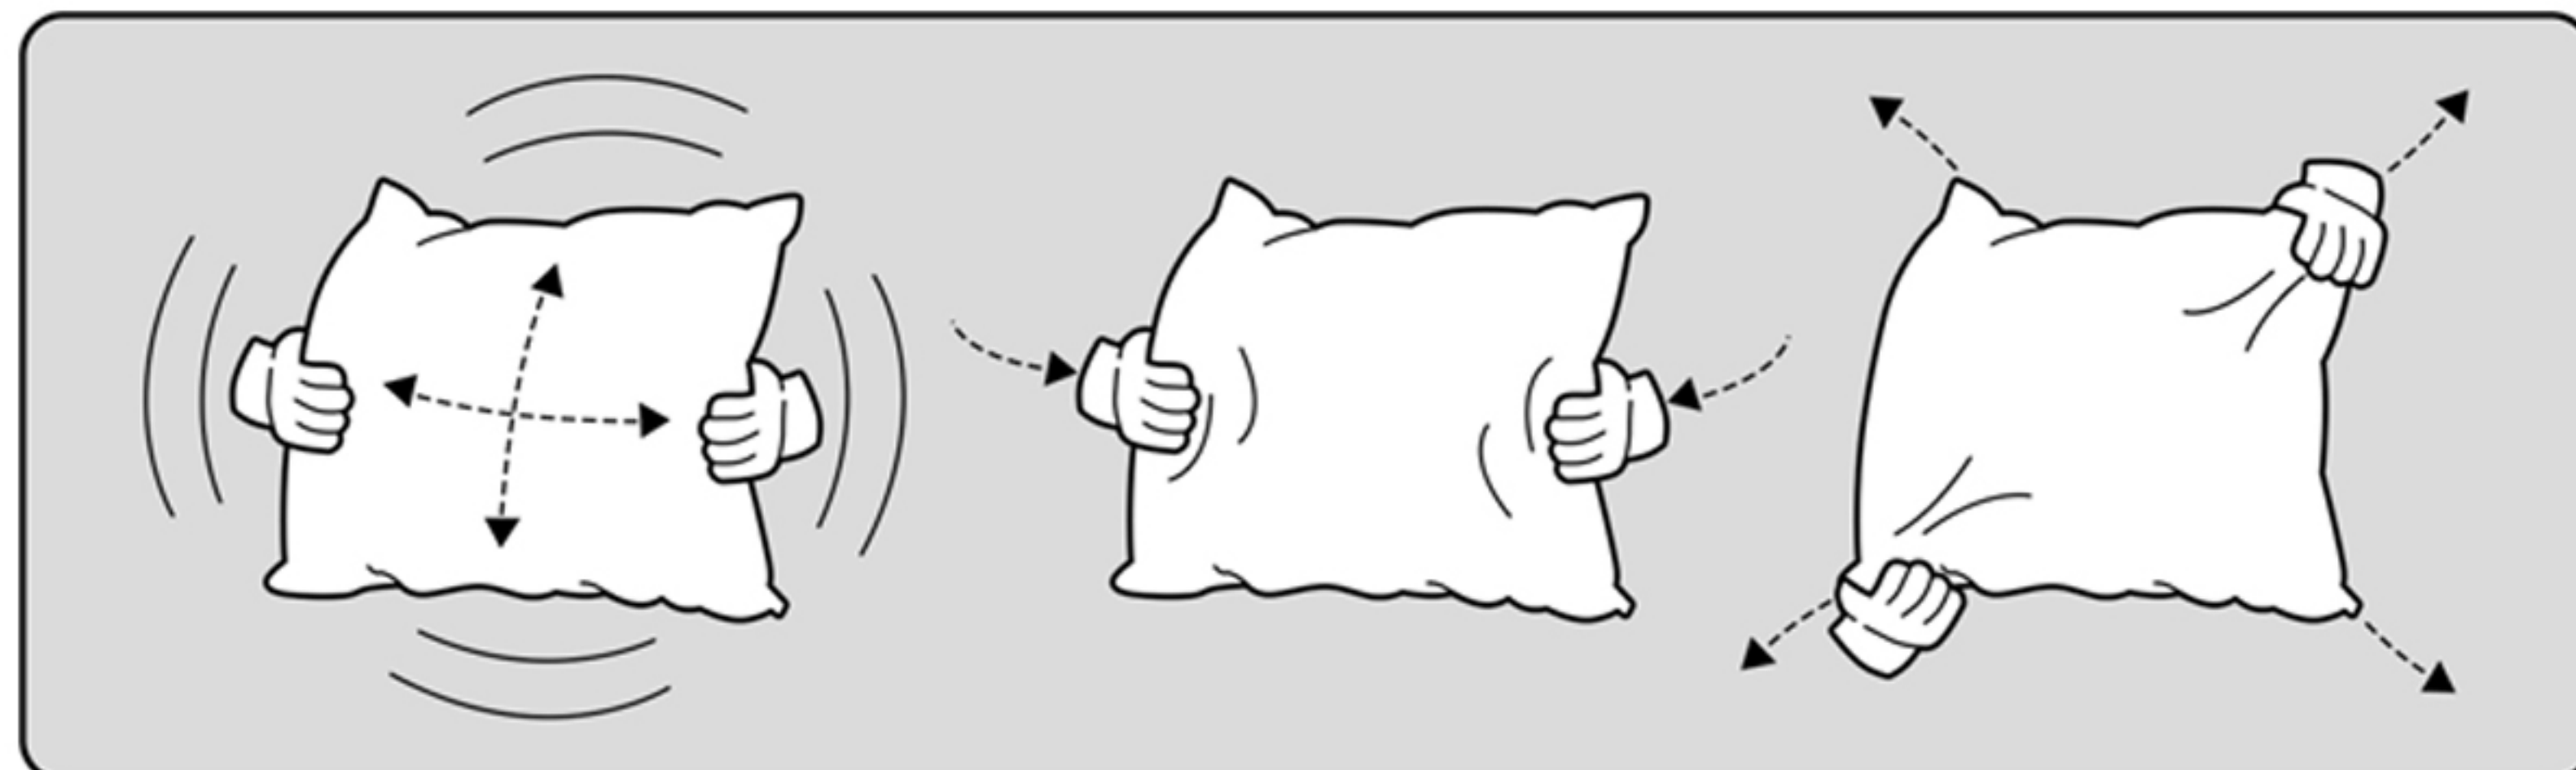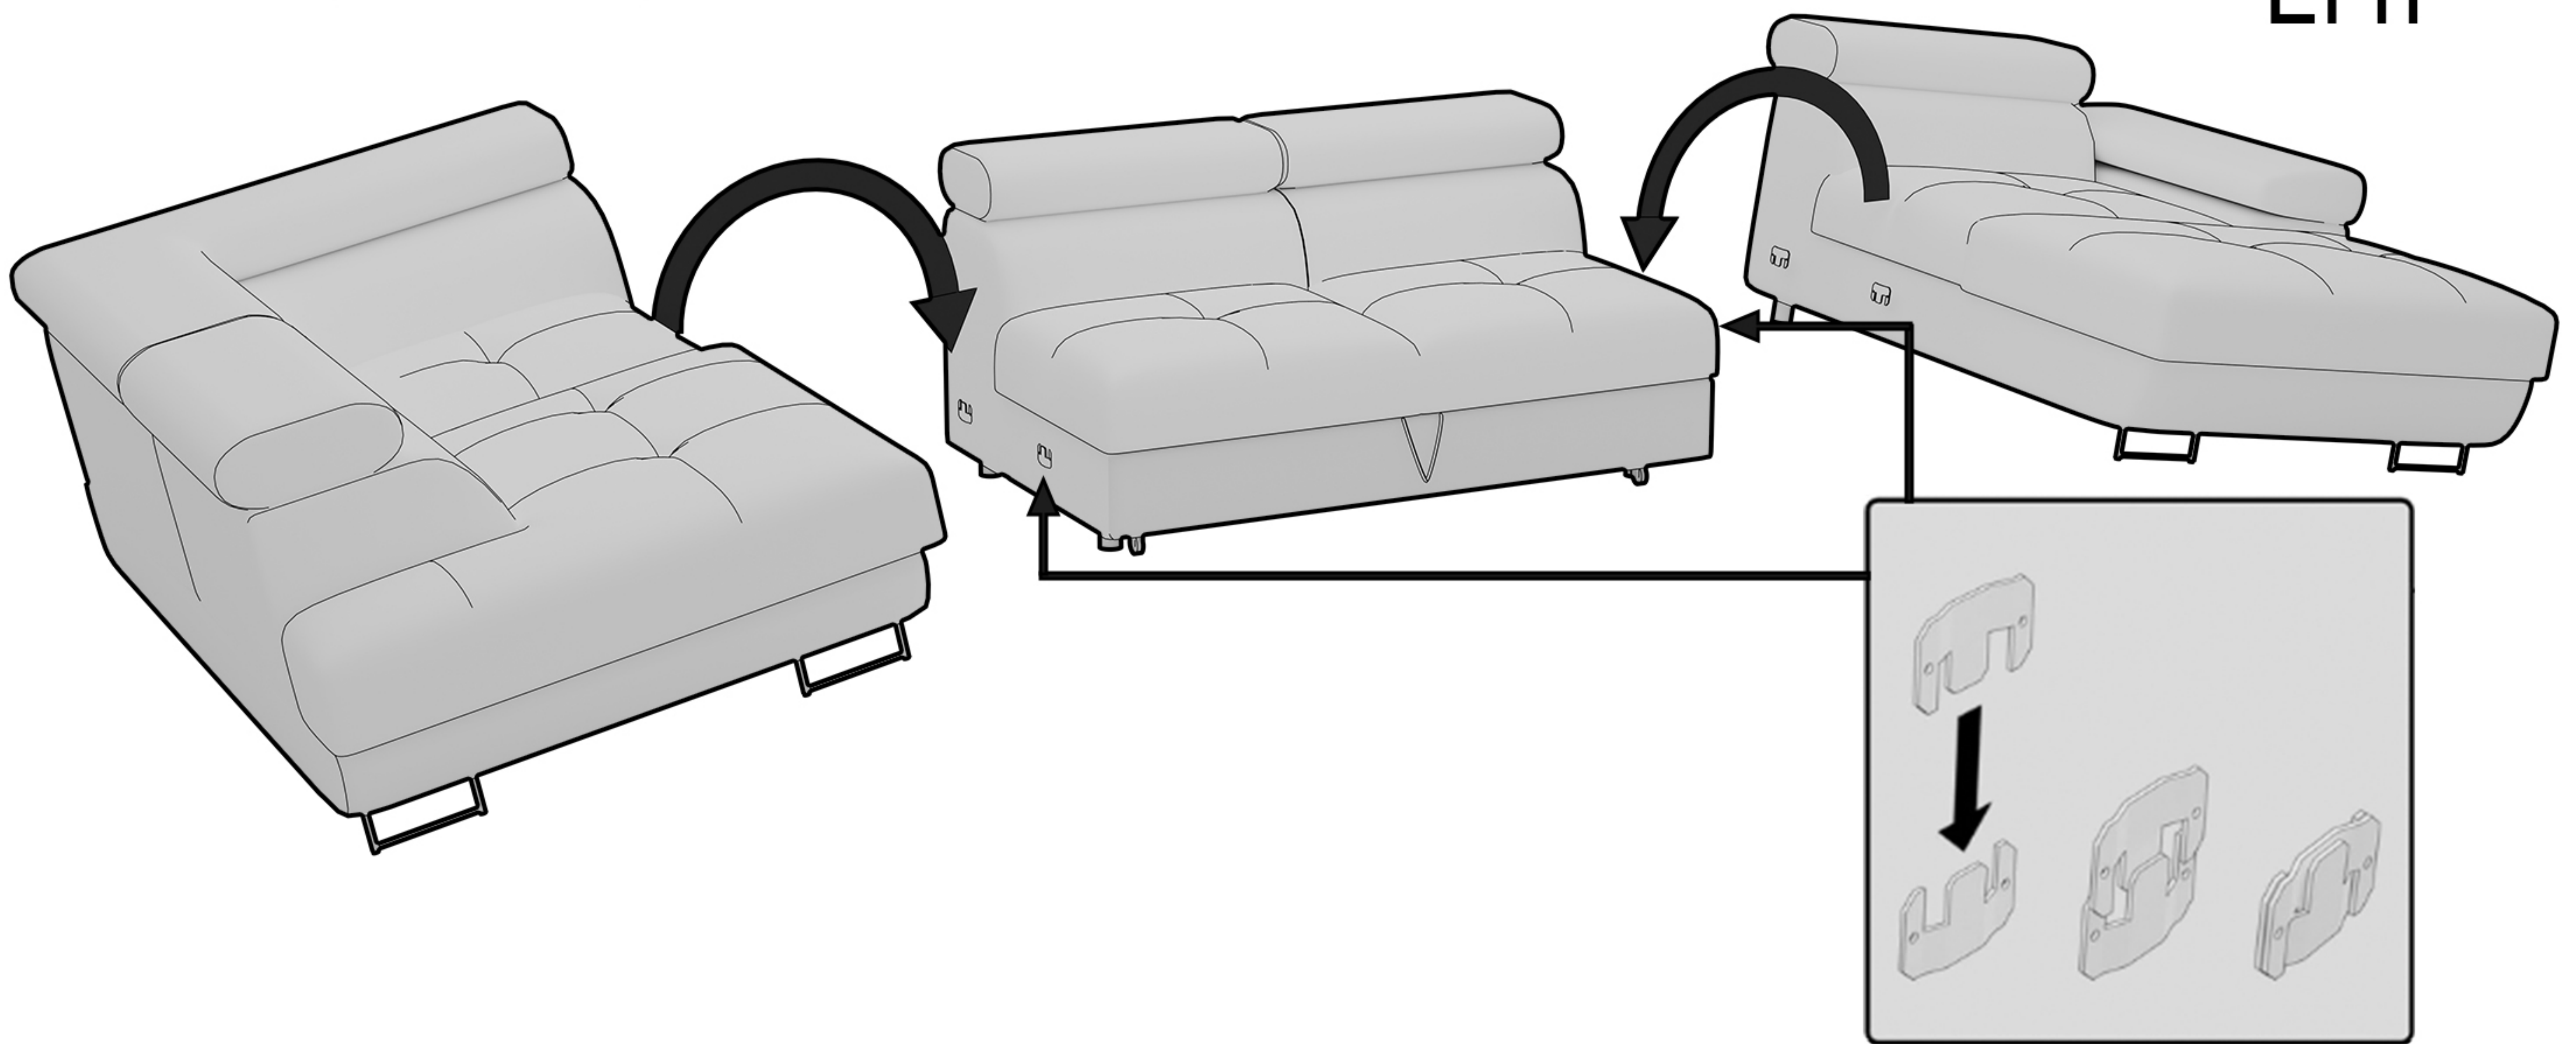

Lhf

