


MALWA M8 140

Mebel należy montować na miękkim podłożu

Mebel należy konserwować typowymi środkami do konserwacji mebli


Furniture should be assembled on the soft surface

Piece of furniture should be preserved by the typical furniture care substances

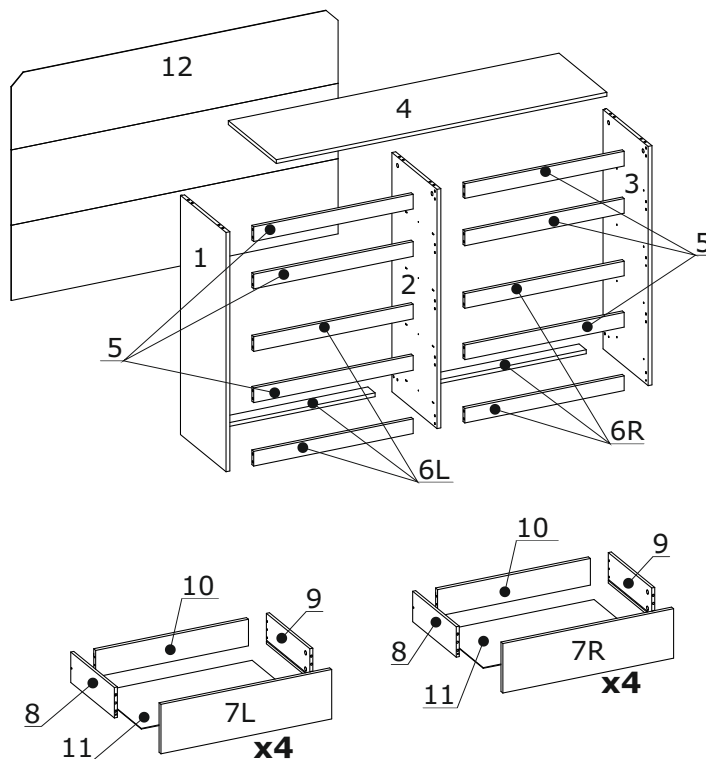


OKUCIE: / FITTINGS:



B1 8x35 x40	M1 12x15 x18	T1 x44	S5 3,5x16mm x14	R22 350mm x8
B2 8x60 x9	M3 10x15 x32	G2 1,4x25mm x81	T19 x2	S7 6,3x13mm x24
B3 6x30 x32	C2 x32	F36 x6	T20 x2	L1 x2
T3 L-64 x3	G7 x1	K1 7,0x50 x16	K5 x8	
S6 4 x 16 mm x16	S8 3 x 20 mm x32			

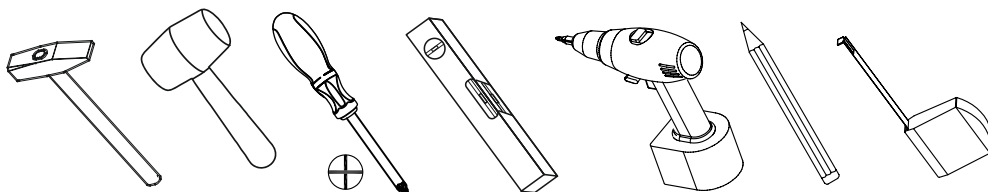


1

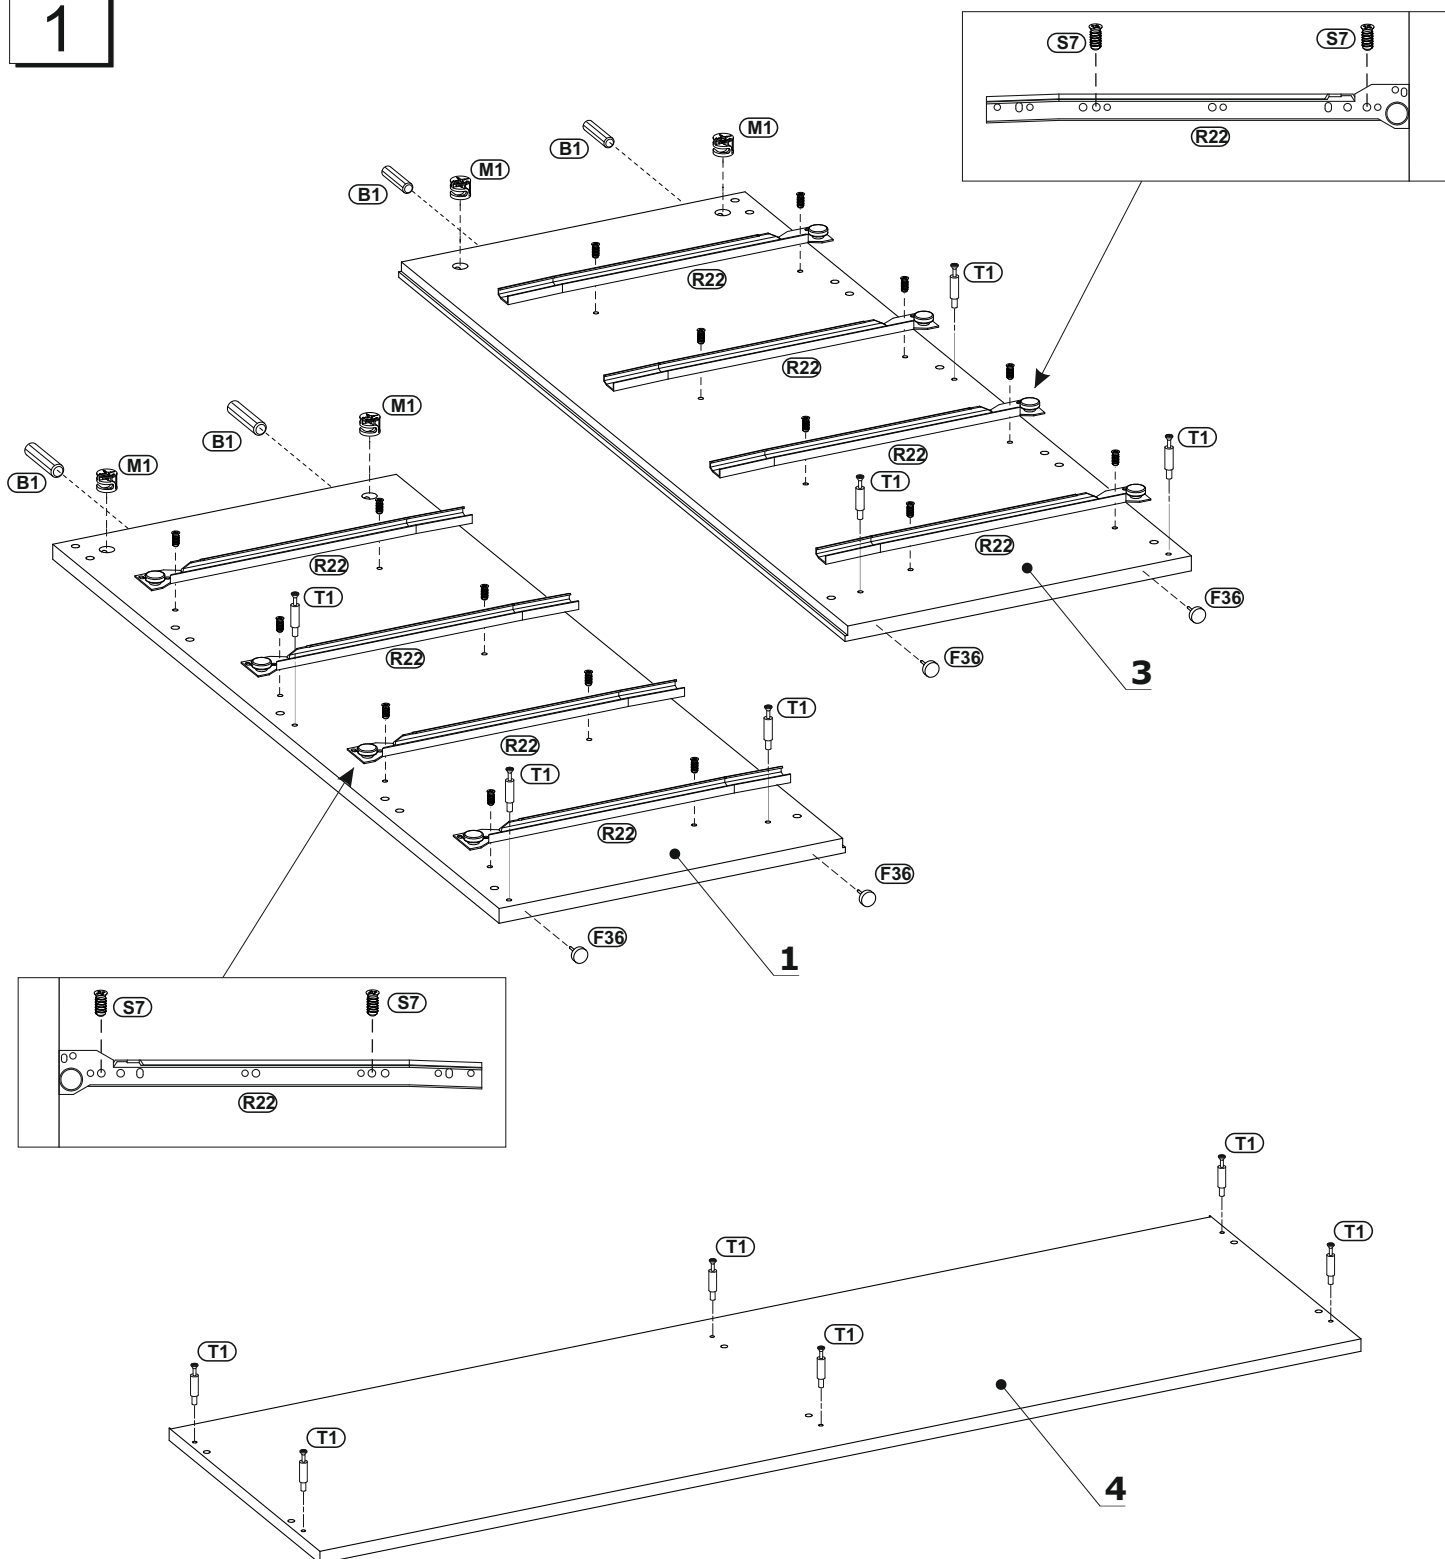


B1 8x35 x4	M1 12x15 x4
F36 x4	R22 350mm x4
T1 x12	
S7 6,3x13mm x16	


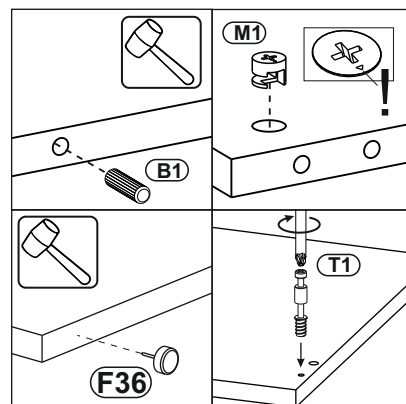
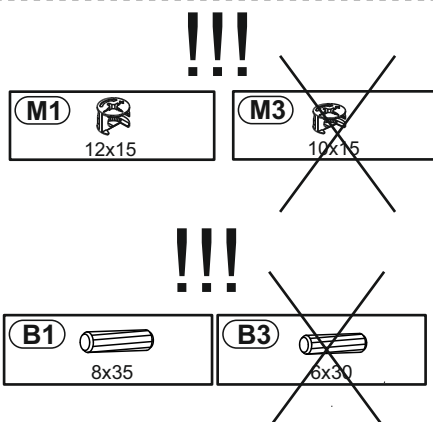


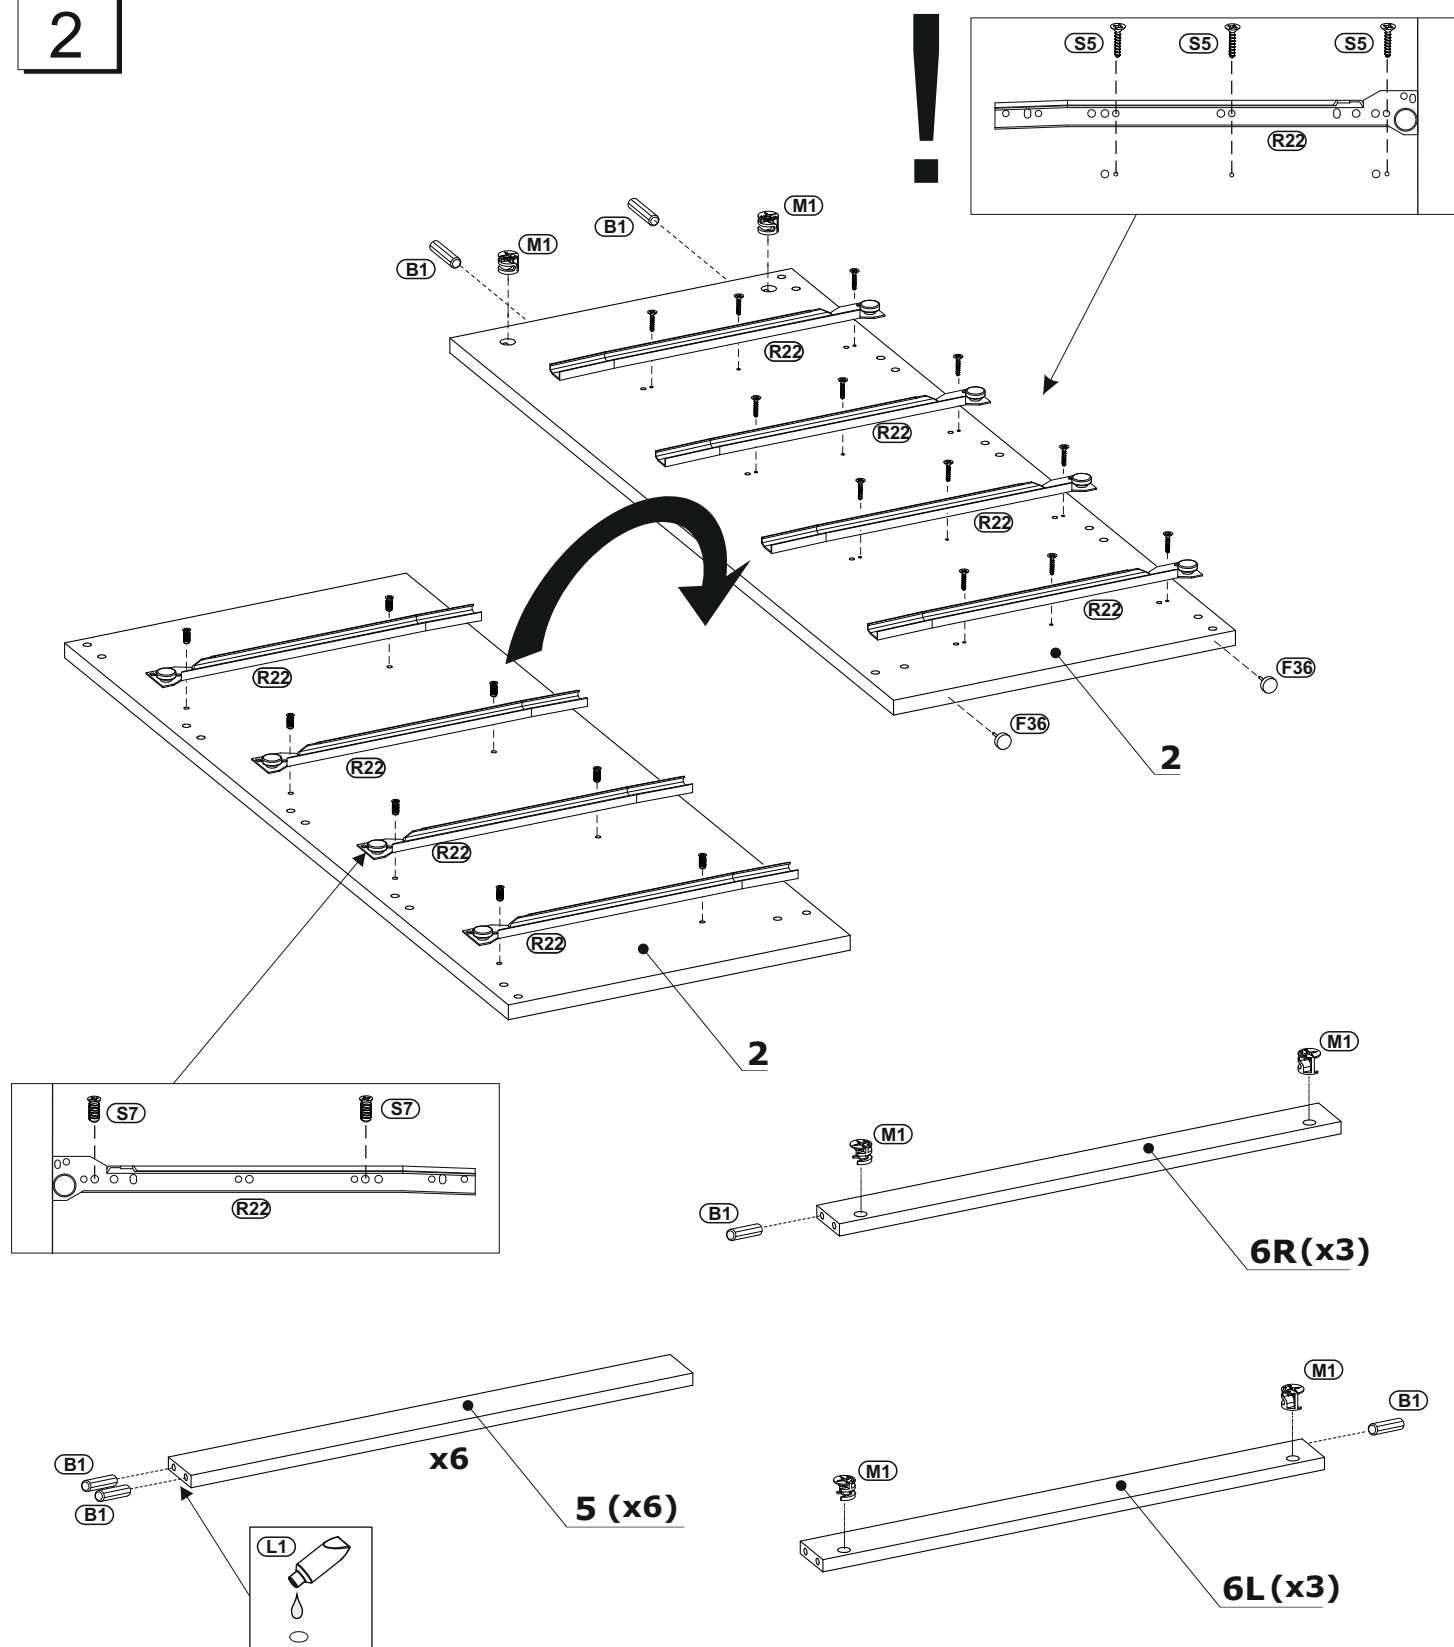







B1 8x35 x20	M1 12x15 x14	L1 x2
F36 x2	R22 350mm x4	
S7 6,3x13mm x8		
S5 3,5x16mm x12		

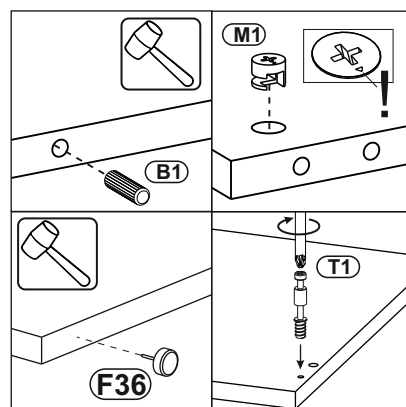




3

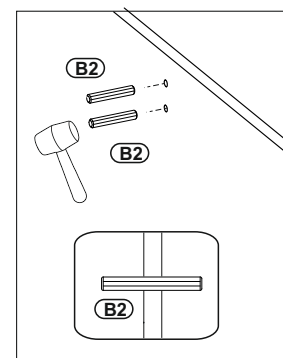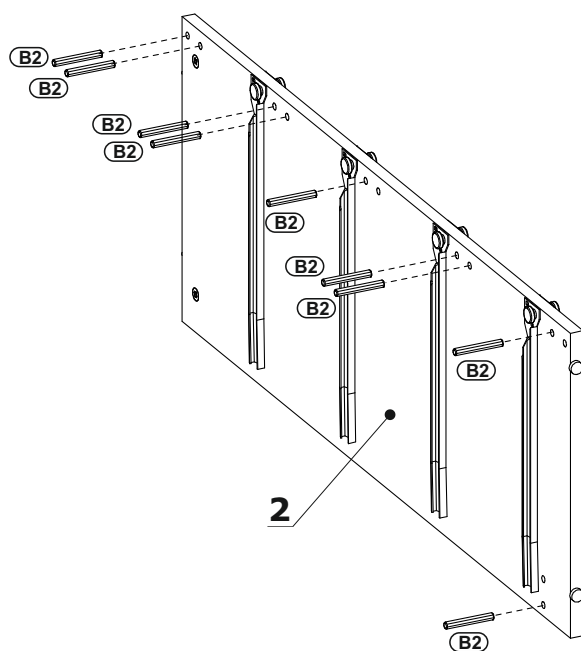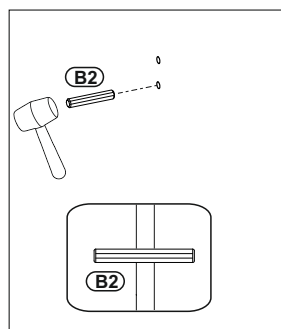




4

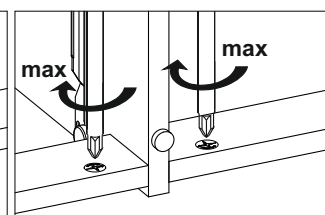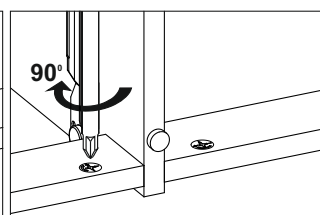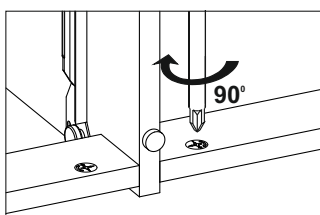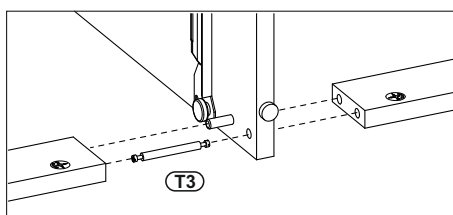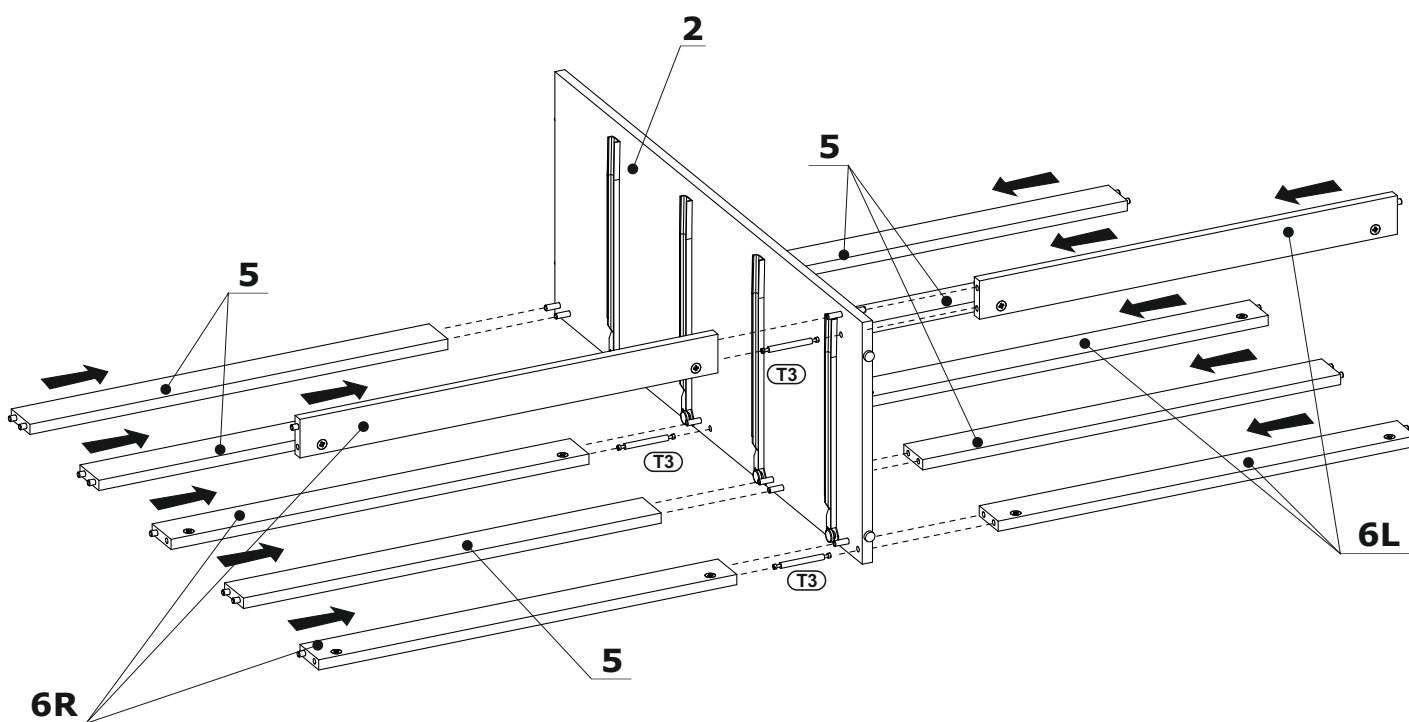


5

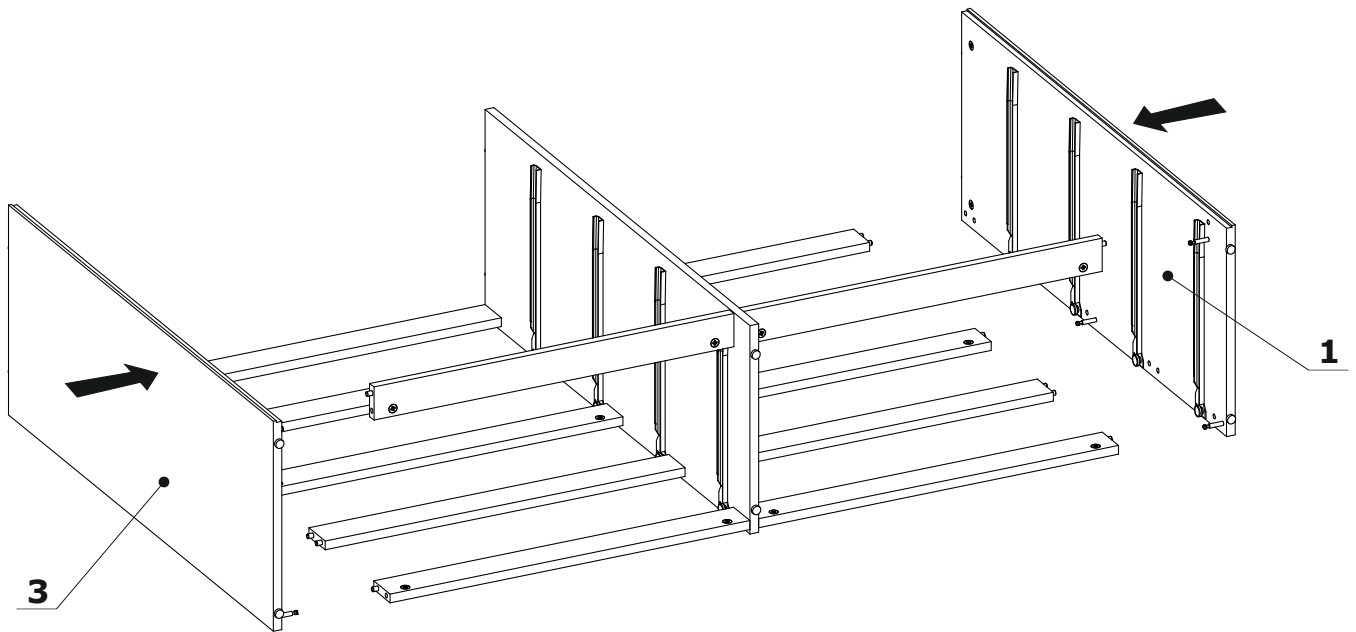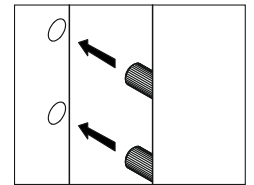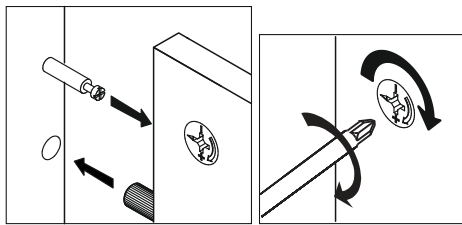


6

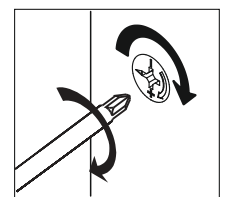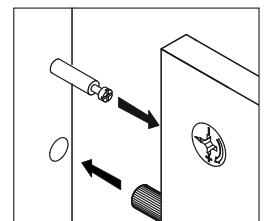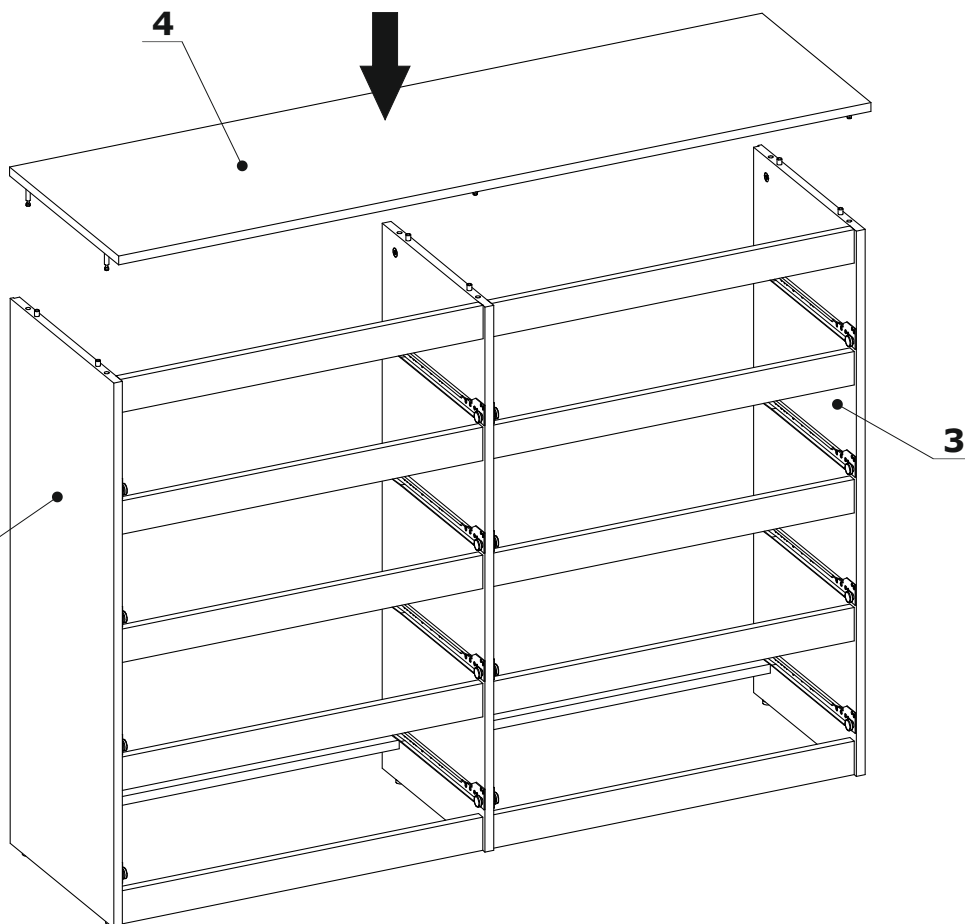

7

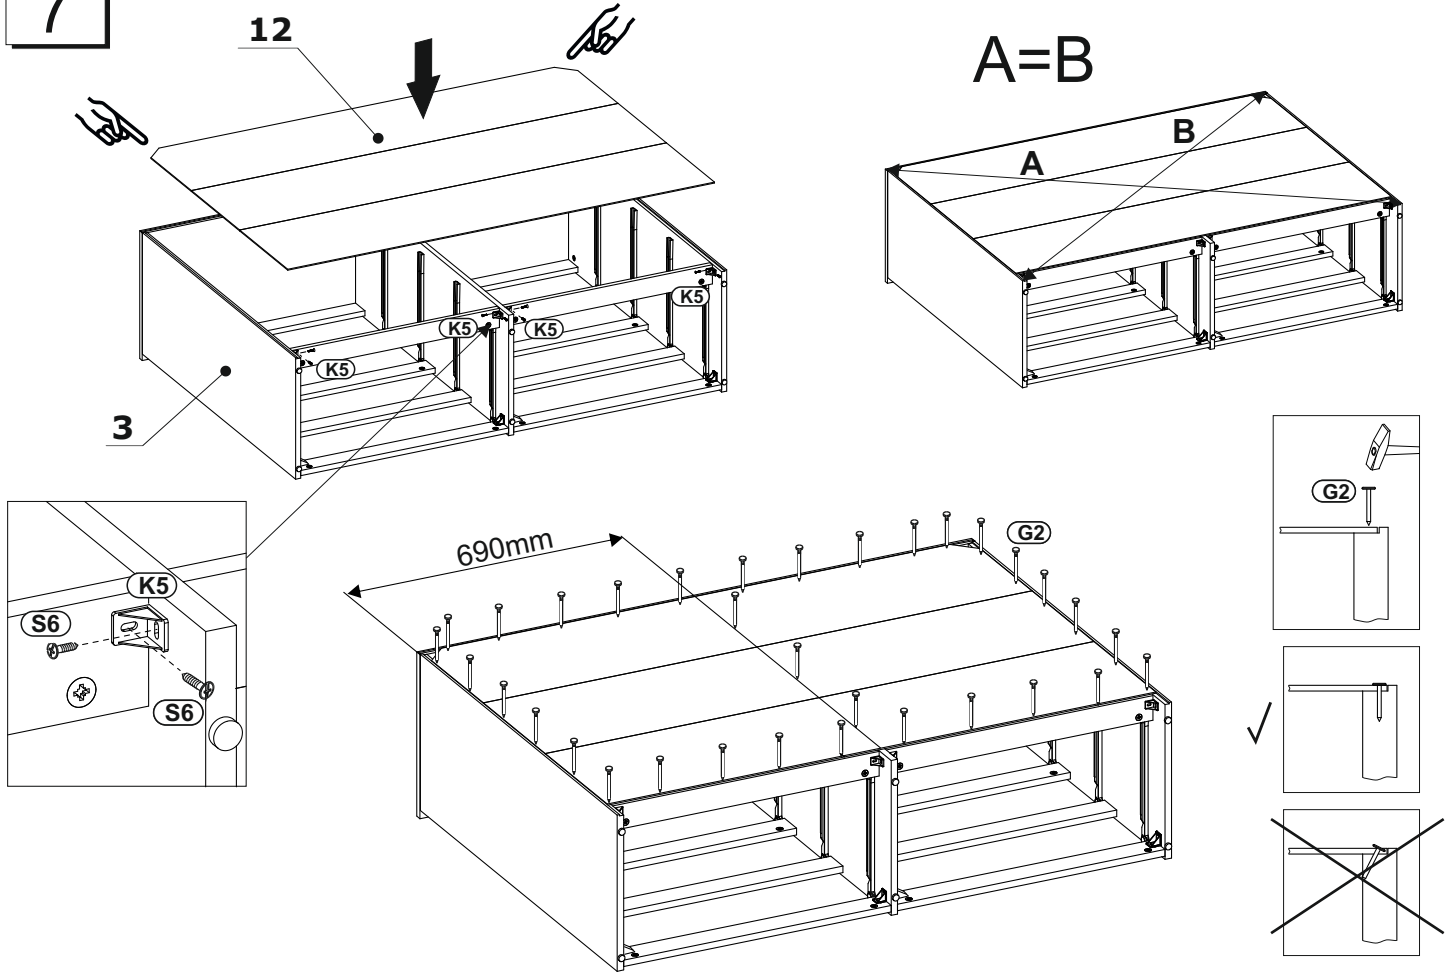


8

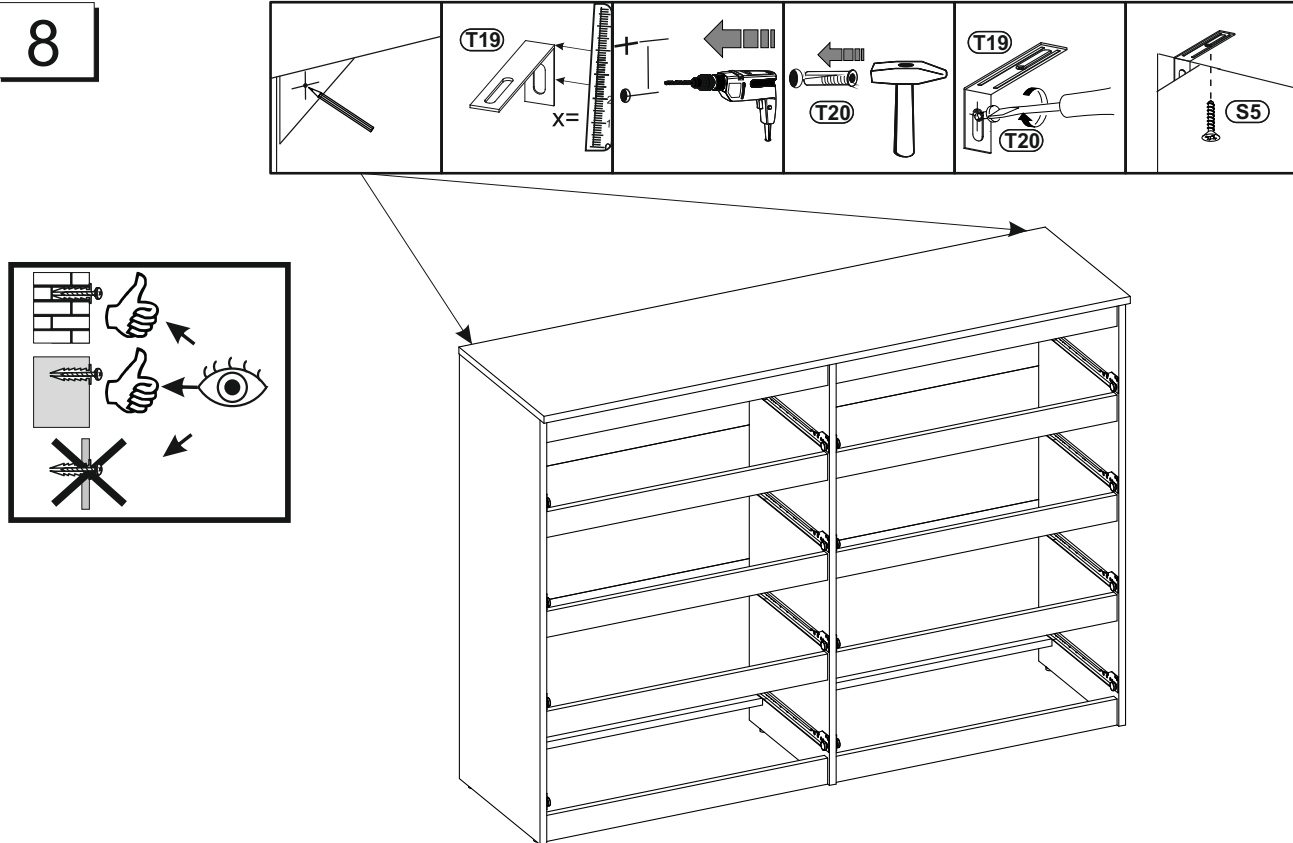


K5		x8	S5		3,5x16mm	x2	T19		x2	T20		x2	G2		1,4x25mm	x33	S6		4 x 16 mm	x16
-----------	--	----	-----------	--	----------	----	------------	--	----	------------	--	----	-----------	--	----------	-----	-----------	--	-----------	-----

9


!!!

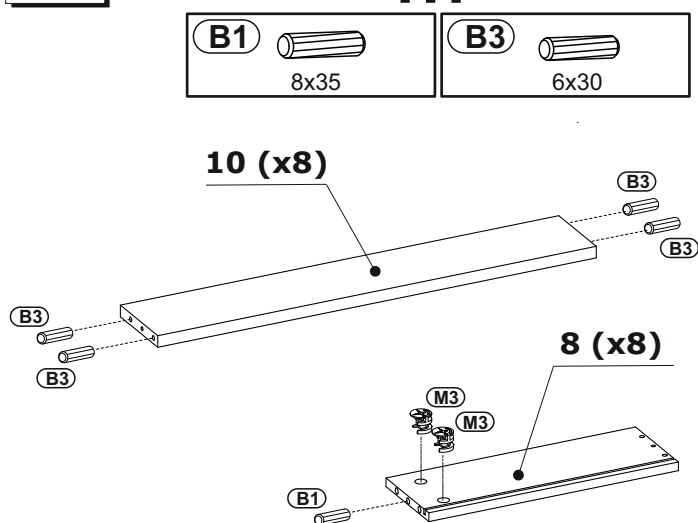





7L (x4), 7R (x4)

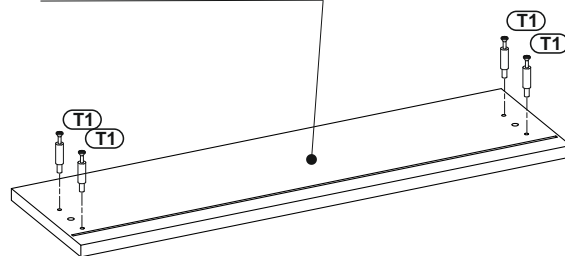


9 (x8)

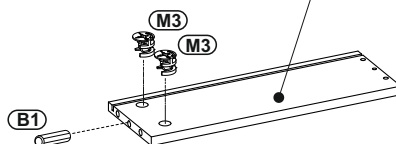


10

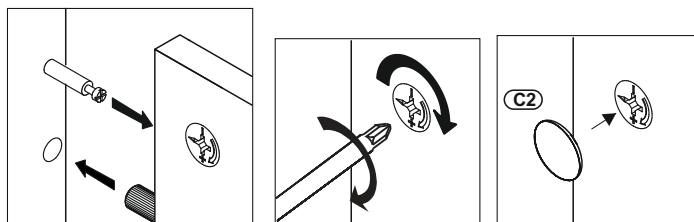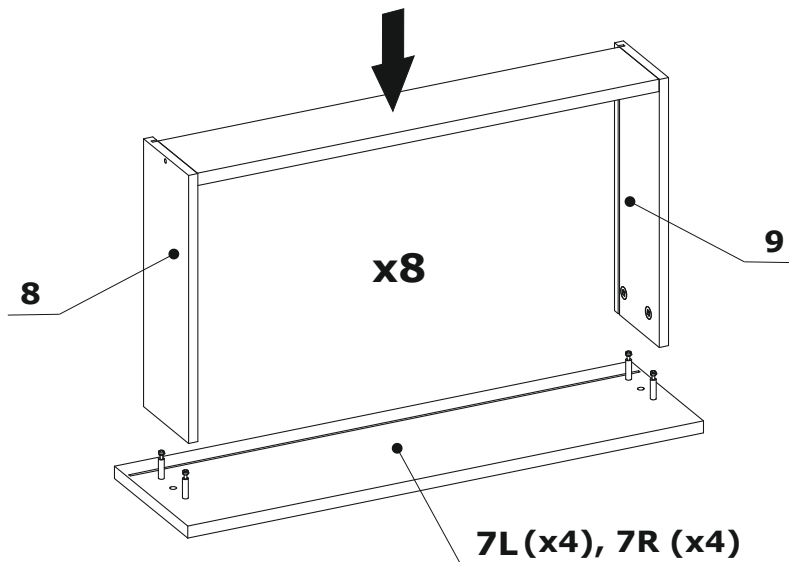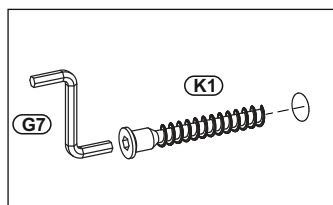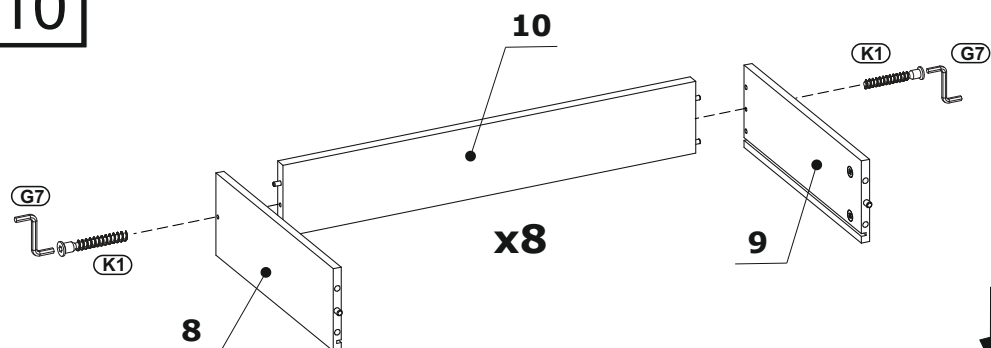

B3 6x30 x32	B1 8x35 x16	C2 x32
M3 10x15 x32	K1 7.0x50 x16	
T1 x32	G7 x1	

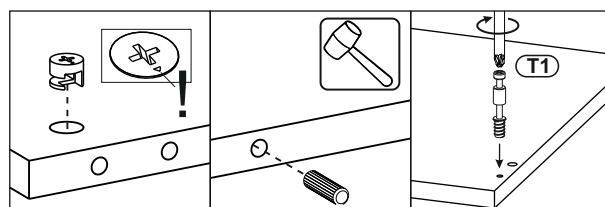


11

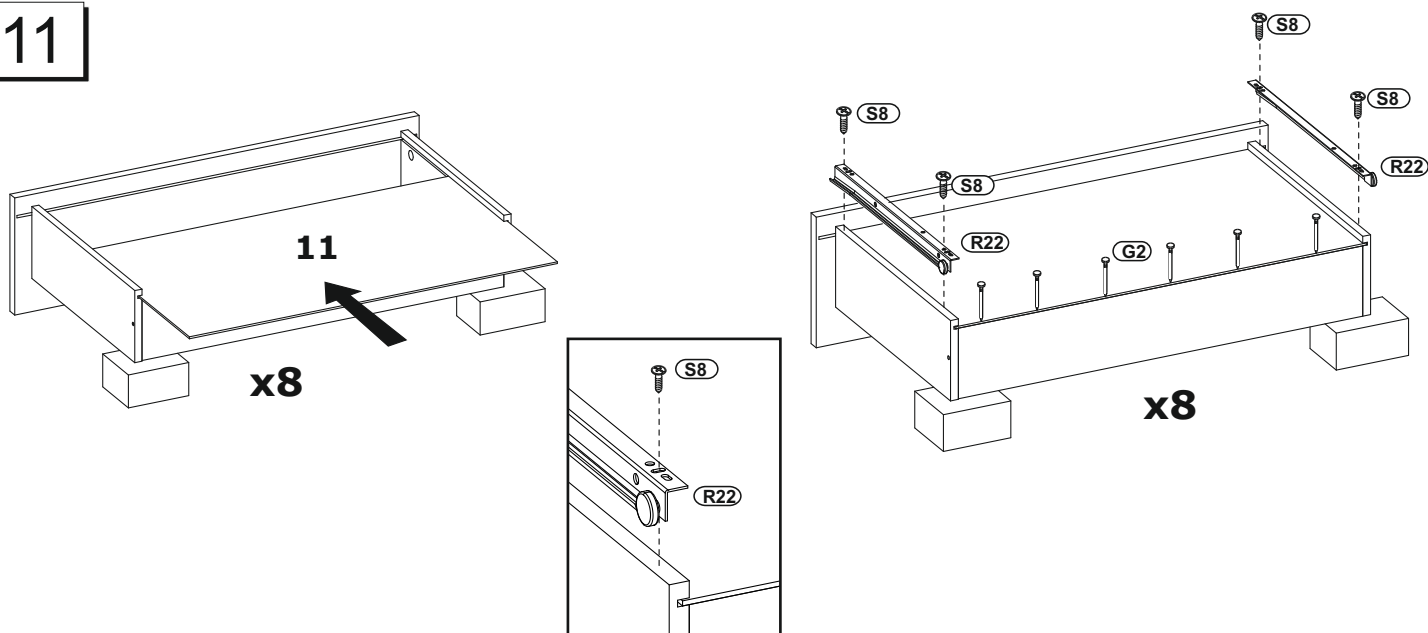

12

!!!

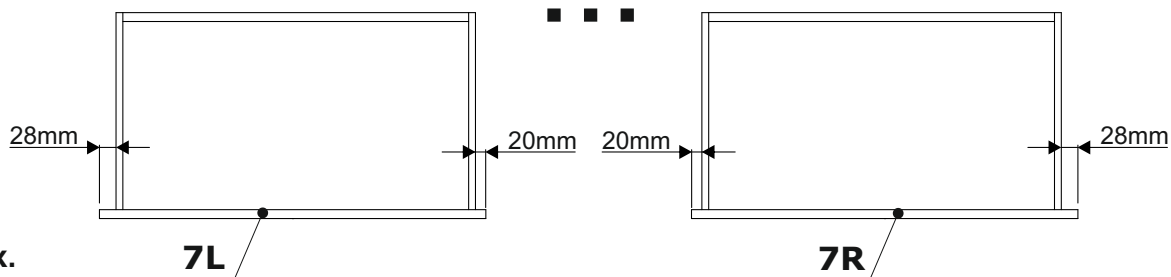

max.

