








MIRJAN 24


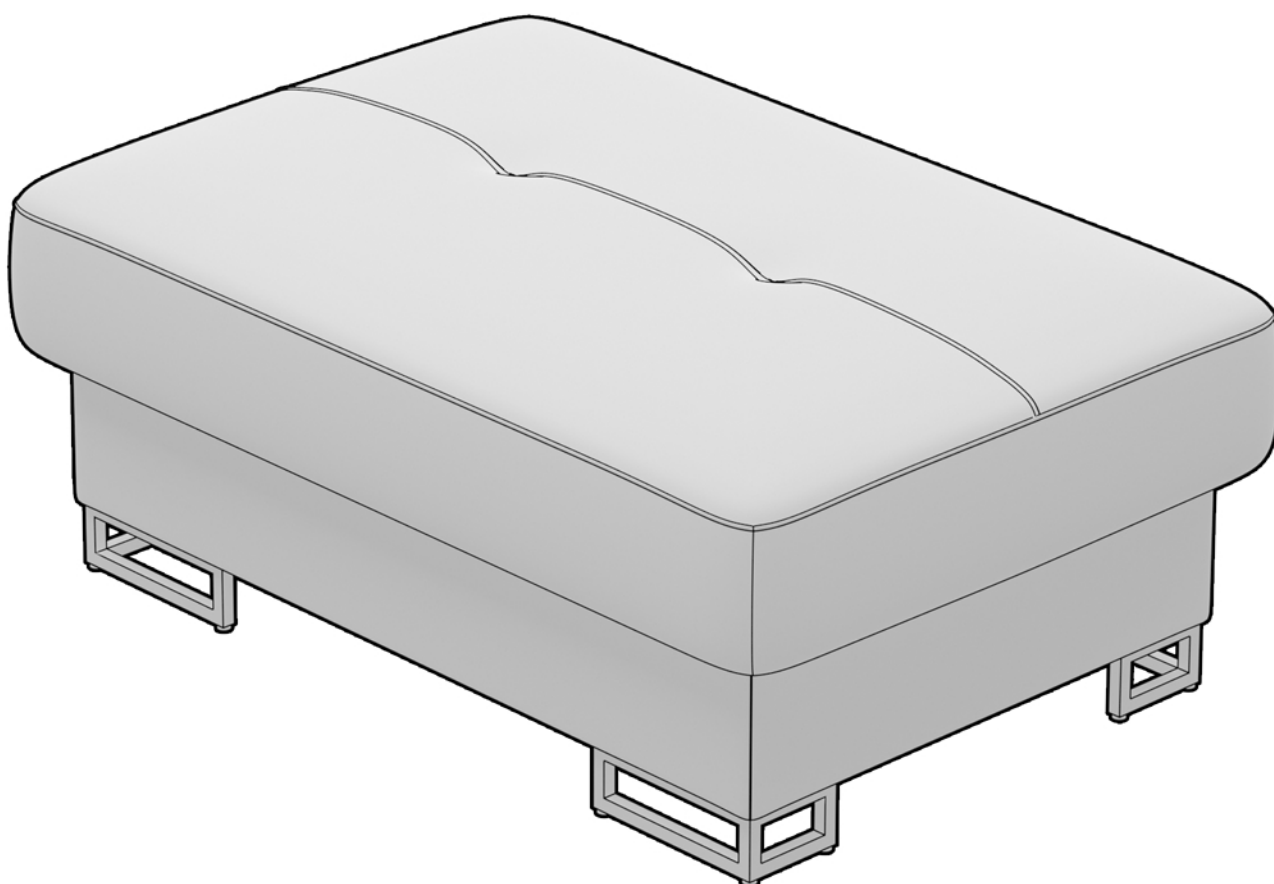


COTERE PUFA




ASSEMBLING INSTRUCTIONS



MONTAGEANLEITUNG
INSTRUKCJA MONTAŻU

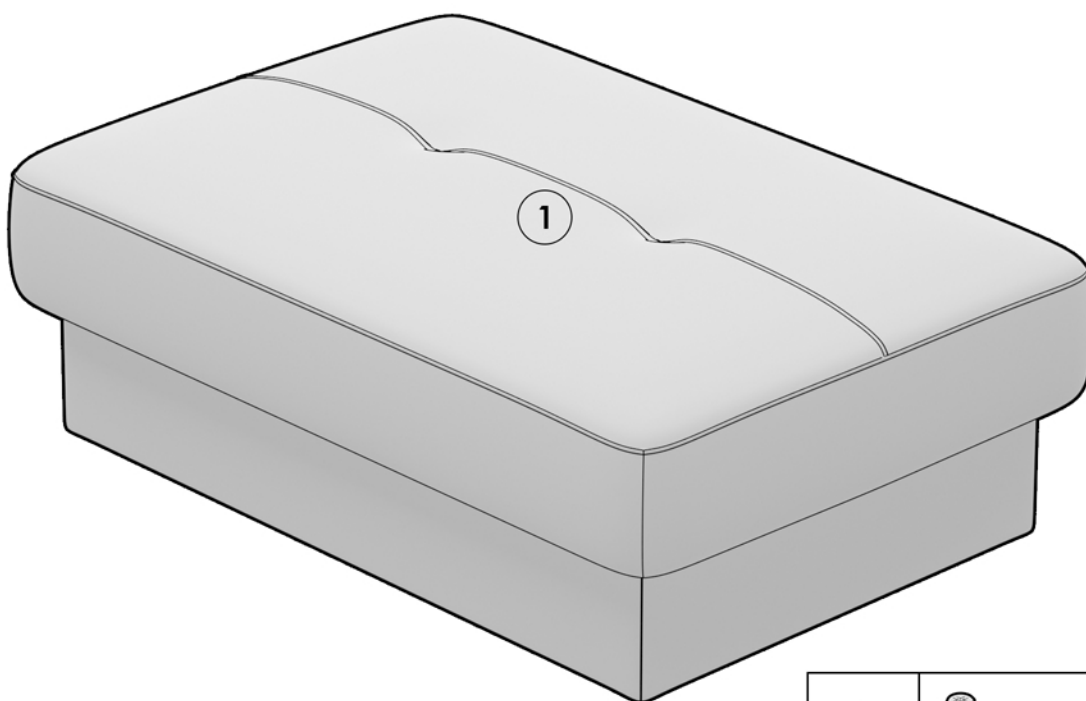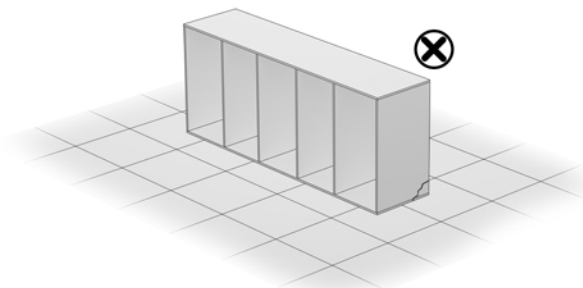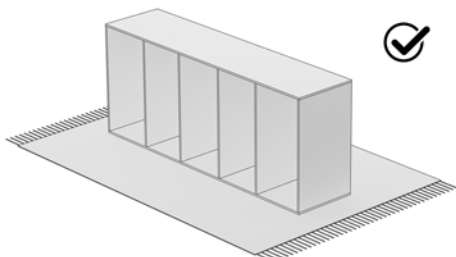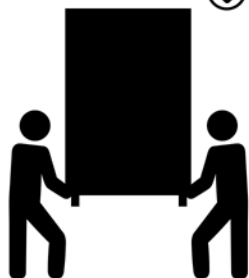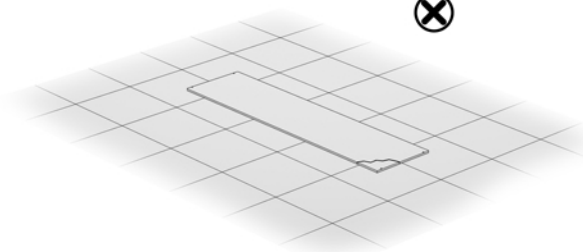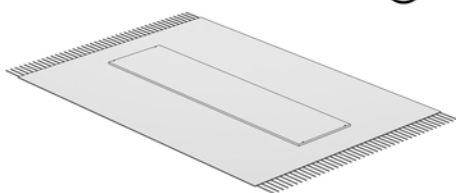


A		M6	x16
B		M6	x16
C			x2
D			x2


HIDDEN ELEMENTS
VERSTECKTE ELEMENTE
UKRYTE ELEMENTY

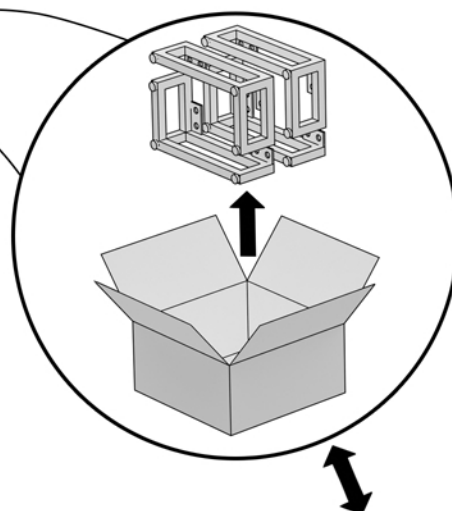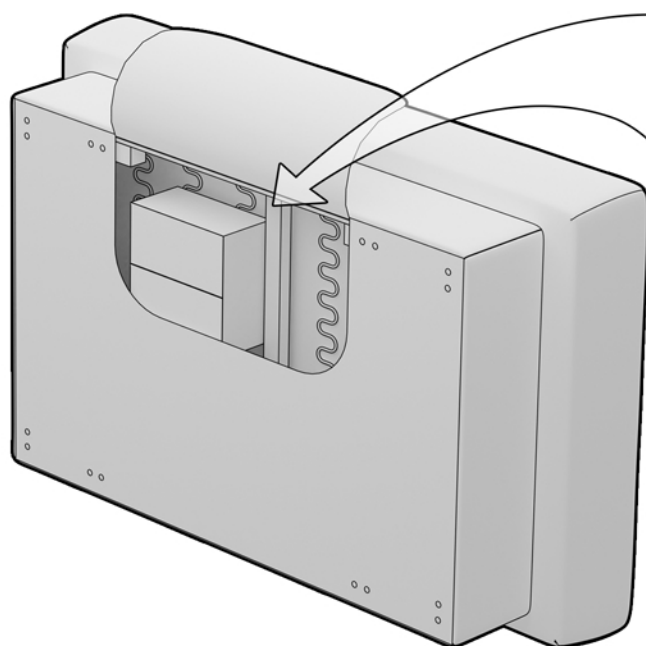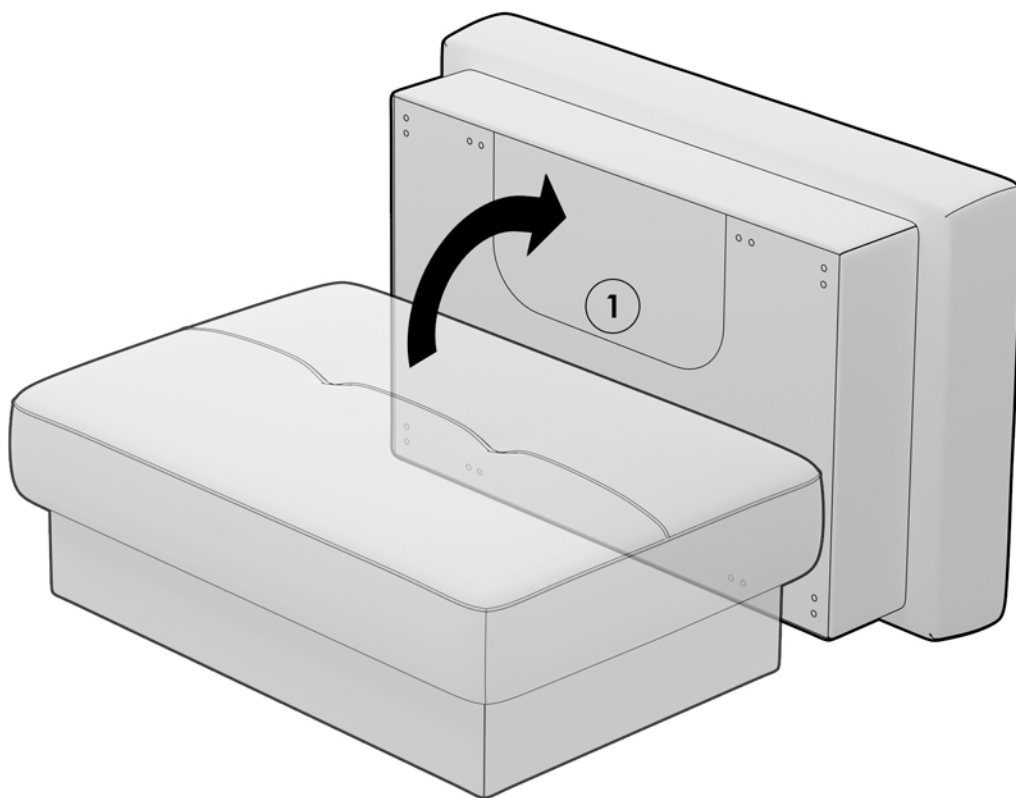

A		M6	x16
B		M6	x16
C			x2
D			x2

HIDDEN ELEMENTS
VERSTECKTE ELEMENTE
UKRYTE ELEMENTY

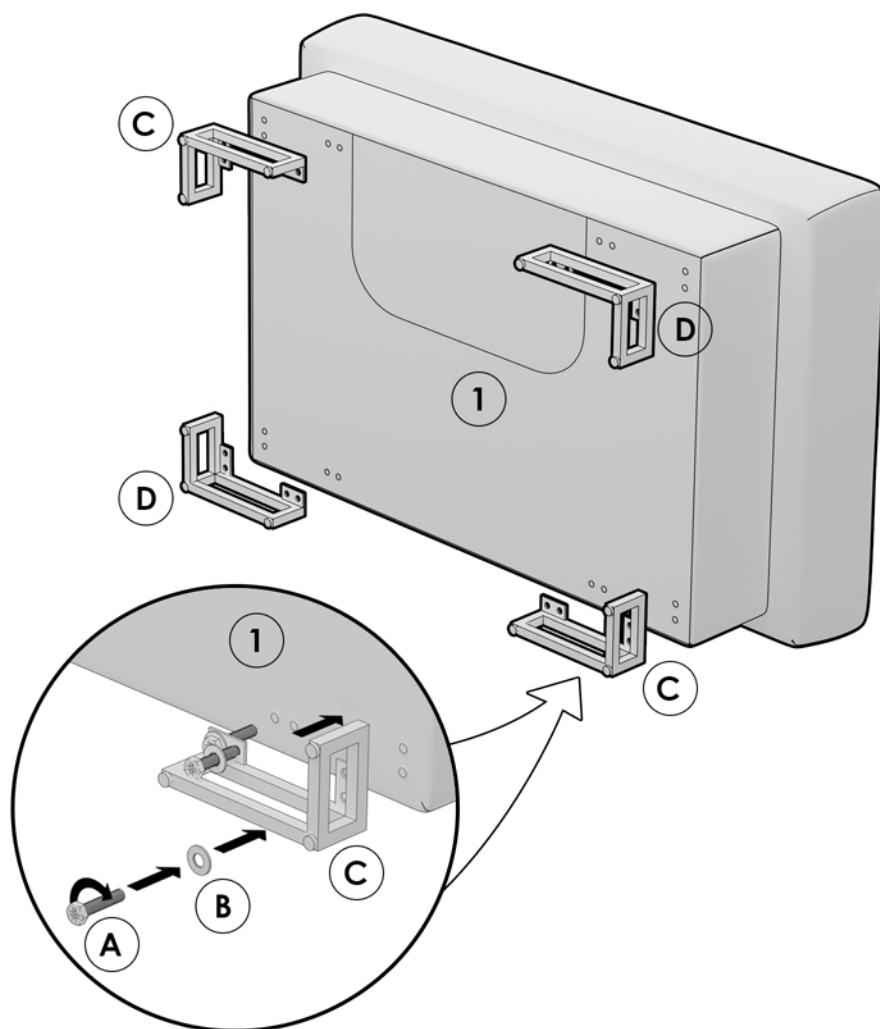

A		M6	x16
B		M6	x16
C			x2
D			x2

