








Installation Instructions


Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
The vanity should be installed by a professional plumber.
Drainer pipe and trap are not included.

Part list	A (cabinet)	B (countertop)	C (pop-up)	D (mirror)	E (plastic expansion)	F (screw)
Photo						
Qty	1	1	1	1	2	2


Step 1: install the handle

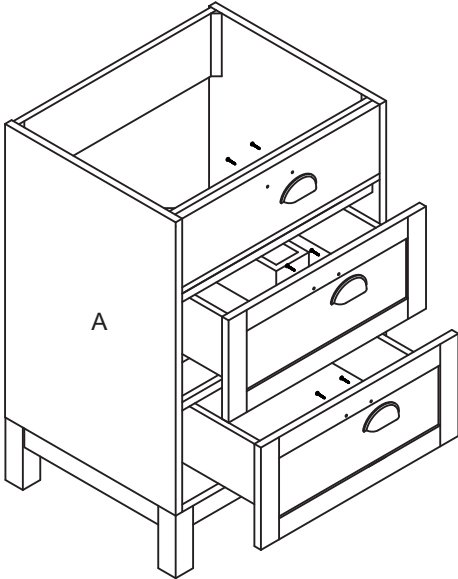

Step 2: stick the countertop

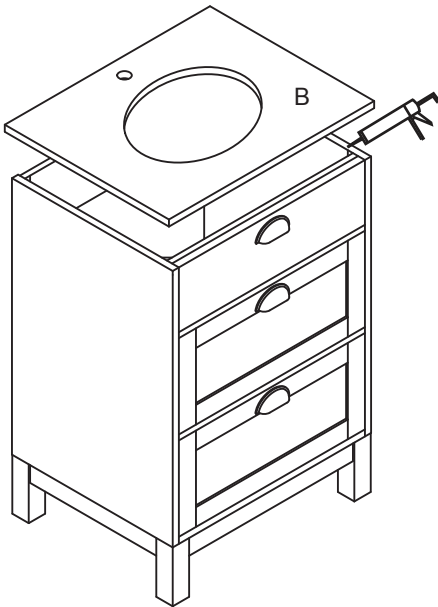

Step 3: assembly the pop-up

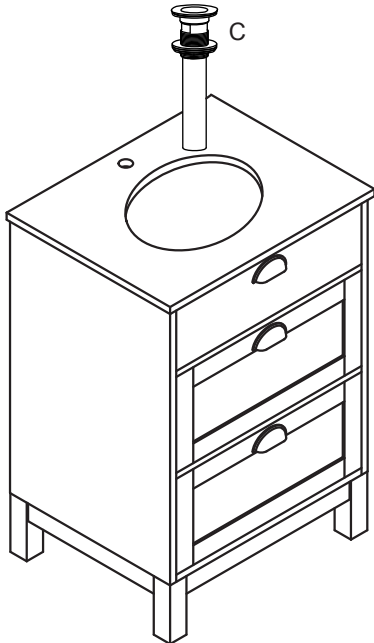

Step 4: install the mirror

