

# BALCONY BANISTER

Installation instruction

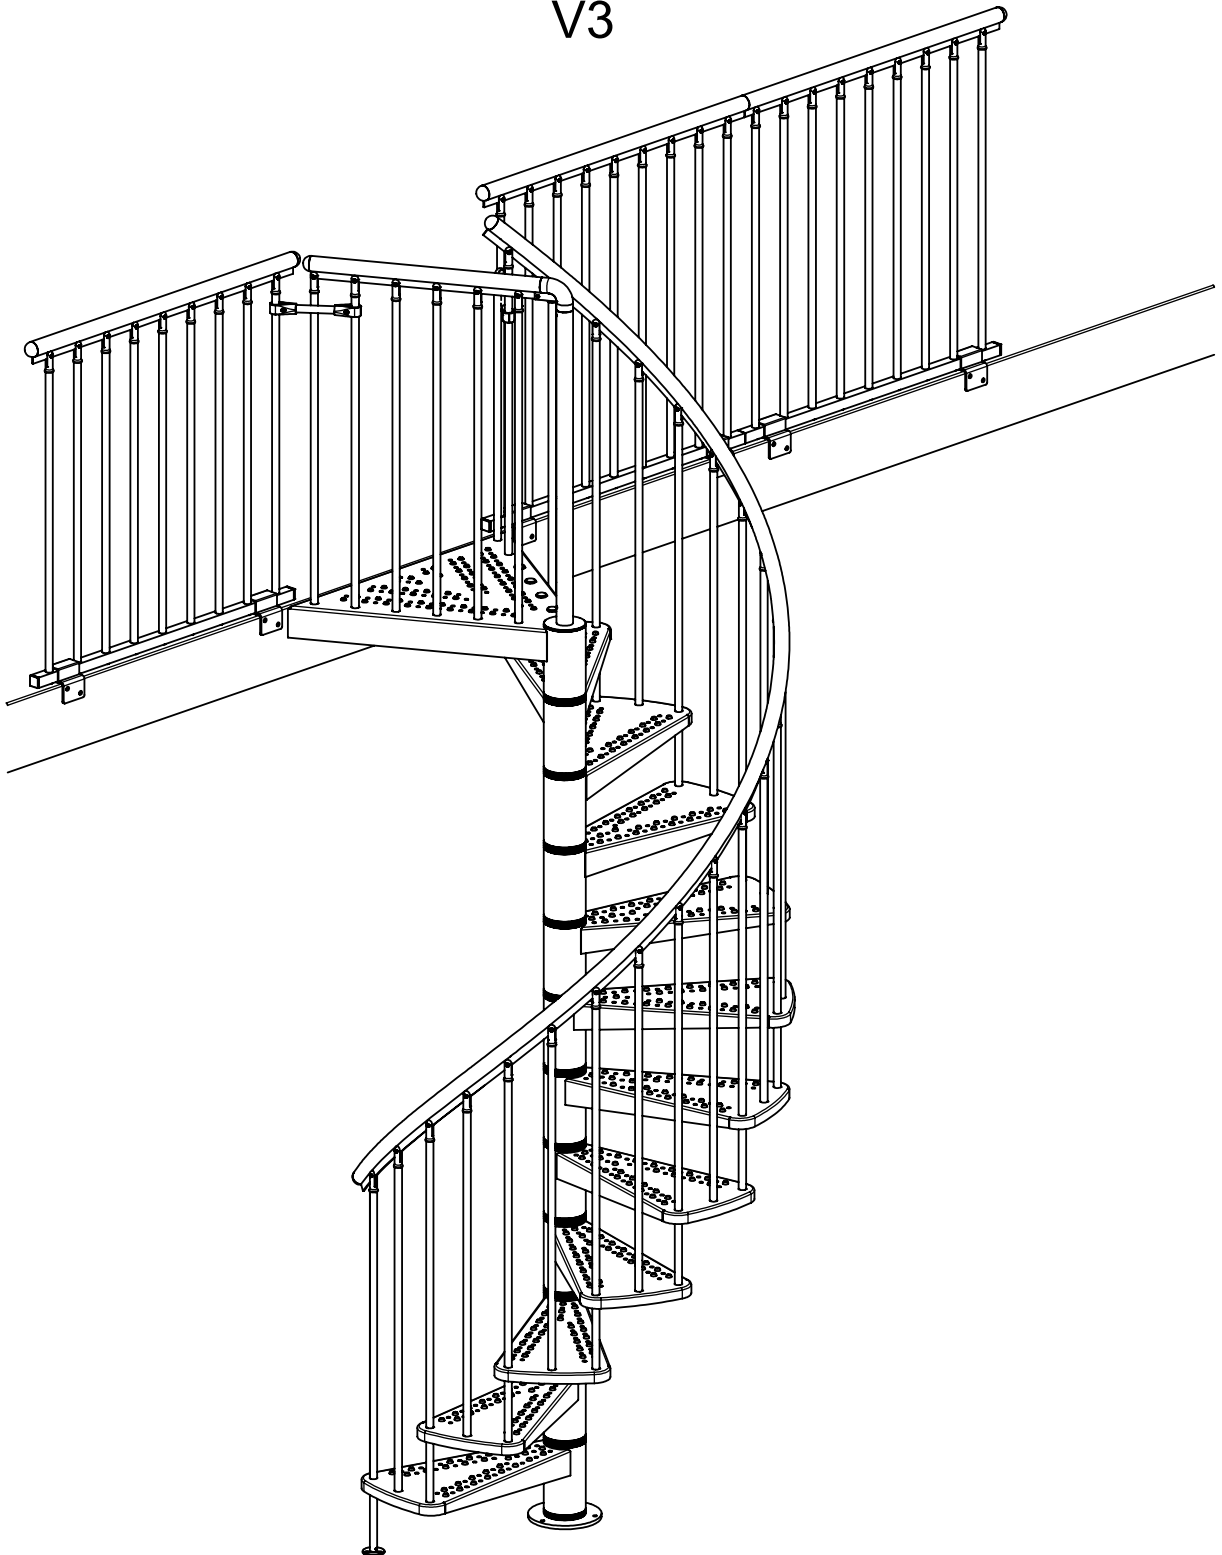
# BRÜSTUNGSGELÄNDER

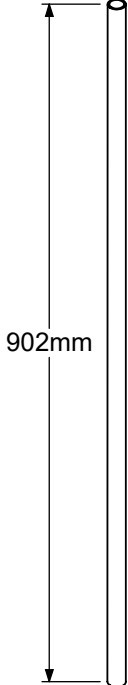
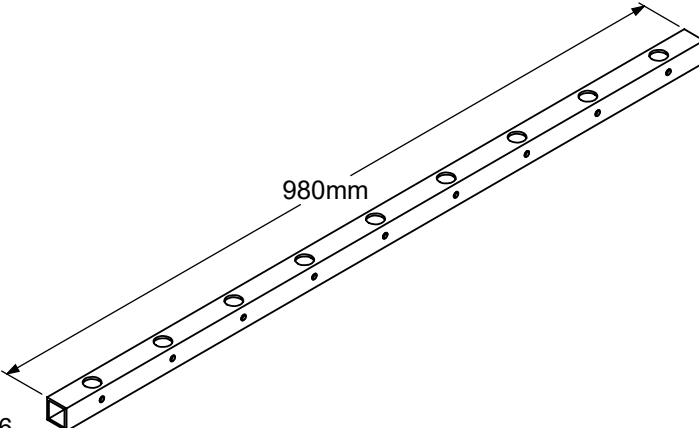


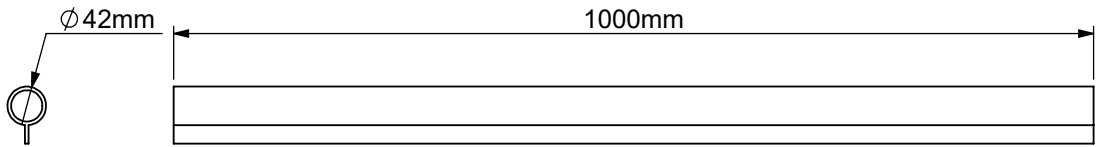



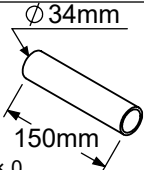


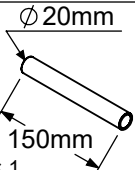








Montageanleitung

# BALUSTRADE DE BALCON

Instructions de montage

V3



<p>1</p>  <p>902mm</p> <p>(I) : x 9 (II) : x 9 K1-39170</p>	<p>2</p>  <p>980mm</p> <p>(I) : x 1 (II) : x 1 K1-30276</p>		<p>3</p>  <p>(I) : x 2 (II) : x 2 K2-30230</p>	<p>4</p>  <p>(I) : x 2 (II) : x 0 K1-30020</p>		
<p>7</p>  <p><math>\phi 42\text{mm}</math></p> <p>1000mm</p> <p>(I) : x 1 (II) : x 1 K1-38510</p>		<p>5</p>  <p>(I) : x 9 (II) : x 9 K1-38591</p>	<p>6</p>  <p>(I) : x 1 (II) : x 0 K1-19340</p>			
<p>8</p>  <p>(I) : x 2 (II) : x 0 K1-38590</p>	<p>9</p>  <p><math>\phi 34\text{mm}</math></p> <p>150mm</p> <p>(I) : x 0 (II) : x 1 K1-39011</p>	<p>10</p>  <p>(I) : x 0 (II) : x 1 K1-39012</p>	<p>11</p>  <p>(I) : x 2 (II) : x 0 K2-39195</p>	<p>12</p>  <p><math>\phi 20\text{mm}</math></p> <p>150mm</p> <p>(I) : x 1 (II) : x 0 K1-39171</p>		
<p>14</p>  <p>(I) : x 1 (II) : x 0 K2-30165</p>						
<p>20</p>  <p>(I) : x 6 (II) : x 4 K3-06068 <math>\phi 8 \times 60</math></p>	<p>21</p>  <p>(I) : x 6 (II) : x 4 K3-04041 <math>\phi 8</math></p>	<p>22</p>  <p>(I) : x 6 (II) : x 4 K3-08004 <math>\phi 10 \times 60</math></p>	<p>23</p>  <p>(I) : x 15 (II) : x 13 K3-05020 M8x8</p>	<p>24</p>  <p>(I) : x 9 (II) : x 9 K3-01201 M5x14</p>	<p>25</p>  <p>(I) : x 9 (II) : x 9 K3-03050 M5</p>	<p>26</p>  <p>(I) : x 1 (II) : x 1 K3-90001</p>

I	II
Start kit	Extension kit
Kit de départ	Kit de suite
Startpaket	Extrapaket
Startpakke	Ekstrapakke

