


STEP6






STEP7

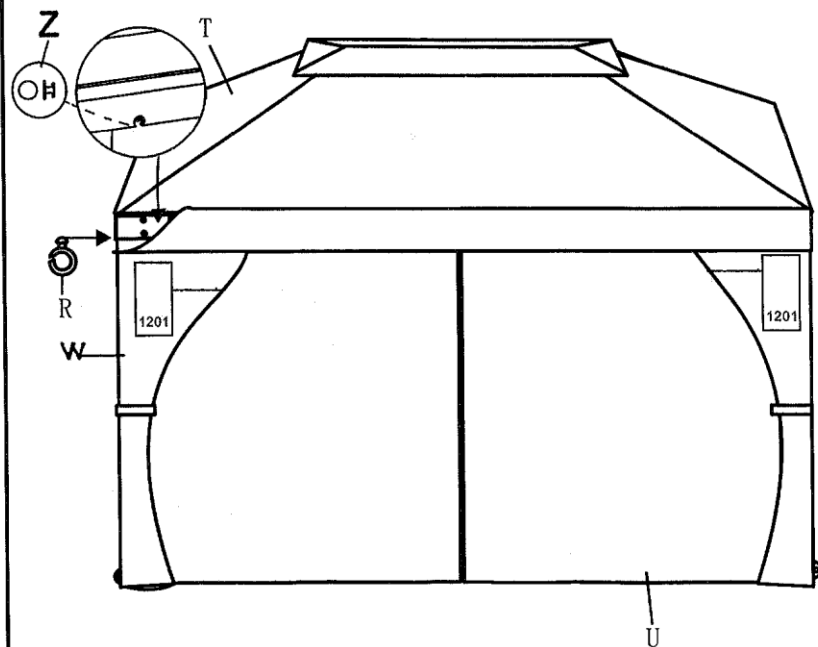

|         |          |        |        |        |         |        |         |
|---------|----------|--------|--------|--------|---------|--------|---------|
|         |          |        |        |        |         |        |         |
| A 4PCS  | B 2PCS   | E 2PCS | C 4PCS | D 4PCS | J 1PS   | H 4PCS | F 4PCS  |
|         |          |        |        |        |         |        |         |
| Z 16PC  | I 4PCS   | M 2PCS | X 2PCS | V 1PC  | K 12PCS | N 6PCS | P 16PCS |
|         |          |        |        |        |         |        |         |
| Q 56PCS | R 128PCS | S 1PC  | T 1PC  | U 4PCS | W 4PCS  |        |         |

STEP1

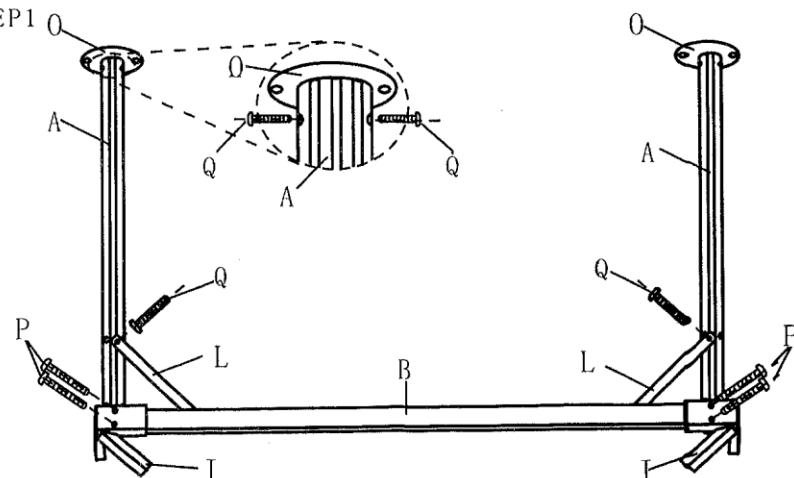

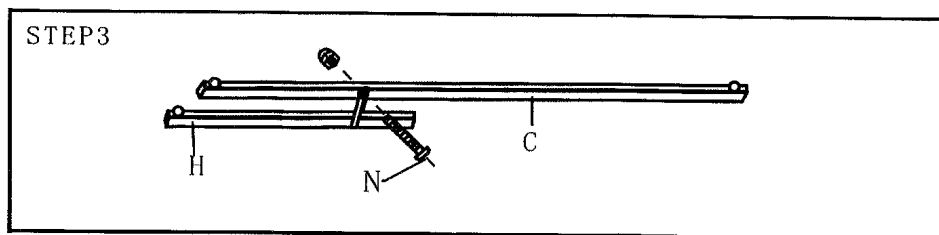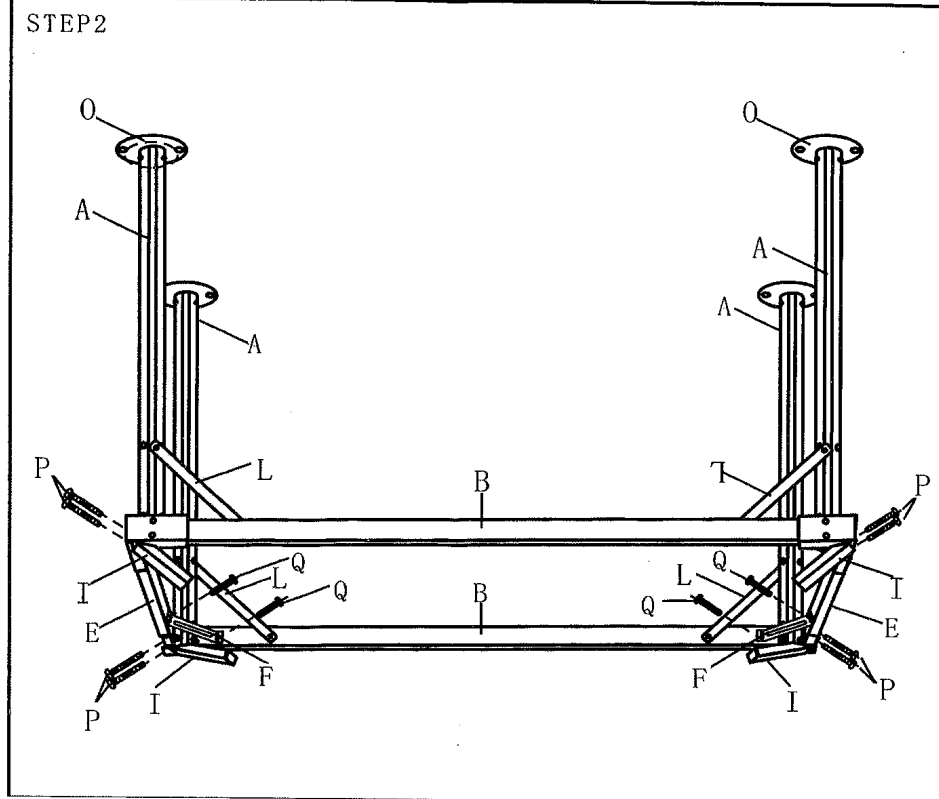

Note:

1-wind resistance:when the wind is stronger than 6 degree,  
please get off the fabric.

2-we used different tages to prevent confusion zippers,  
for the side walls,please take care at the same  
side have the same tages.such as 1201 to 1201,and so on.  
we have show it on the Step 7.

