


Pulti Moderna 2,4 x 1,8 (with roof boards)



Assembly instruction

1/8

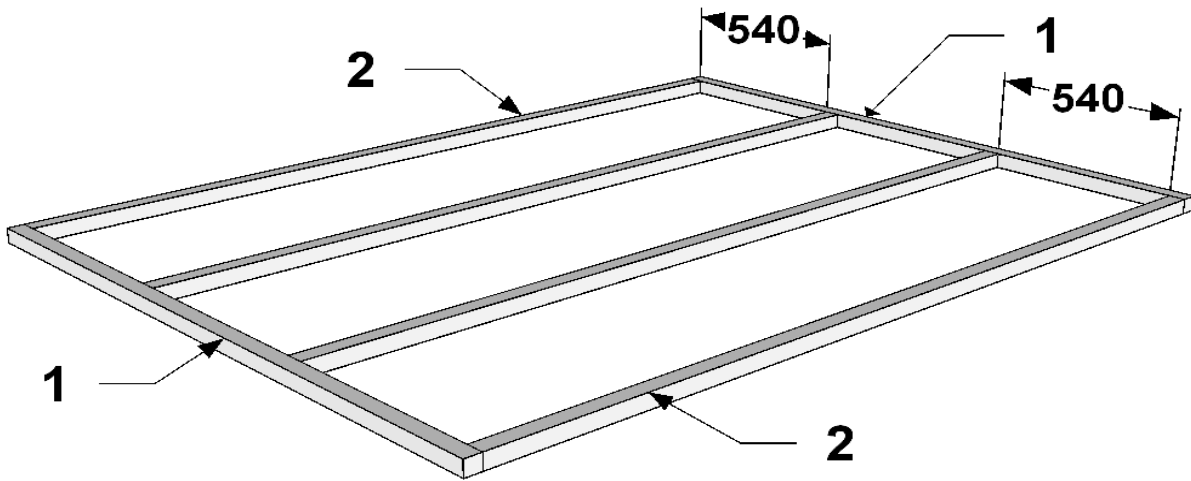

1 + **2**

4,5 x 80	8
-----------------	----------

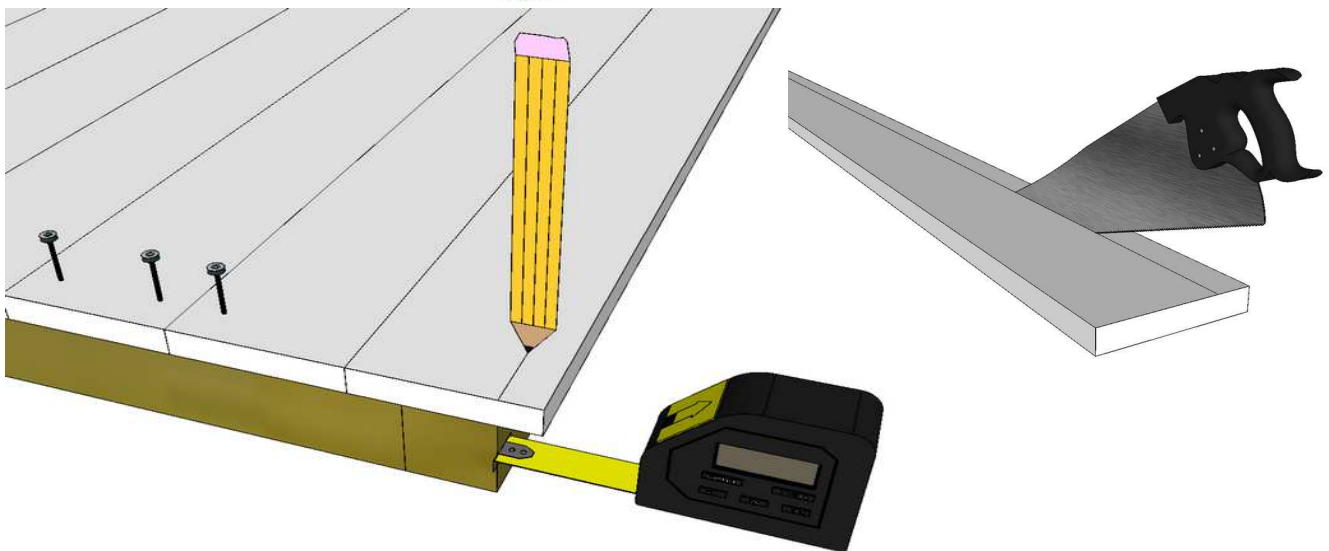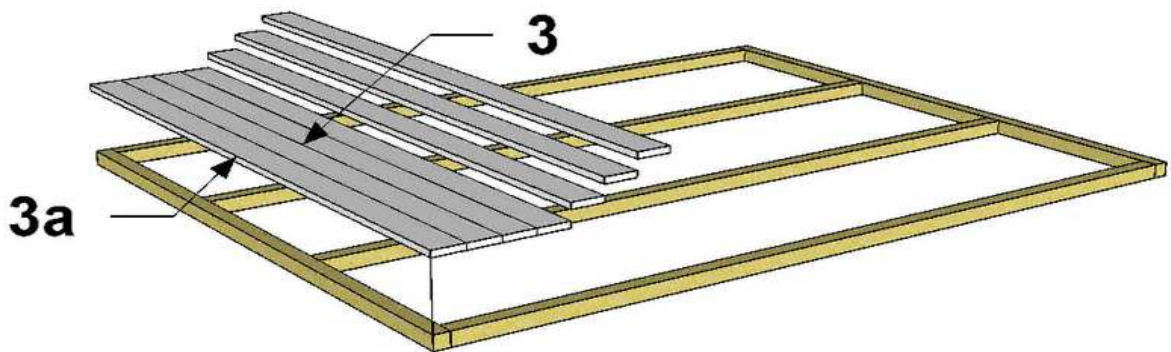


3a + **3**

2 x 50	116
---------------	------------

Pulti Moderna 2,4 x 1,8 (with roof boards)

Assembly instruction

2/8

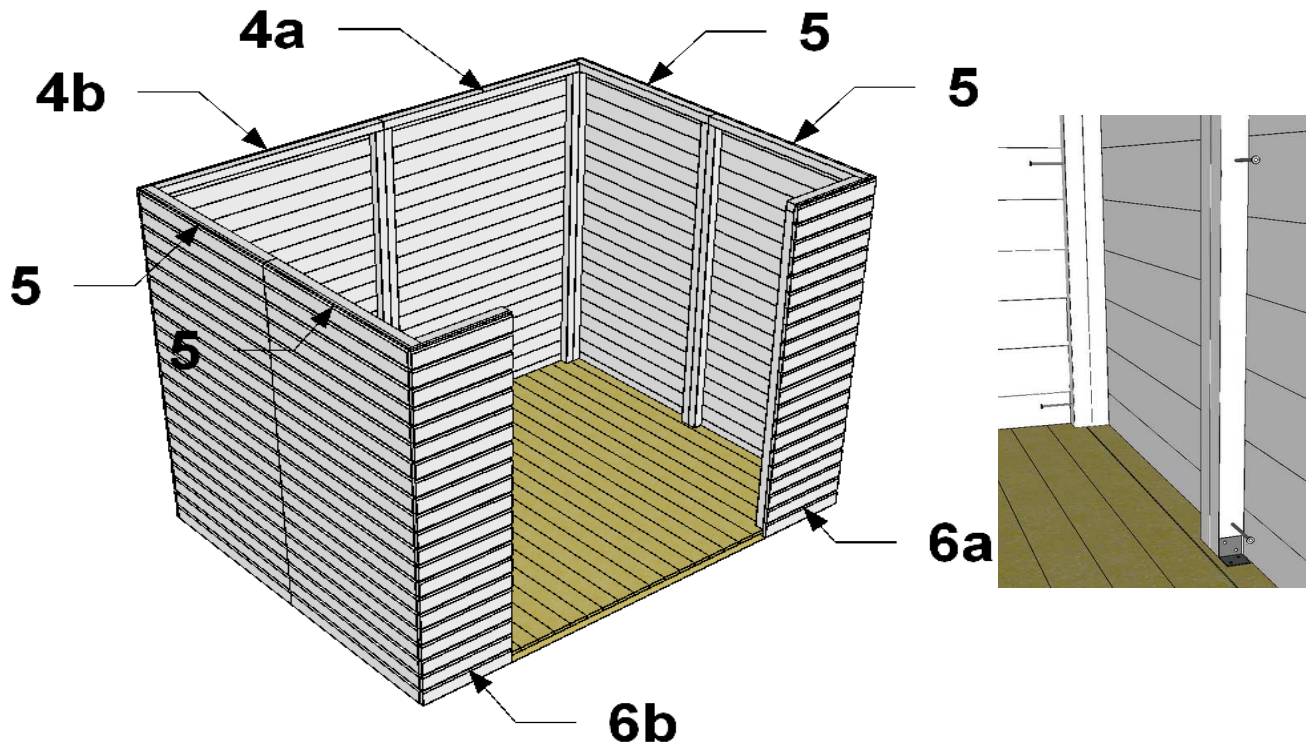


5	+	4a	+	4b	+	5	4,5 x 80	28
5	+	6b	+	5	+	6a		
5	5	4a	4b	5	5		40 x 40 x 40	5
		6a	6b	+	base		3,5 x 40	30

Pulti Moderna 2,4 x 1,8 (with roof boards)

Assembly instruction


3/8

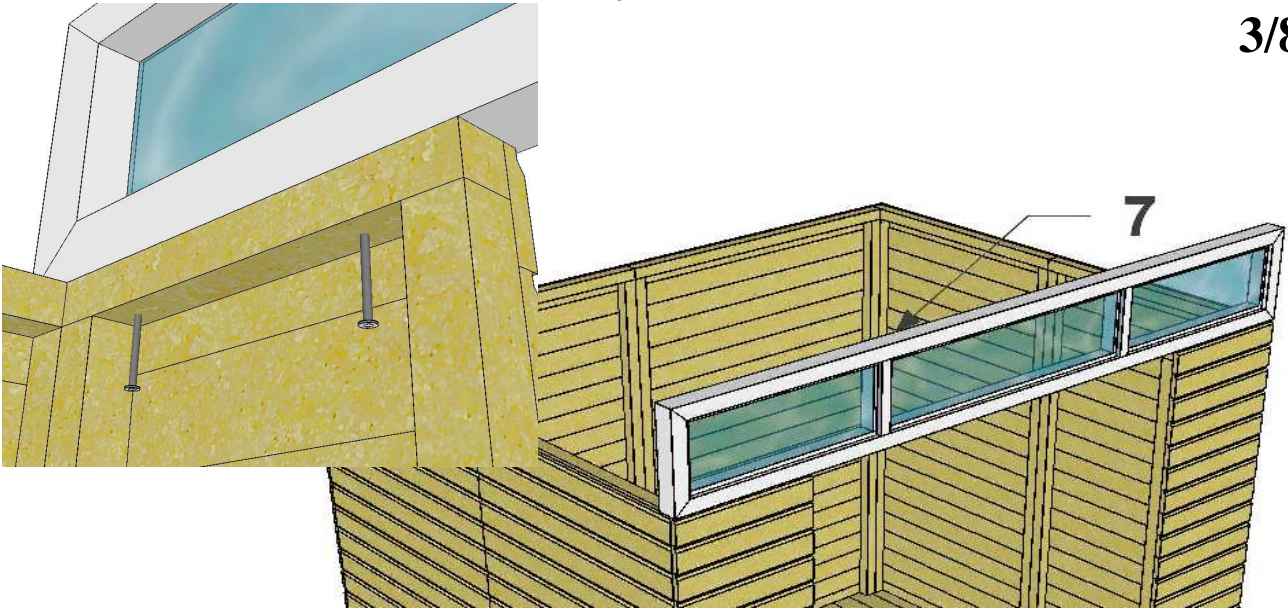

+ **7**


4,5 x 80

4

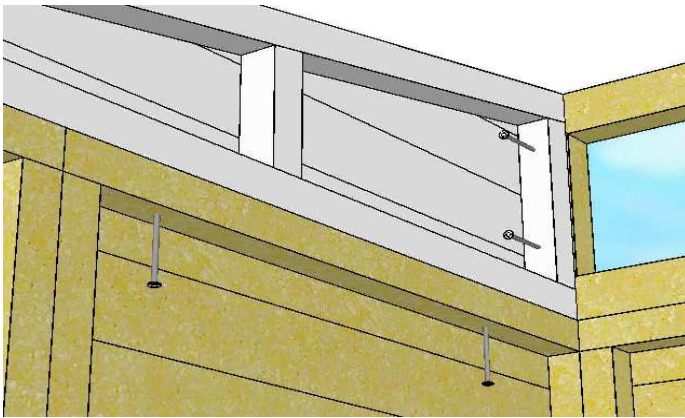

8a

8b

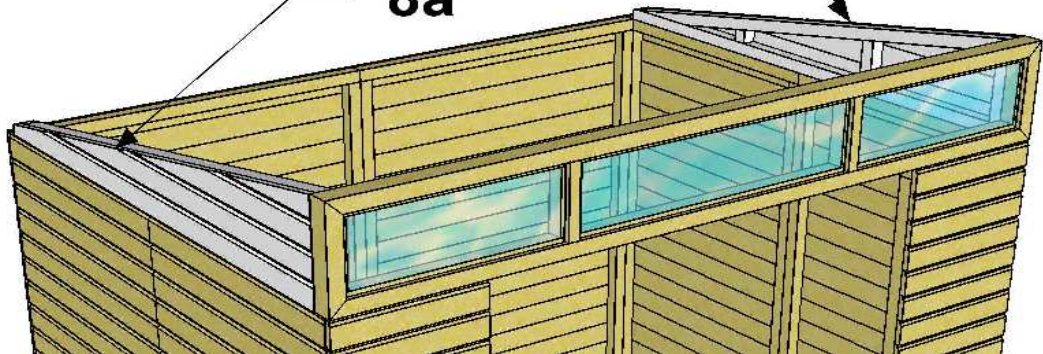

8a

+

8b



4,5 x 80

12

Pulti Moderna 2,4 x 1,8 (with roof boards)

Assembly instruction



4/8

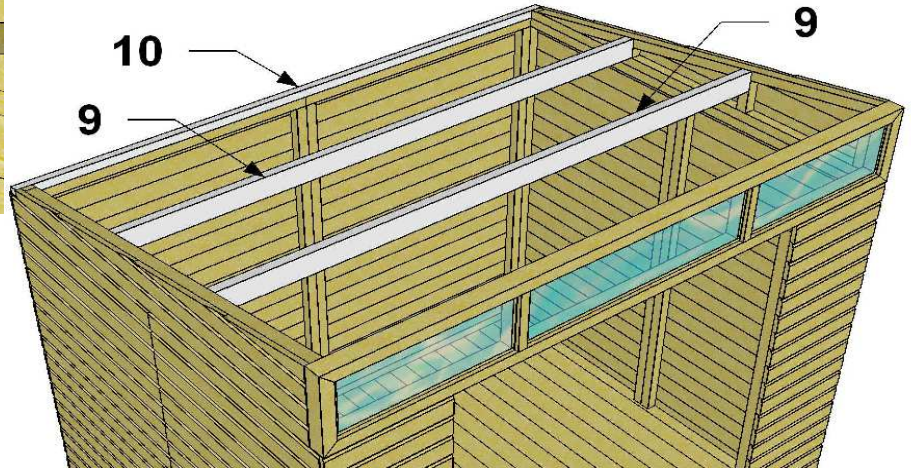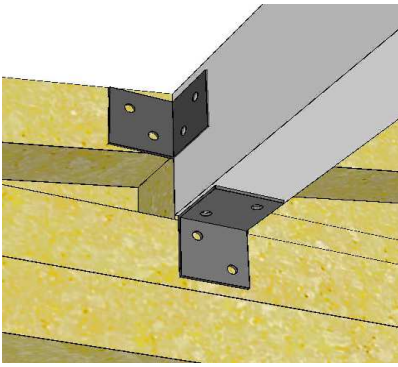

+ **9**

+ **10**

40 x 40 x 40	8
3,5 x 40	48
4 x 70	6



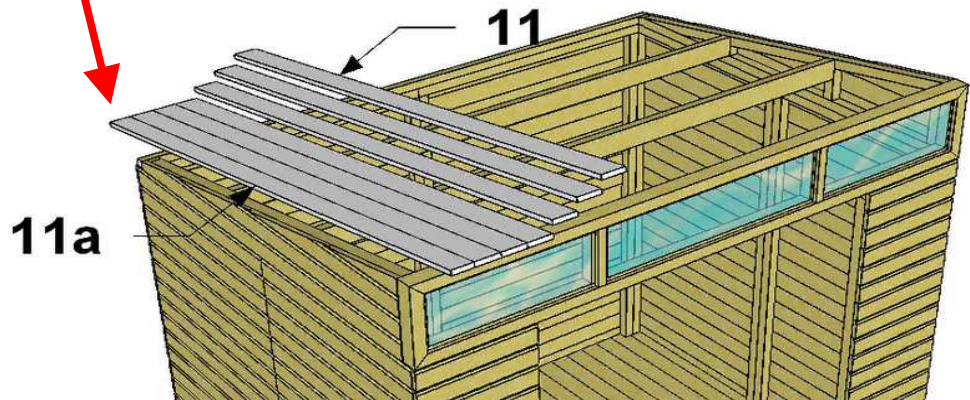
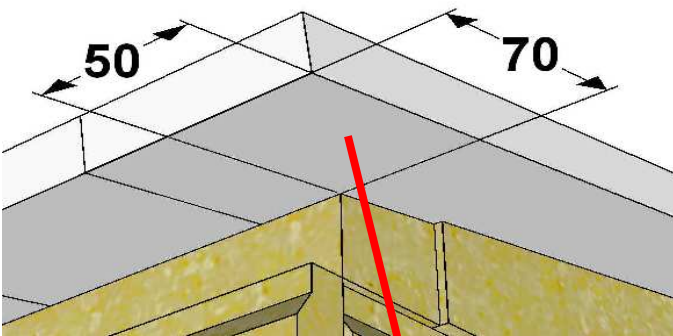


11a + **11** + **11b**

2 x 50	120
---------------	------------

Pulti Moderna 2,4 x 1,8 (with roof boards) Assembly instruction


5/8

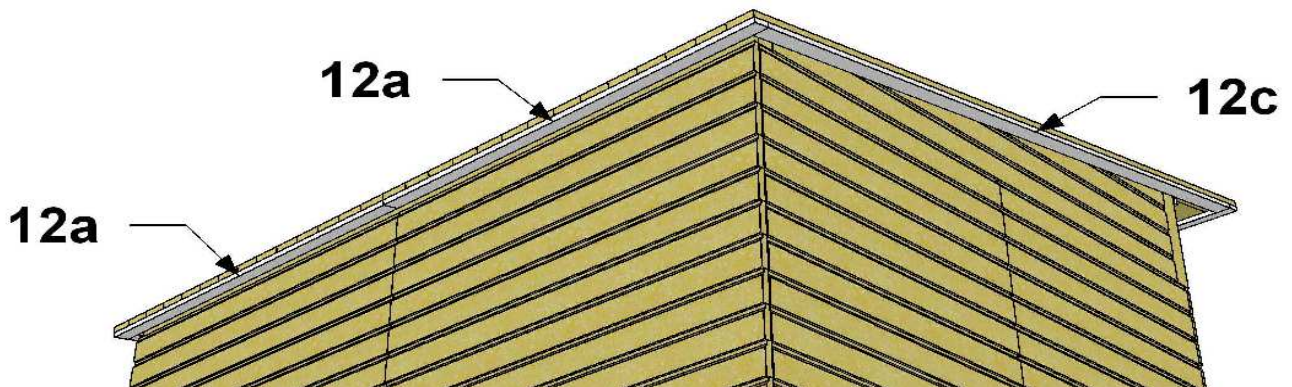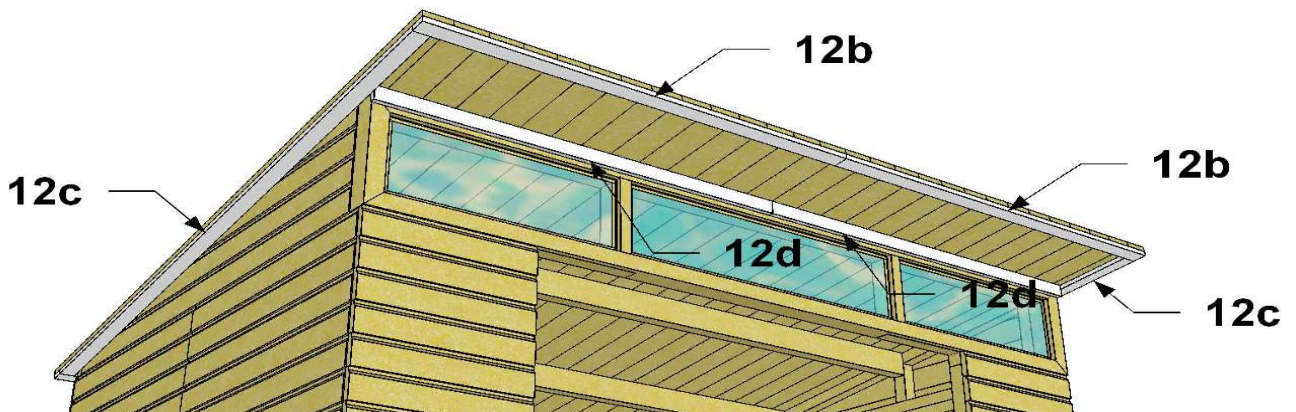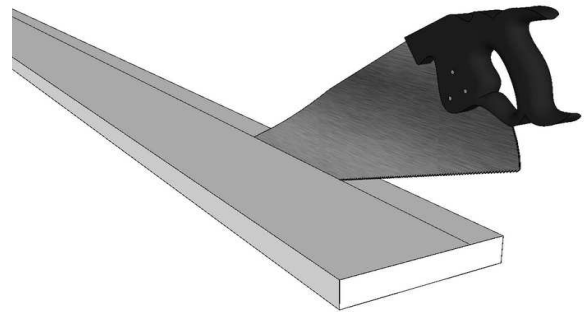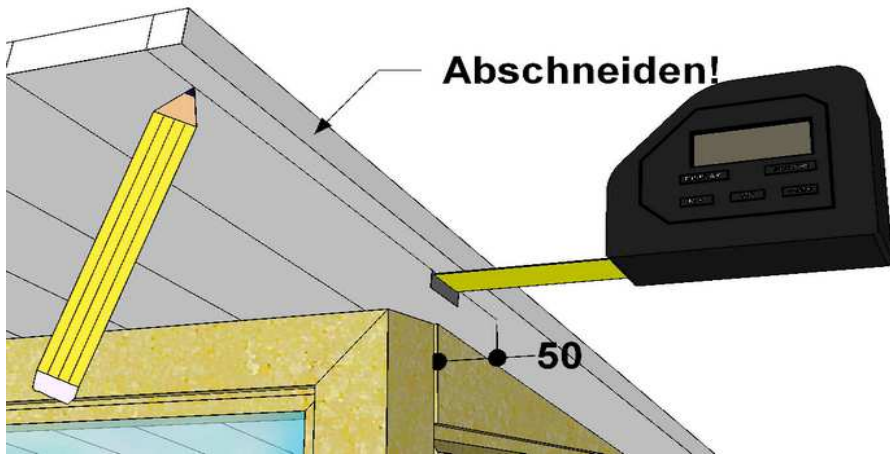


12a	+	12b	+	12c	+	12d	3,5 x 35	36
-----	---	-----	---	-----	---	-----	----------	----

Pulti Moderna 2,4 x 1,8 (with roof boards)
Assembly instruction

6/8

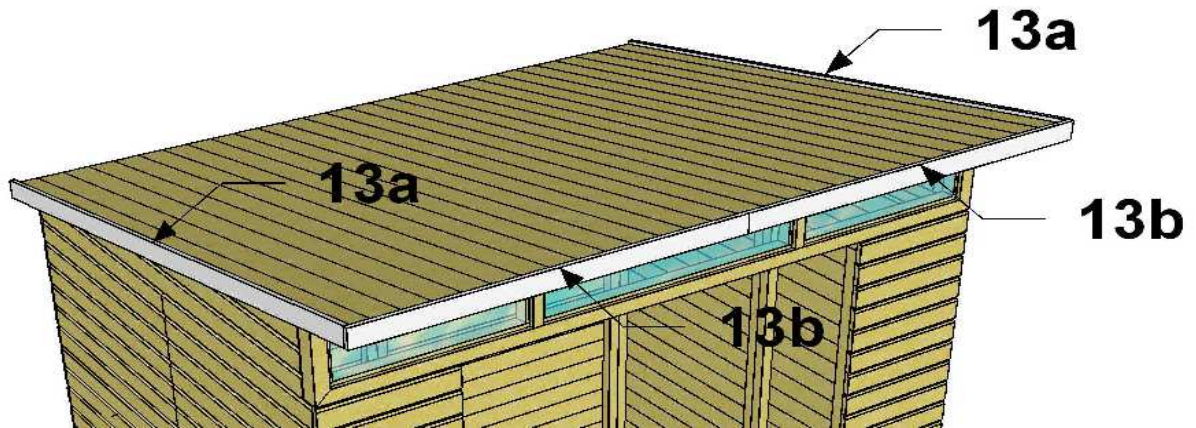

13b	+	13a	3,5 x 40	16
------------	---	------------	-----------------	-----------

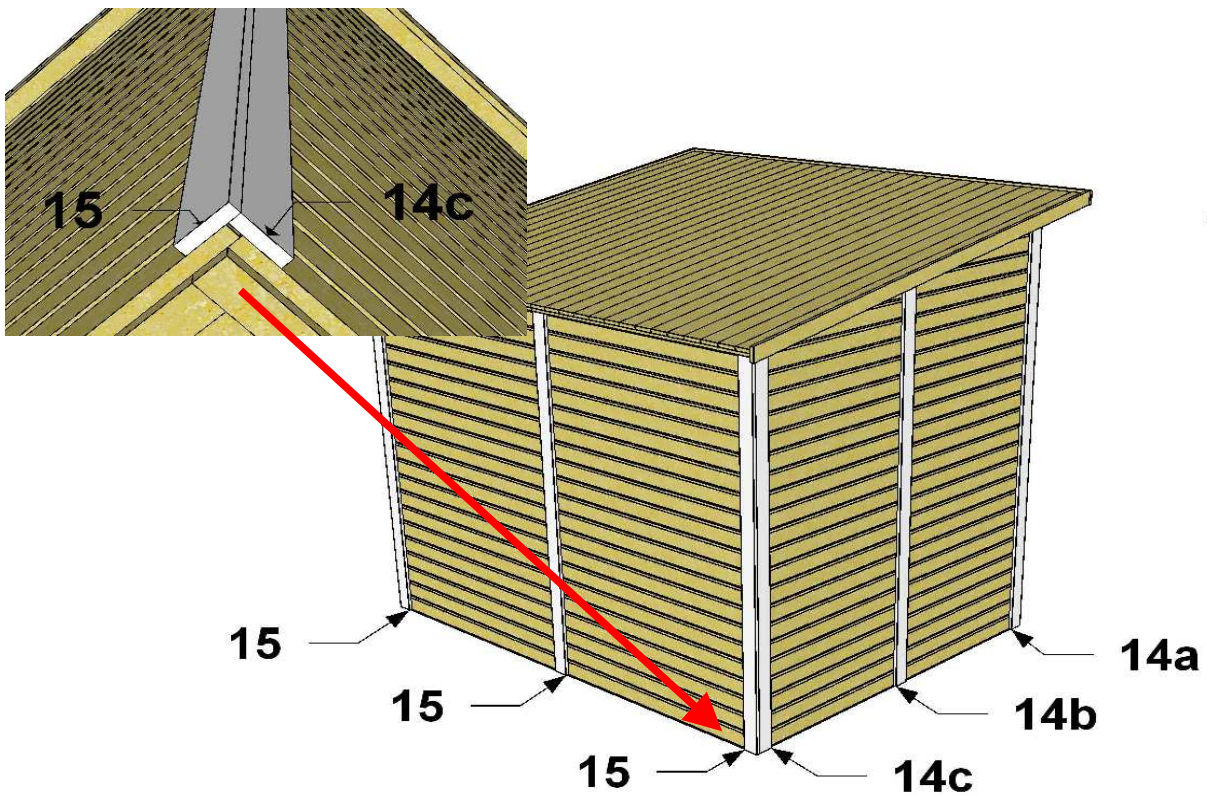

14a	+	14b	+	14c	+	15	3,5 x 40	31
------------	---	------------	---	------------	---	-----------	-----------------	-----------

Pulti Moderna 2,4 x 1,8 (with roof boards)


Assembly instruction

7/8



18/1 + **18/1**

4 x 60	12
---------------	-----------

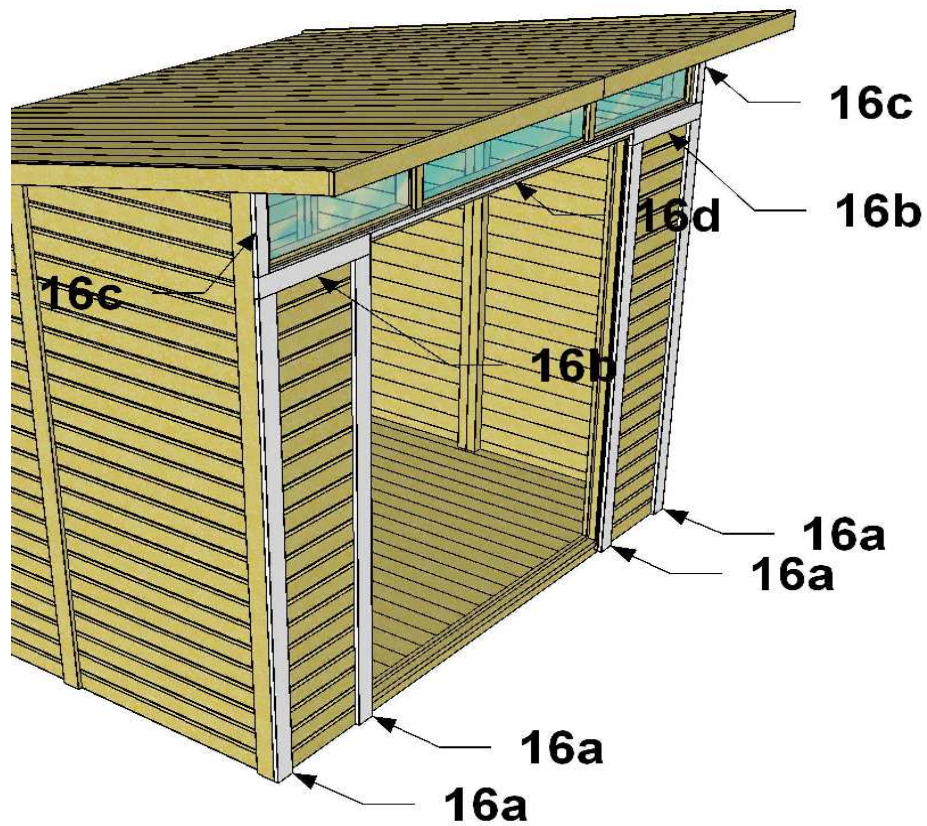


16a + **16b** + **16c** + **16d**

3,5 x 40	32
-----------------	-----------

Pulti Moderna 2,4 x 1,8 (with roof boards) Assembly instruction

8/8

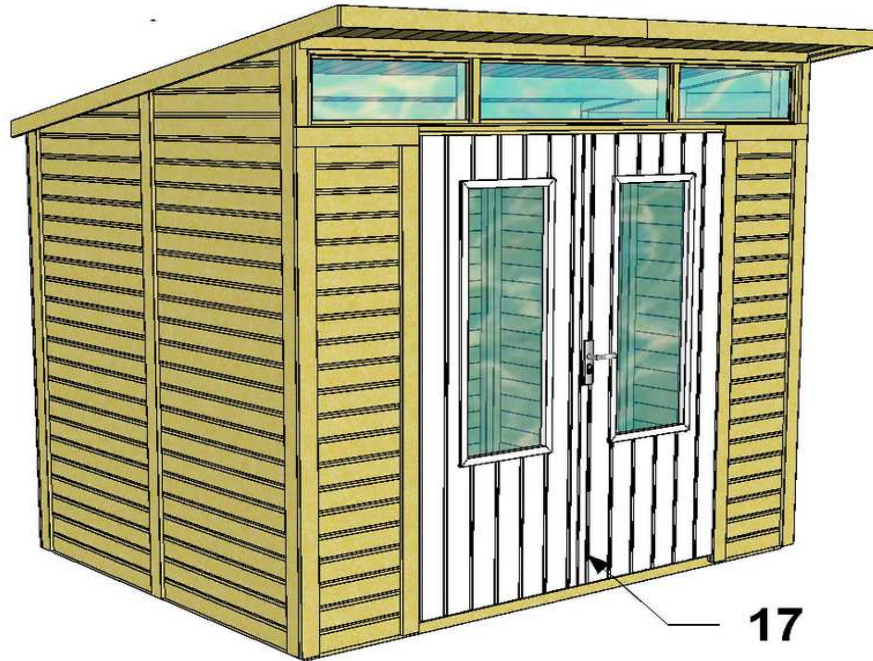

For fixing retainer

Zur Bestätigung der Raste

3,5 x 40

4
