


ASENNUSOHJE

Installationanvisningar

Installation instructions

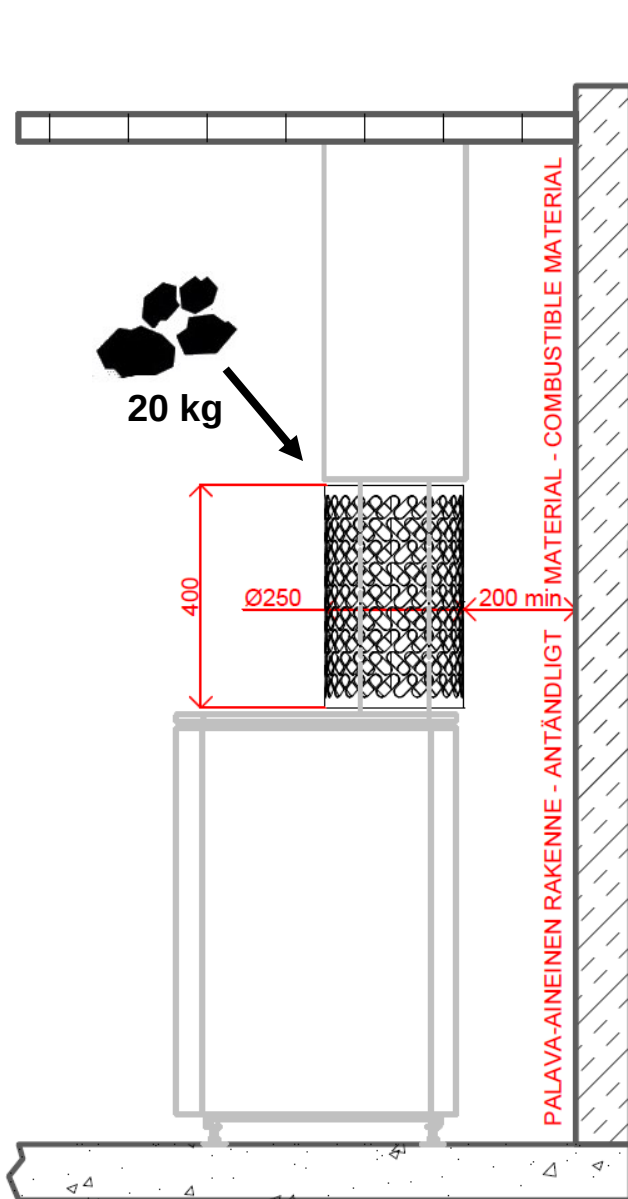


802134 • 802142

Kivikori

Stenkorg

Stone cage

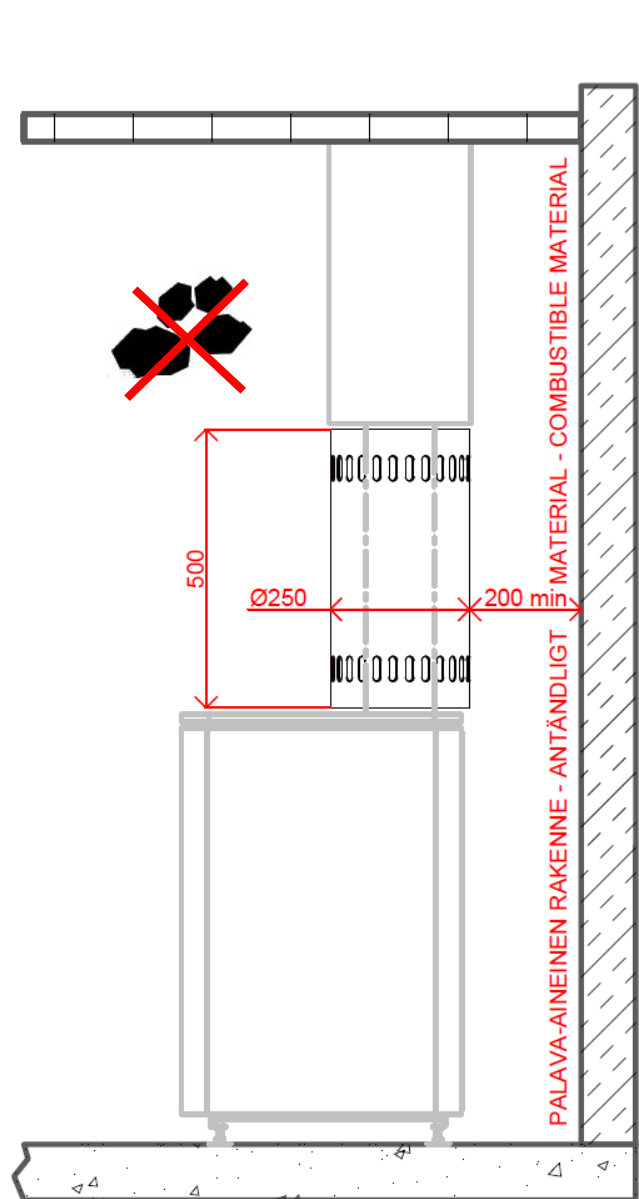

921123

Hormisuoja

Flue skydd

Flue sheath

(TESTIRAPORTTI No. VTT-S-06208-13)