







NORO




Snow R


Getting Start:

	<p>This product fulfils the EN14428 standard</p>		<p>Googles are recommended to protect the eyes</p>
	<p>All glass used are tempered security glass</p>		<p>Caution: Always Handle Glass With Care! Always protect the edges and corners of the glass when assembling.</p>
	<p>2 people are recommended to assemble this shower enclosure</p>		<p>Gloves are recommended to prevent slippery on glass</p>


Tools Needed:

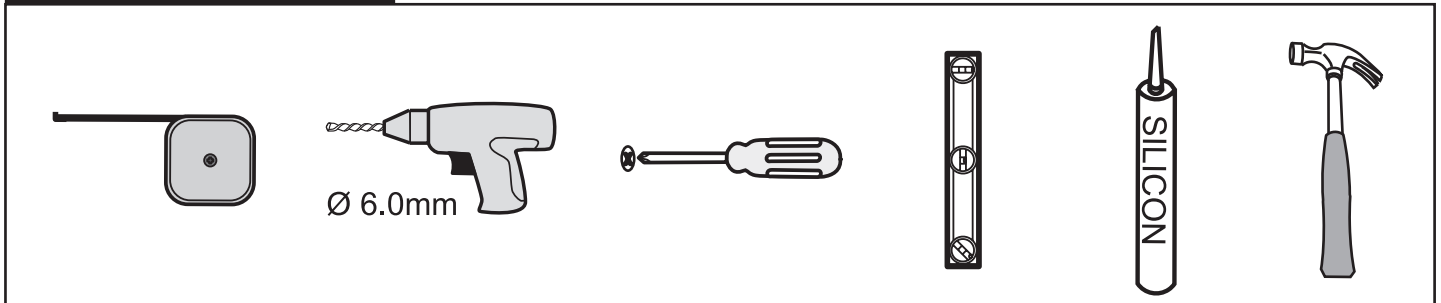

Accessories Bags:


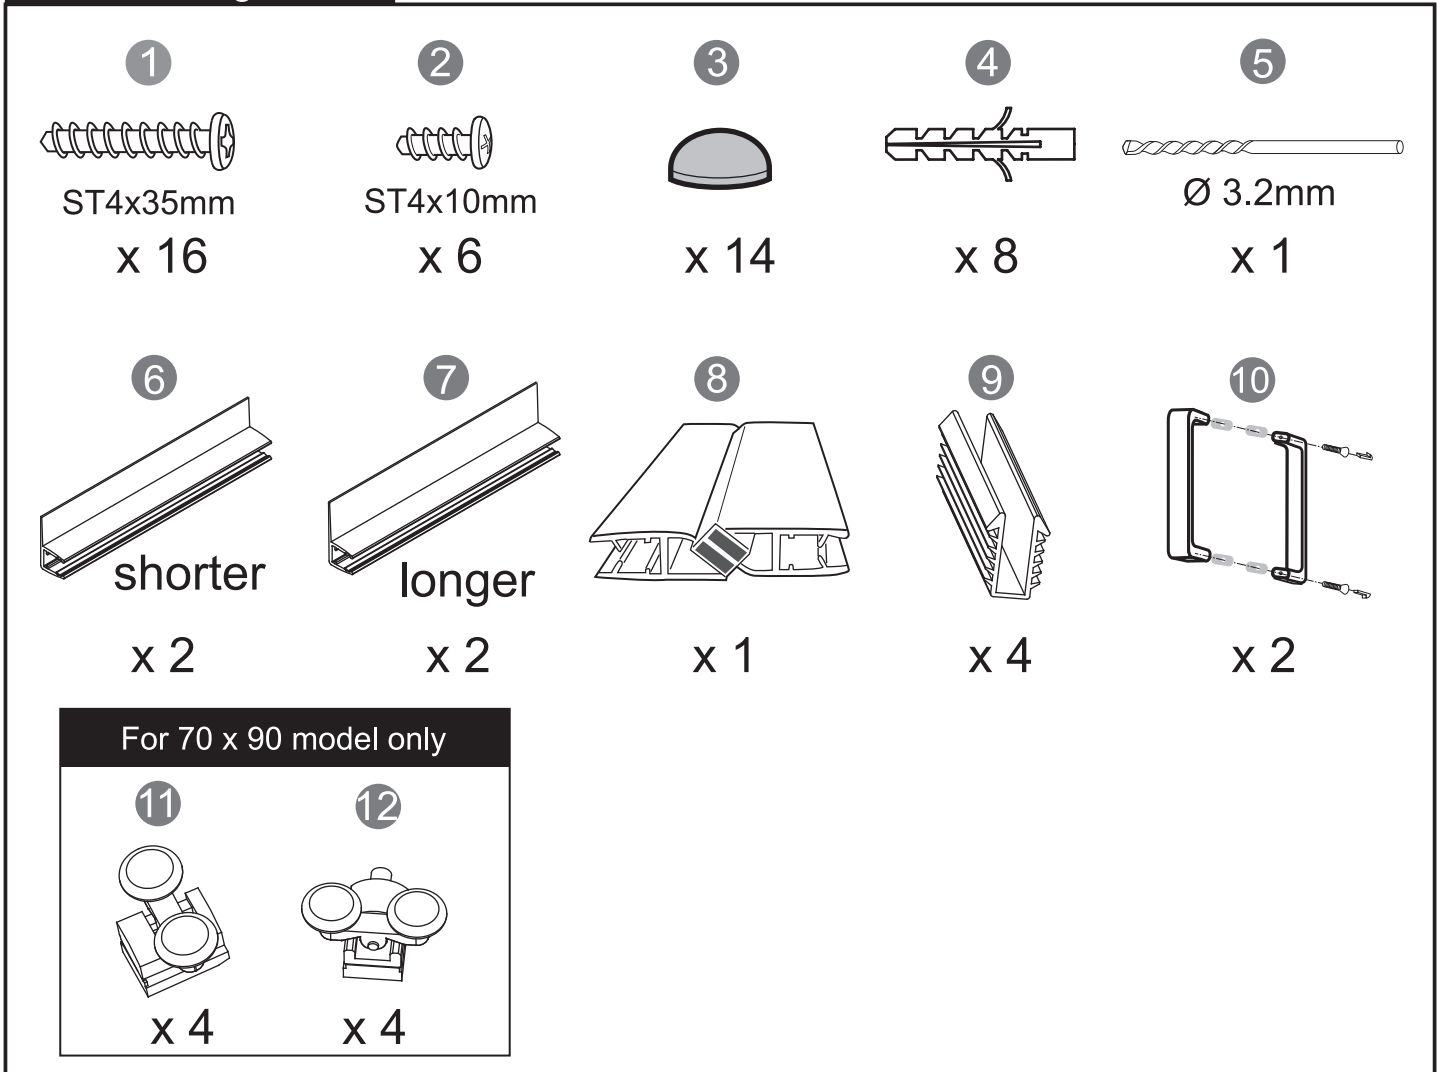


Measurement:

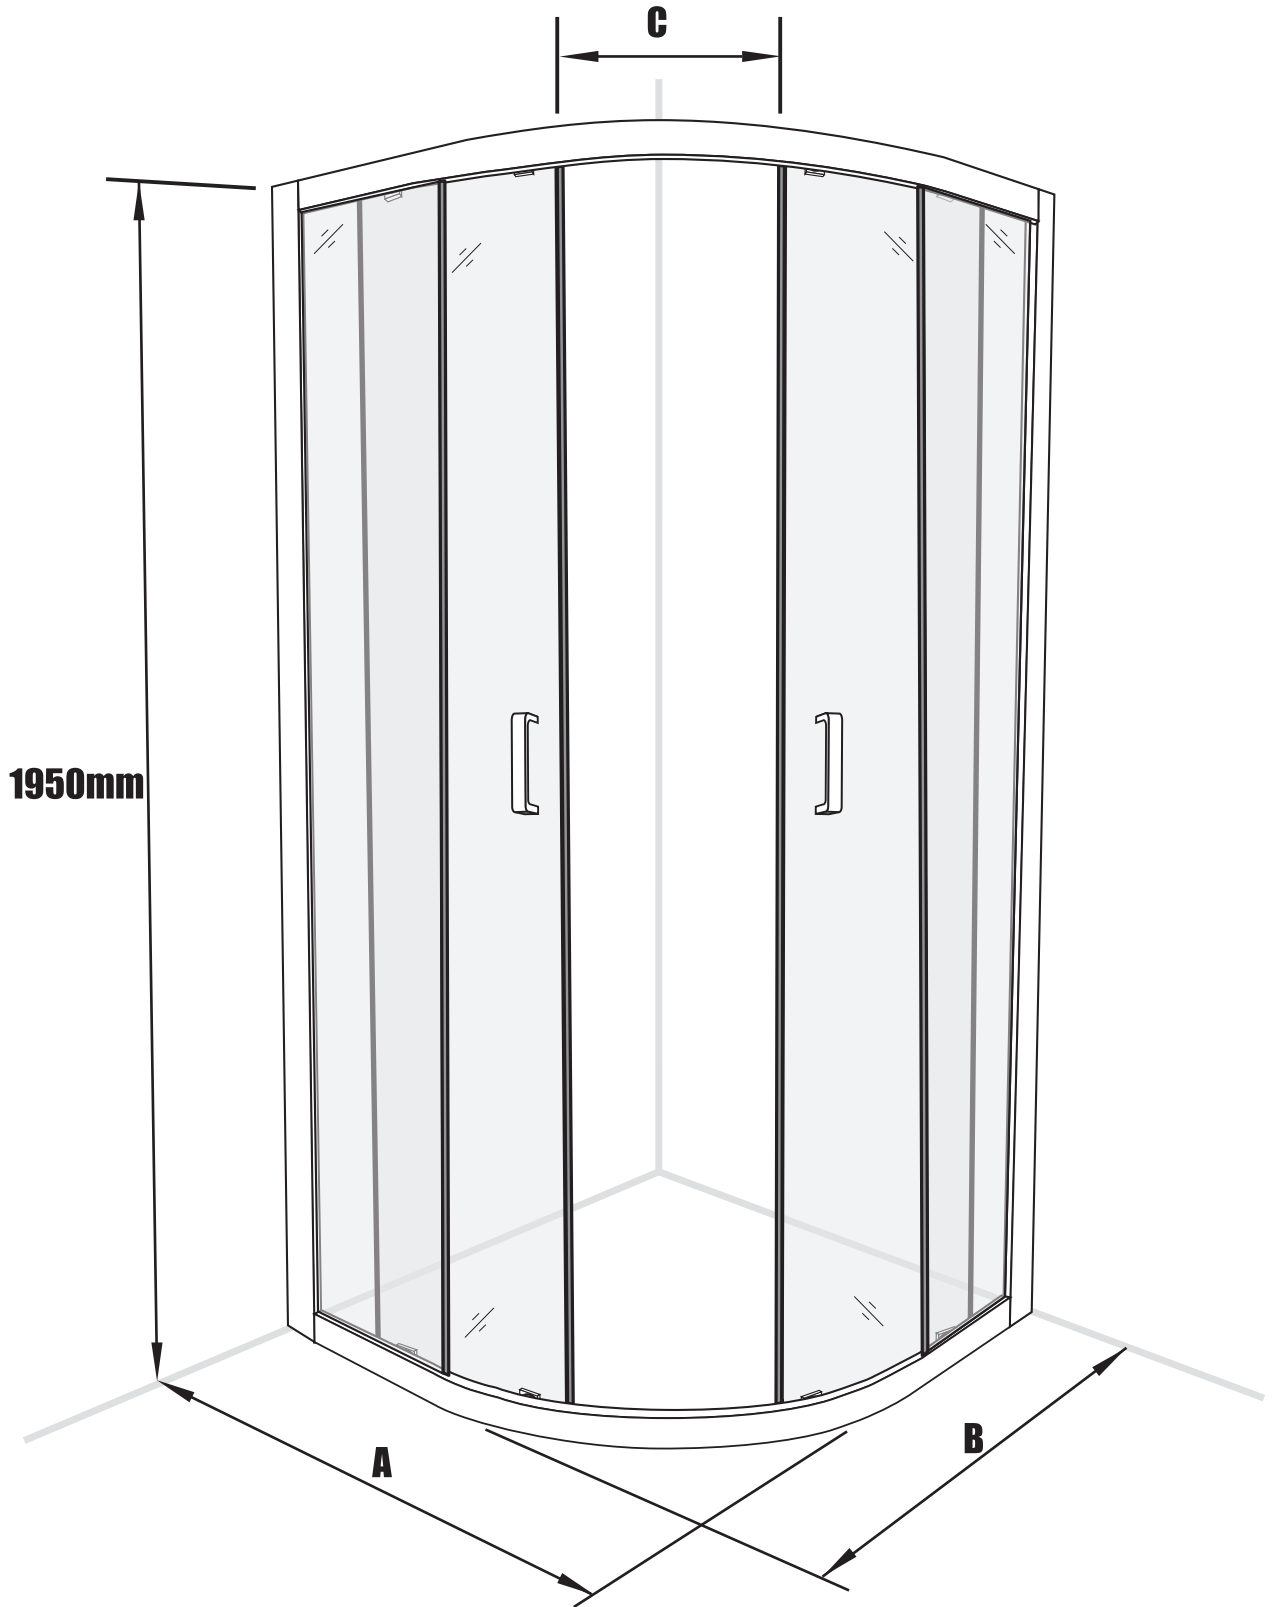













Model	A	B	C
90x90	900mm	900mm	545mm
80x80	800mm	800mm	385mm
70x90 (reversible)	700/900mm	900/700mm	385mm












Exploded View:

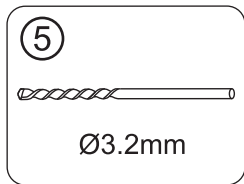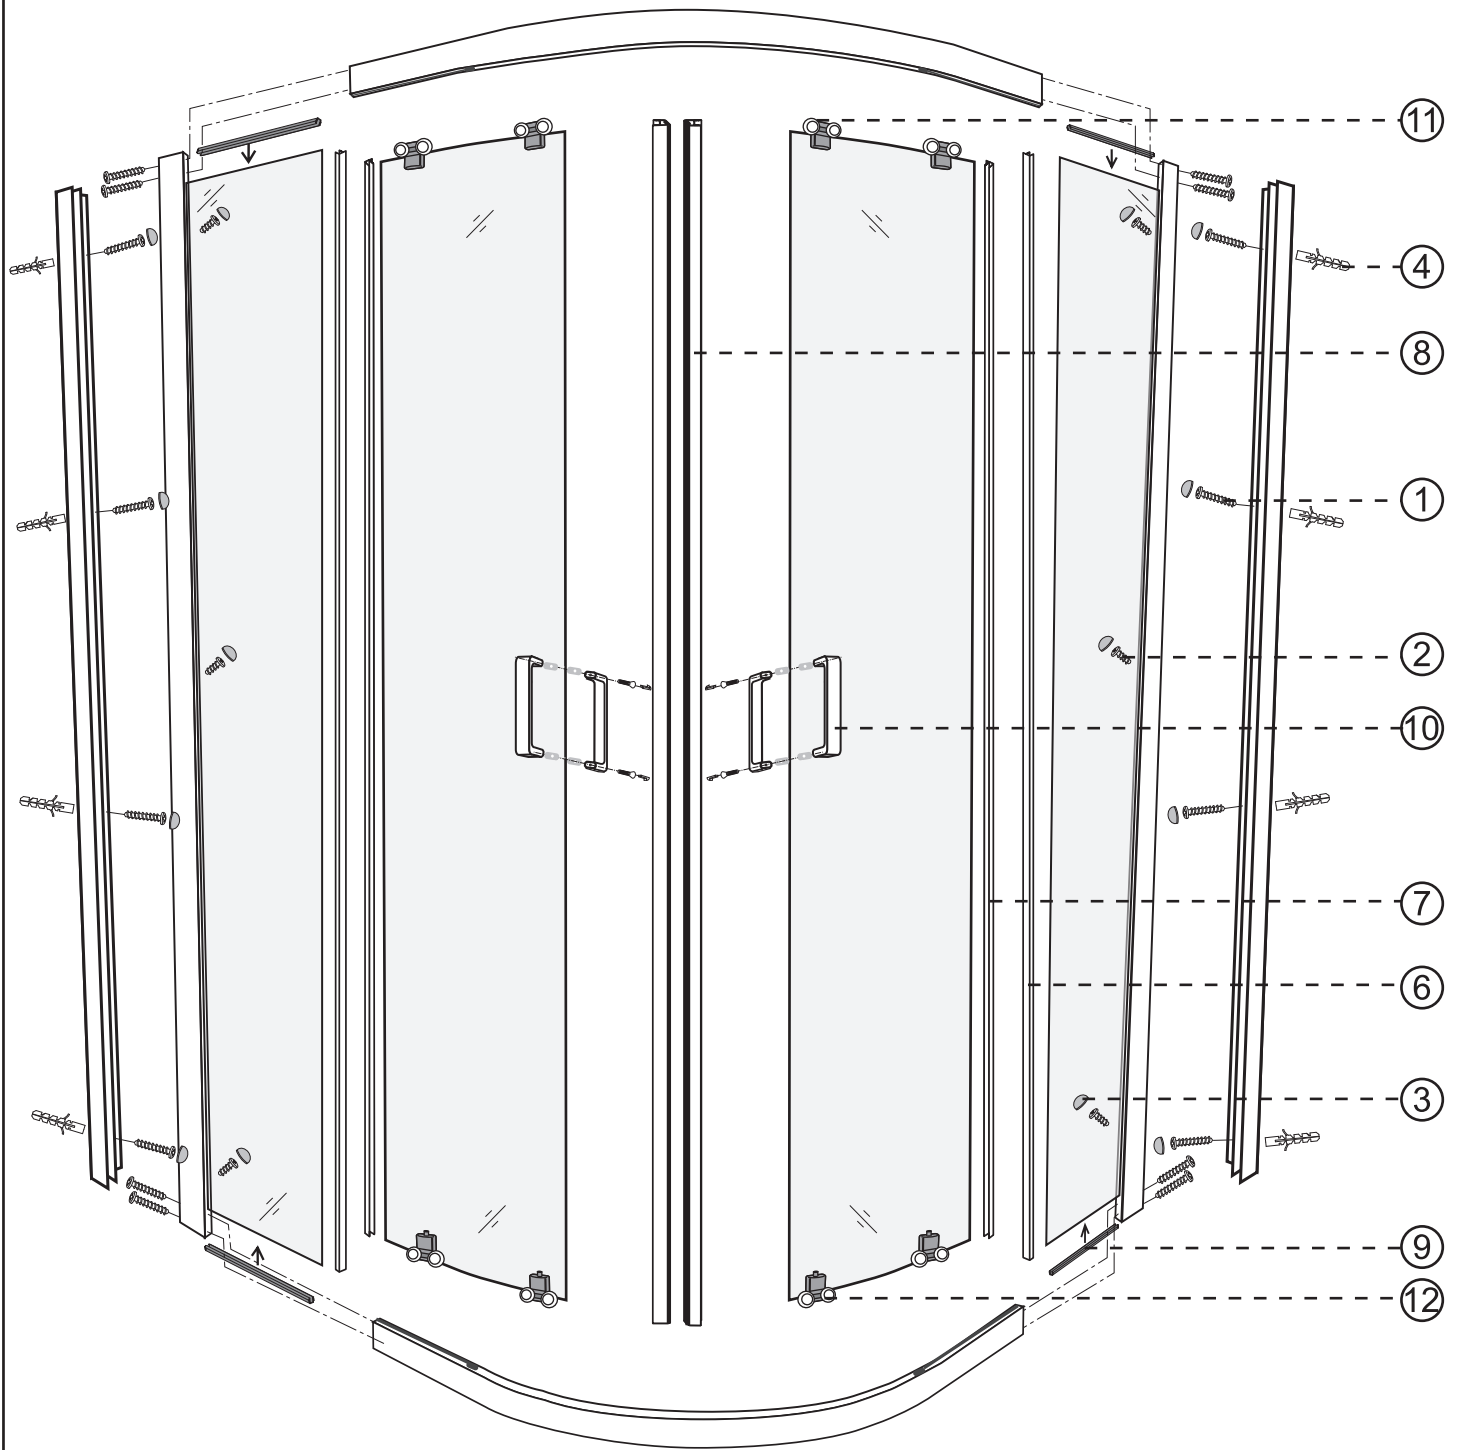

Exploded View:

Drawing Nr.	Art Nr.	Description	Unit
1	9150-A	ST4x35mm screw	pc
2		ST4x10mm screw	pc
3		Screw cover	pc
4		Plastic plugs	pc
5		3.2 drill bit	pc
6	9150-B	Gasket on side panel	pc
7		Gasket on door	pc
8		Magnetic gasket	set
9	9150-C	Gasket between side panel and profile	pc
10	9140-E	Handle set (145mm cc)	set
11	9150-D	Spring wheels (Up)	pc
12		Spring wheels (Bottom)	pc

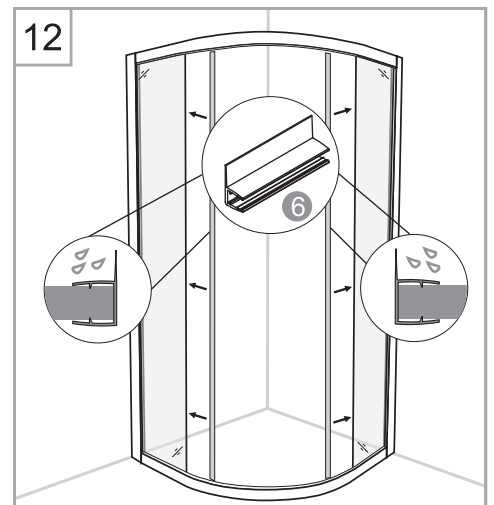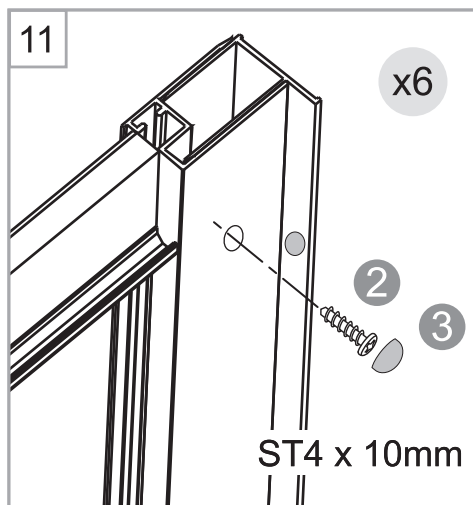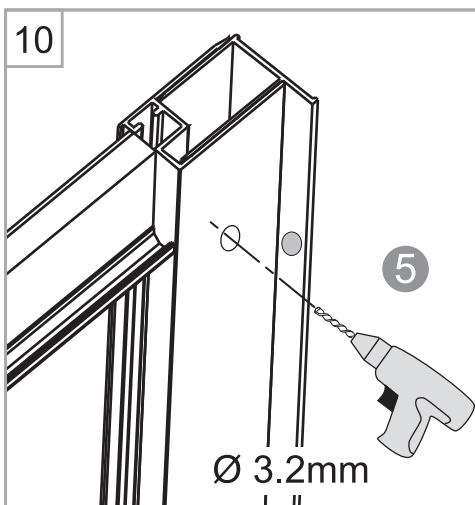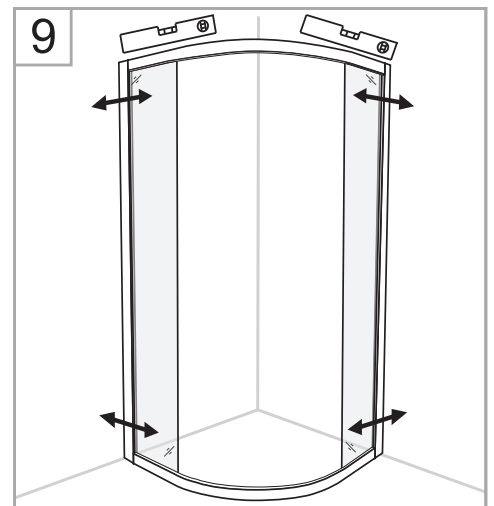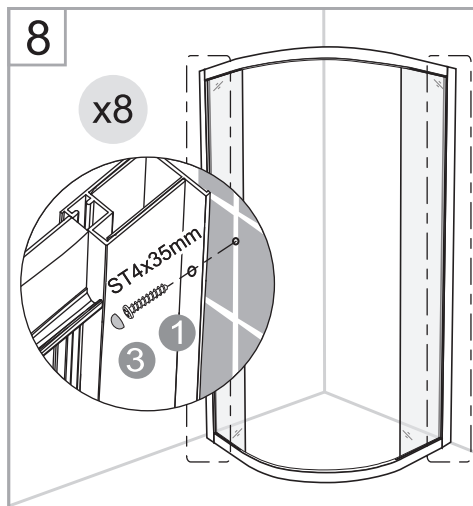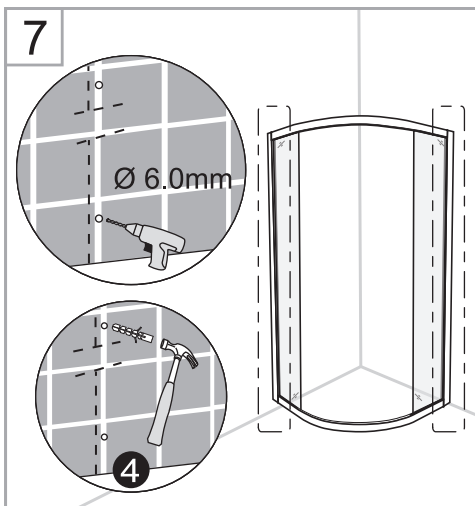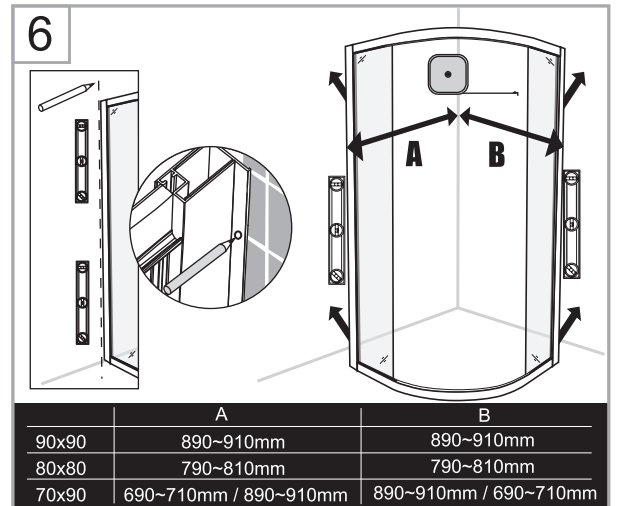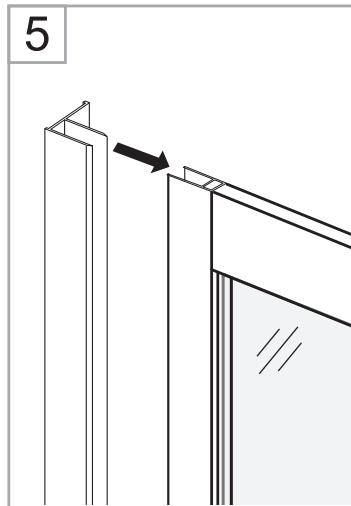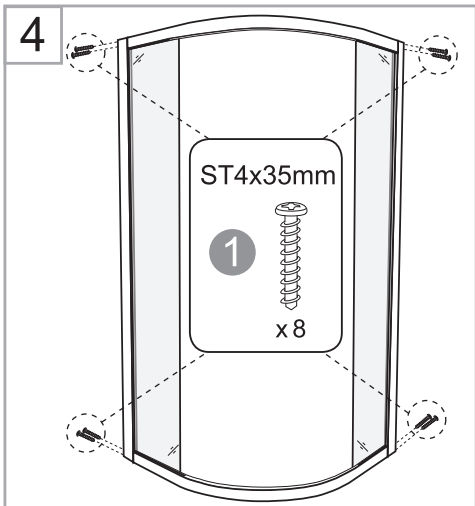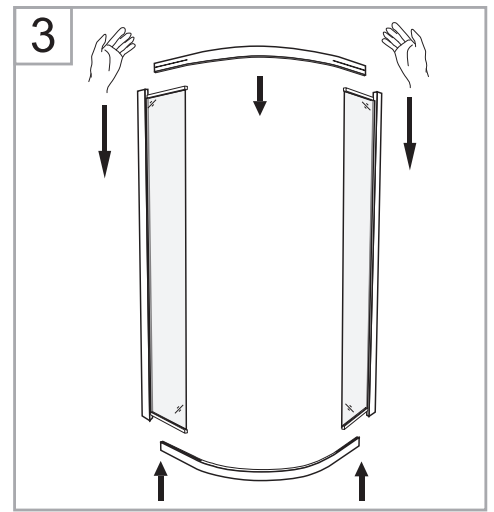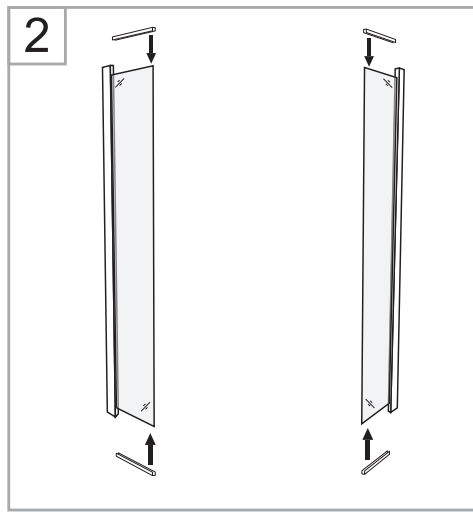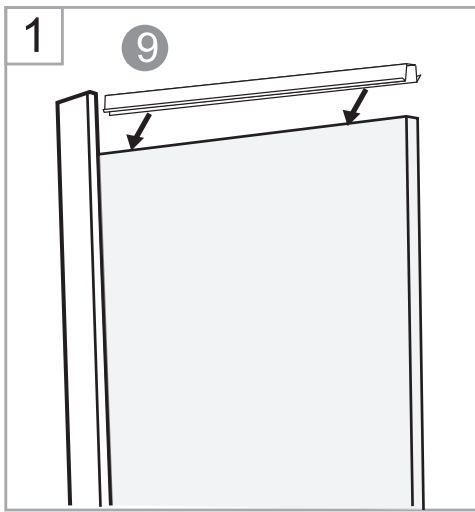

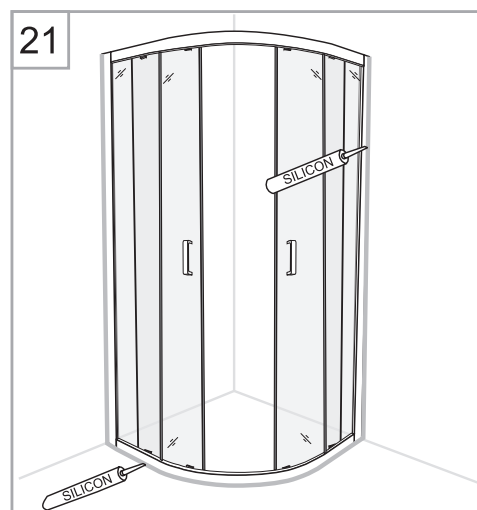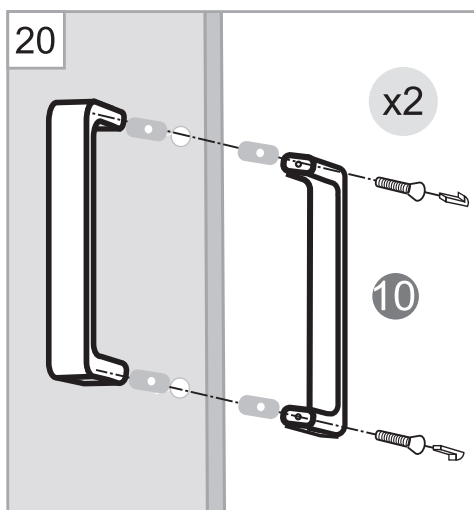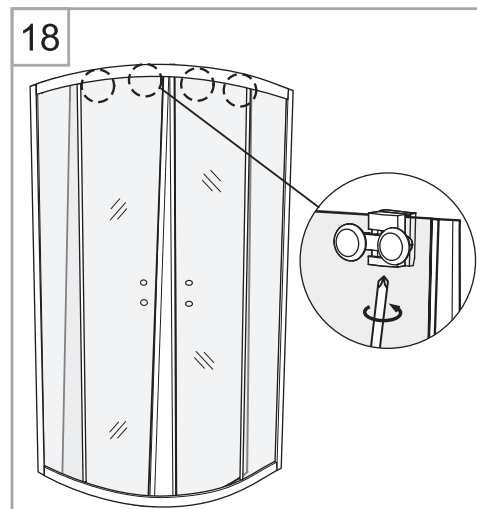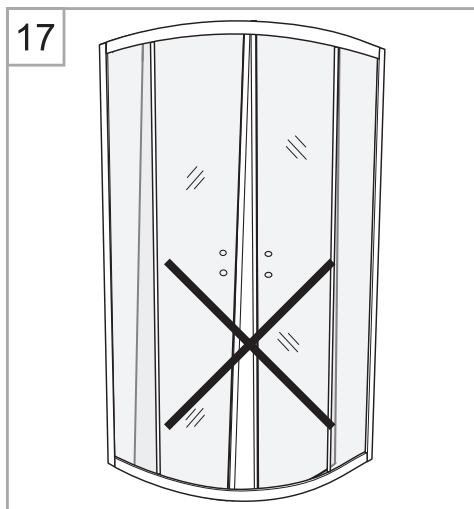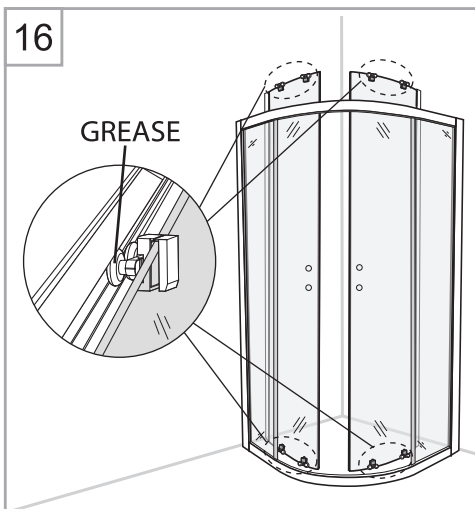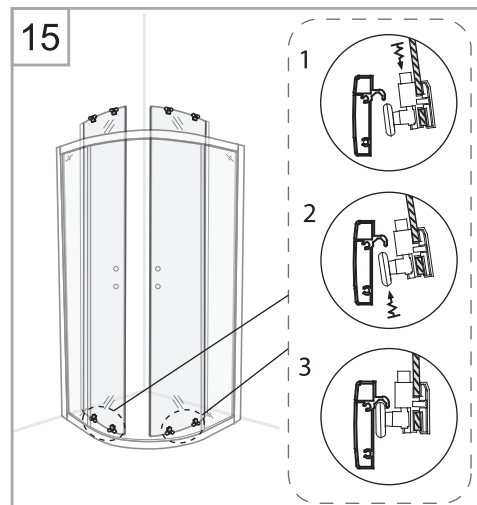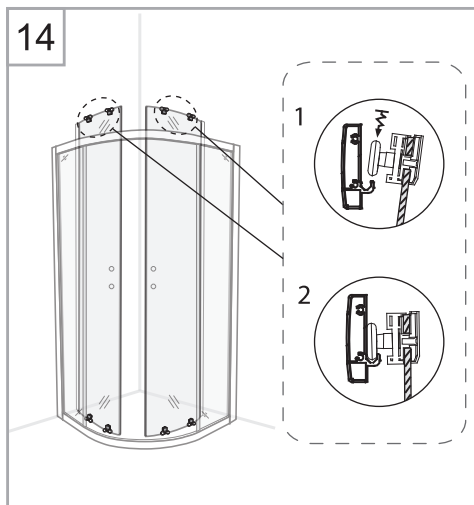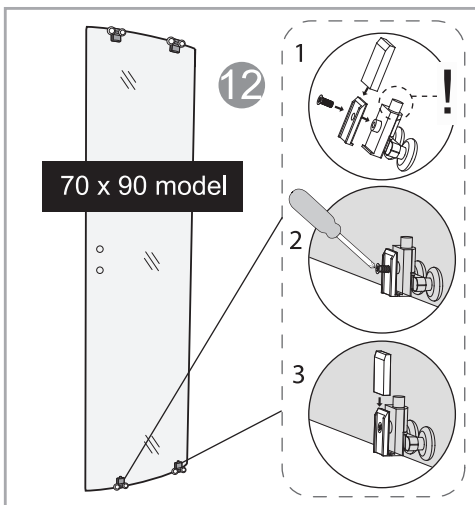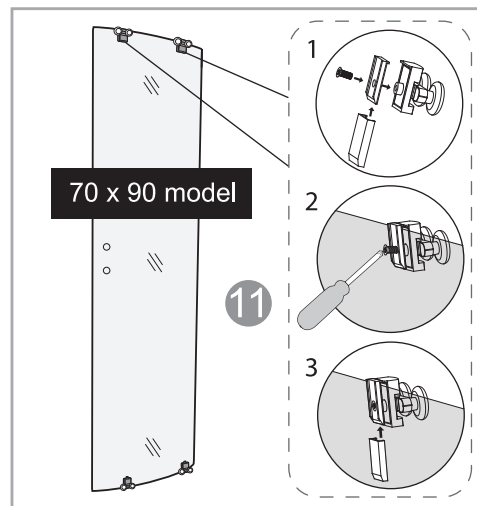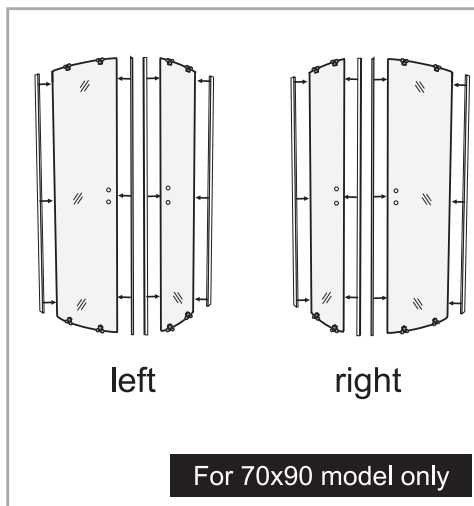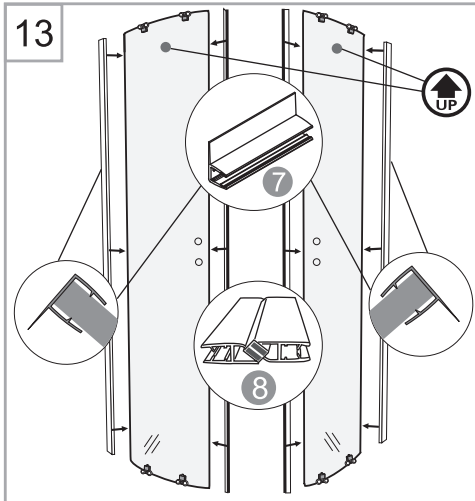



SNOW R

Noro Scandinavia

035 166430 **SE**
info@noro.se

020 7435740 **FI**
info@norokylpyhuone.fi

692 36170 **NO**
info@noro.se

Ver.006